

Defy DAF3376MBG

Defy DAF3376MBG Airfryer User Manual

Model: DAF3376MBG

INTRODUCTION

Thank you for choosing the Defy DAF3376MBG Airfryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Always place the airfryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Supervise children closely when the appliance is in use.
- Unplug the airfryer from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not operate the appliance with a damaged cord or plug, or after it malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Avoid touching hot surfaces. Use handles or knobs.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot steam is released through the air outlet openings during hot air frying. Keep your hands and face at a safe distance from the steam and from the air outlet openings.

PRODUCT OVERVIEW

The Defy DAF3376MBG Airfryer is designed for efficient and healthier cooking. Familiarize yourself with its main components:

1. Main Unit
2. Air Frying Basket (with handle)
3. Crisper Plate (removable, non-stick)
4. Temperature Control Dial
5. Timer Control Dial
6. Air Inlet
7. Air Outlet Vents



Figure 1: Front view of the Defy DAF3376MBG Airfryer, showing the main unit, handle, and control panel with temperature and timer dials.



Figure 2: Exploded view of the Defy DAF3376MBG Airfryer, illustrating the removable air frying basket and the crisper plate.

SETUP AND FIRST USE

Unpacking

1. Carefully remove the airfryer and all packaging materials from the box.
2. Remove any stickers or labels from the appliance.
3. Clean the air frying basket and crisper plate with hot water, a mild dishwashing liquid, and a non-abrasive sponge. Rinse thoroughly and dry.
4. Wipe the inside and outside of the main unit with a damp cloth.

Placement

- Place the airfryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm of clear space around the back and sides, and above the appliance, for adequate air circulation.
- Do not place the appliance near flammable materials or heat sources.

Initial Operation (Burn-off)

During the first few uses, a slight odor may be emitted. This is normal and will dissipate. To minimize this, you can run the airfryer empty for about 10-15 minutes at 180°C before cooking food.

OPERATING INSTRUCTIONS

Preparing for Cooking

1. Place the crisper plate inside the air frying basket.
2. Place the ingredients into the air frying basket. Do not overfill the basket to ensure even cooking.
3. Slide the air frying basket back into the main unit until it clicks securely into place.
4. Plug the power cord into a grounded wall outlet.

Setting Temperature and Time

1. Turn the **Temperature Control Dial** to your desired cooking temperature (up to 200°C).
2. Turn the **Timer Control Dial** to the required cooking time (up to 60 minutes). The airfryer will start heating immediately.
3. During cooking, the indicator light will illuminate.
4. For some recipes, it may be necessary to shake the ingredients halfway through the cooking time. To do this, pull the basket out by the handle, shake the contents, and then slide the basket back in. The airfryer will resume cooking.
5. When the set cooking time has elapsed, the timer will ring, and the airfryer will automatically shut off.

Removing Cooked Food

1. Carefully pull the air frying basket out of the appliance by the handle.
2. Place the basket on a heat-resistant surface.
3. Use tongs to remove the cooked food from the basket. Avoid tipping the basket directly, as excess oil may collect at the bottom.
4. Unplug the appliance from the wall outlet and allow it to cool down before cleaning.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Defy Airfryer.

Before Cleaning

- Always unplug the airfryer and allow it to cool down completely before cleaning.

Cleaning the Basket and Crisper Plate

- The air frying basket and crisper plate have a non-stick coating and are dishwasher-safe.
- Alternatively, wash them in hot water with a mild dishwashing liquid and a non-abrasive sponge.
- For stubborn food residue, soak the basket and plate in hot water for about 10 minutes before cleaning.

Cleaning the Main Unit

- Wipe the exterior of the airfryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the inside of the appliance with a damp cloth.
- Never immerse the main unit in water or any other liquid.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

| Problem | Possible Cause | Solution |
|---------------------------------------|--------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The airfryer does not turn on. | The appliance is not plugged in. The timer is not set. | Ensure the power cord is securely plugged into a grounded outlet. Turn the timer dial to the desired cooking time. |
| Food is not cooked evenly. | Too much food in the basket. Temperature or time settings are incorrect. | Do not overfill the basket; cook in smaller batches if necessary. Adjust temperature and time according to the food type. Shake the basket halfway through cooking. |
| White smoke comes from the appliance. | Fat residue from previous use. Excess oil from fatty ingredients. | Clean the basket and crisper plate thoroughly after each use. Remove excess oil from food before air frying. |
| Unpleasant smell during first use. | New appliance burn-off. | This is normal. Run the airfryer empty for 10-15 minutes at 180°C before first use. Ensure good ventilation. |

SPECIFICATIONS

| | |
|------------------------|-----------------------------|
| Model | DAF3376MBG |
| Brand | Defy |
| Capacity | 7.6 Liters |
| Voltage | 220 Volts |
| Output Wattage | 1750 Watts |
| Maximum Cooking Time | 60 minutes |
| Material | Plastic |
| Dimensions (D x W x H) | 37.4 cm x 43.8 cm x 38.5 cm |

| | |
|-------------------------|-----------------------------------------|
| Item Weight | 6.84 kg |
| Special Features | Timer, Auto Shutoff |
| Control Method | Rotary Dials (for Temperature and Time) |

 
WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your Defy DAF3376MBG Airfryer. Keep your proof of purchase for any warranty claims.

Should you require technical assistance, spare parts, or have any questions regarding your appliance, please contact Defy customer support. Contact details can typically be found on the Defy official website or in your product documentation.


You can visit the official Defy store for more information: [Defy Appliances Store](#)

Related Documents - DAF3376MBG

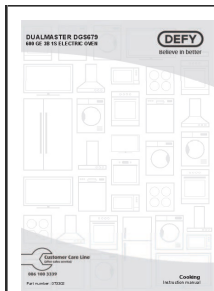


[Defy DUALMASTER DGS679 Electric Oven: Instruction Manual](#)

 Comprehensive instruction manual for the Defy DUALMASTER DGS679 600 GE 3B 1S Electric Oven, covering safe operation, installation, maintenance, and troubleshooting.

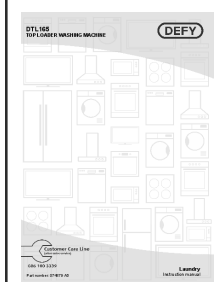



 
[Defy DTL165 Top Loader Washing Machine User Manual](#)

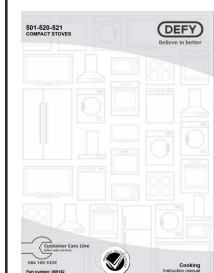Comprehensive user manual for the Defy DTL165 top loader washing machine. Includes installation, operation, maintenance, troubleshooting, safety instructions, and technical specifications.



[Defy Compact Stoves: Cooking Instruction Manual](#)

Instruction manual for Defy Compact Stoves (Model 501-520-521), detailing installation, operation, safety, cleaning, and warranty. Learn to use your Defy stove effectively.

| | |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Defy Slimline 600 MSE & 600 MSU Multifunction Built-in Oven Owner's Manual</p> <p>Comprehensive owner's manual for Defy Slimline 600 MSE and 600 MSU multifunction built-in ovens. Covers installation, operation, safety, maintenance, and warranty.</p> |
|  | <p>DEFY DTD230-DTD258-DTD259 Tumble Dryer: User Instruction Manual</p> <p>Comprehensive user manual for the DEFY DTD230, DTD258, and DTD259 Tumble Dryer. Learn about installation, operation, safety, maintenance, and troubleshooting for your Defy laundry appliance.</p> |
|  | <p>Defy Gemini Petit Chef Plus Multifunction Oven DBO474/DBO475 Instruction Manual</p> <p>Comprehensive instruction manual for the Defy Gemini Petit Chef Plus Multifunction Oven (models DBO474-Black, DBO475-Mirror). Covers installation, operation, safety, maintenance, and troubleshooting.</p> |