

[manuals.plus](#) /› [Xiaomi](#) /› **Xiaomi Toaster BHR8811EU Instruction Manual**

Xiaomi BHR8811EU

Xiaomi Toaster BHR8811EU Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Xiaomi Toaster BHR8811EU. Please read these instructions carefully before first use and retain them for future reference. This 2-slice toaster features 6 browning settings, a defrost function, and a removable crumb tray for easy cleaning.

2. SAFETY INSTRUCTIONS

- Always ensure the toaster is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug the toaster from the outlet when not in use and before cleaning. Allow it to cool completely before handling or cleaning.
- To protect against electrical hazards, do not immerse the cord, plug, or toaster in water or other liquids.
- Do not insert oversized foods, metal foil packages, or utensils into the toaster as this may create a fire or electric shock hazard.
- Do not operate the toaster if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Never leave the toaster unattended while in use.
- Do not use abrasive cleaners or sharp objects to clean the toaster.
- This appliance is for household use only.

3. PRODUCT COMPONENTS



Image 1: Front view of the Xiaomi Toaster BHR8811EU. This image displays the control panel with the browning control knob, defrost button, and cancel button, along with the bread slots.



Image 2: Top view of the Xiaomi Toaster BHR8811EU. This image highlights the two wide bread slots designed to accommodate various bread types.



Image 3: Side view of the Xiaomi Toaster BHR8811EU. This image shows the side of the toaster, featuring the pull-out handle for the removable crumb tray at the bottom.



Image 4: Rear view of the Xiaomi Toaster BHR8811EU. This image displays the back of the appliance, featuring the Xiaomi brand logo.

- **Bread Slots:** Two wide slots for bread slices.
- **Toasting Lever:** Lowers bread into the slots and initiates the toasting cycle.
- **Browning Control Knob:** Adjusts the desired level of browning from 1 (lightest) to 6 (darkest).
- **Defrost Button:** Activates the defrost function for frozen bread.
- **Cancel Button:** Stops the toasting cycle at any time.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.

4. SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.
2. **Placement:** Place the toaster on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the toaster for ventilation.
3. **First Use:** Before toasting bread for the first time, operate the toaster without bread for a few cycles at the highest browning setting. This will burn off any manufacturing residues and eliminate initial odors. A slight smell or smoke is normal during this process. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

- Connect Power:** Plug the power cord into a suitable 220-240V, 60Hz electrical outlet.
- Insert Bread:** Place one or two slices of bread into the bread slots. The toaster features automatic bread centering for even toasting.
- Select Browning Level:** Turn the browning control knob to your desired setting, from 1 (lightest) to 6 (darkest).
- Start Toasting:** Press the toasting lever down until it locks into place. The indicator light will illuminate, and the toasting cycle will begin.
- Defrost Function (for frozen bread):** If toasting frozen bread, insert the bread, select your desired browning level, press the toasting lever down, and then press the **DEFROST** button. The defrost indicator light will illuminate.
- Cancel Function:** To stop the toasting cycle at any time, press the **CANCEL** button. The bread will automatically pop up.
- Completion:** Once the selected browning cycle is complete, the bread will automatically pop up, and the toaster will switch off.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

- Always Unplug:** Before cleaning, always unplug the toaster from the power outlet and allow it to cool completely.
- Clean Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Dispose of accumulated crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting it. Ensure the crumb tray is fully inserted before using the toaster.
- Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the surface.
- Interior Cleaning:** Do not attempt to clean the inside of the toaster with any tools or objects. If bread becomes jammed, unplug the toaster and carefully remove the bread after it has cooled.

7. TROUBLESHOOTING

- Toaster does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the toasting lever is fully pressed down and locked.
- Bread is unevenly toasted:** Ensure bread slices are not too thick or irregularly shaped. The automatic centering mechanism works best with standard bread slices.
- Smoke or burning smell:** This can occur if crumbs accumulate in the toaster or if food is jammed. Immediately press the **CANCEL** button, unplug the toaster, and allow it to cool. Clean the crumb tray and remove any jammed food.
- Bread does not pop up:** Press the **CANCEL** button. If the bread still does not pop up, unplug the toaster and carefully remove the bread once it has cooled.

8. SPECIFICATIONS

Brand	Xiaomi
-------	--------

Model Number	BHR8811EU
Color	Black
Power / Wattage	930 Watts
Voltage	220-240 Volts
Frequency	60 Hz
Material	Metal, Aluminum
Number of Slots	2
Special Features	Defrost function, 6 browning settings, Removable crumb tray, Automatic bread centering
Product Dimensions (D x W x H)	15 cm x 28 cm x 26 cm (approx.)
Item Weight	1.7 Kilograms

9. WARRANTY AND SUPPORT

Your Xiaomi Toaster BHR8811EU is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage details. For technical support, service, or inquiries, please visit the official Xiaomi website or contact their customer service department in your region. Keep your proof of purchase for warranty claims.