

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Barbie](#) /
- › [Barbie Dream Camper Playset \(Model HRJ78\) - Instruction Manual](#)

### Barbie HRJ78

# Barbie Dream Camper Playset (Model HRJ78) - Instruction Manual

Your guide to endless outdoor adventures with Barbie!

## 1. INTRODUCTION

Welcome to the world of the Barbie Dream Camper Playset! This comprehensive instruction manual will guide you through the setup, operation, and maintenance of your new playset, ensuring hours of imaginative play. The Barbie Dream Camper features seven distinct play areas and over 60 accessories, designed to inspire creative storytelling in an outdoor camping setting.

### Safety Information

- **WARNING: CHOKING HAZARD - Small Parts.** Not for children under 3 years.
- Adult supervision is recommended during assembly and initial play.
- Keep all small accessories away from young children to prevent choking.
- Dispose of all packaging materials responsibly.



Figure 1.1: The Barbie Dream Camper Playset in its fully unfolded state, showcasing all seven play areas and numerous accessories.

## 2. WHAT'S INCLUDED

Your Barbie Dream Camper Playset comes with the following components:

- Camper vehicle (transforms into playset)
- 1 BBQ grill station
- 3 Color-change food pieces
- 1 Fishing pond
- 1 Swing chair
- 1 Pet puppy with pet bed and bowl
- 1 Foldable chair
- 1 Firepit and 2 s'mores sticks
- 1 Stool
- 3 Containers of dough
- 1 Sponge tool
- 1 Blanket
- 1 Fishing rod
- 1 Guitar
- 1 Lantern
- 1 Camera
- 1 Pair of binoculars
- 2 Water bottles
- 20 Pieces of dishware
- 6 Pieces of cookware
- 12 Additional accessories





Figure 3.1: The Barbie Dream Camper in its vehicle mode before transformation.

### 3.3 Arranging Accessories

Once the camper is unfolded, place the various accessories in their designated areas or wherever your imagination takes you:

- **Roof Tent:** Position the collapsible tent on the roof for sleeping.
- **Living Room:** Arrange the foldable chair and other small items.
- **Dining Area:** Set up the picnic table and bench.
- **Bathroom:** Utilize the designated space for bathroom accessories.
- **Outdoor Area:** Place the fishing pond, swing chair, firepit, and BBQ grill.



Figure 3.2: Dolls enjoying the pop-up roof tent area.

## 4. OPERATING INSTRUCTIONS

### 4.1 Driving the Camper

In its compact vehicle mode, the Barbie Dream Camper features rolling wheels, allowing it to be pushed around for travel to new adventure locations.

### 4.2 Utilizing Play Areas

The playset offers seven distinct play areas:

- **Pop-Up Roof Tent:** Provides a sleeping area for Barbie dolls.
- **Living Room:** A cozy space for relaxation.
- **Dining Area:** Features a picnic table for mealtime.
- **Bathroom:** Equipped for doll hygiene routines.
- **Fishing Pond:** Use the fishing rod to 'catch' fish.
- **Swing Chair:** A relaxing spot for dolls to enjoy the outdoors.
- **BBQ Grill Station:** Prepare meals with the included dough.





Figure 4.1: Dolls engaging in various activities within the unfolded camper playset.

### 4.3 Color-Change BBQ Feature

Use the included dough to mold burgers. Place the dough burgers on the BBQ grill. Apply icy cold or warm water using the sponge tool to the color-change food pieces to simulate cooking and transformation. This feature allows for repeated play.



Figure 4.2: Detailed view of the BBQ grill and color-change food pieces.

### 4.4 Product Demonstration Video

Your browser does not support the video tag.

Video 4.1: An official demonstration of the Barbie Dream Camper Playset by Mattel, showcasing its transformation and various play features.

## 5. MAINTENANCE

- **Cleaning:** Wipe down the playset and accessories with a damp cloth as needed. Avoid harsh chemicals.
- **Storage:** When not in use, fold the camper back into its vehicle mode to save space and keep all accessories organized. Store in a cool, dry place away from direct sunlight.
- **Dough Care:** Keep dough sealed in its containers when not in use to prevent drying out.

## 6. TROUBLESHOOTING

If you encounter any issues with your Barbie Dream Camper Playset, please consider the following:

- **Camper not unfolding/folding correctly:** Ensure all internal accessories are properly stored and not obstructing the mechanism. Apply gentle, even pressure.
- **Color-change feature not working:** Verify that the water used is either icy cold or sufficiently warm for the desired effect.
- **Missing pieces:** Refer to the 'What's Included' section. If a piece is missing upon unboxing, contact customer support.



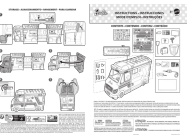

## 7. SPECIFICATIONS

Product Name	Barbie Dream Camper Playset
Brand	Barbie
Model Number	HRJ78
Product Dimensions	20.63 x 34.65 x 14.69 inches
Item Weight	7.72 pounds
Recommended Age	3 years and up
Manufacturer	Mattel

## 8. WARRANTY AND SUPPORT

For warranty information or customer support regarding your Barbie Dream Camper Playset, please refer to the contact details provided on the product packaging or visit the official Mattel website. Keep your proof of purchase for any warranty claims.

### Related Documents - HRJ78

	<p><a href="#">Barbie Party Unboxed Playset: Instructions, Safety, and Usage Guide</a></p> <p>Comprehensive guide for the Barbie Party Unboxed playset by Mattel. Includes detailed instructions on using the dough and color-change features, along with essential safety warnings for children.</p>
	<p><a href="#">Barbie 3-Story Townhouse Dollhouse with Elevator and Accessories (DLY32) - Assembly Instructions</a></p> <p>Detailed assembly instructions and product overview for the Barbie 3-Story Townhouse Dollhouse (Model DLY32) by Mattel. Learn how to build and store this playset, including part identification and safety warnings.</p>
	<p><a href="#">Barbie HKT79 DreamCamper Playset Assembly and User Guide</a></p> <p>Discover how to assemble and use the Barbie HKT79 DreamCamper playset. This guide provides detailed instructions for transforming the vehicle into a multi-room playset, battery installation, and important safety information for the popular Barbie toy.</p>
	<p><a href="#">Kristi Yamaguchi Barbie Podcast Activity Guide: Dreaming on Ice</a></p> <p>An activity guide from the Barbie Dream Gap Project featuring Kristi Yamaguchi, focusing on learning from failure, building confidence, and resilience through engaging exercises and discussions.</p>



### [Barbie HCK77 Dollhouse Playset: Assembly and Play Guide](#)

Comprehensive assembly instructions and play feature overview for the Barbie HCK77 dollhouse playset by Mattel. Includes safety warnings and care tips.



HMD Barbie Phone  
Gebruiksaanwijzing

### [HMD Barbie Phone User Manual](#)

User manual for the HMD Barbie Phone (model TA-1681), providing instructions on setup, usage, personalization, camera, Bluetooth, clock, agenda, calculator, and safety information.