

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Panda](#) /
- › [Panda 1.34 Cu.ft Portable Washing Machine User Manual](#)

### Panda Pan6320W\_01

# Panda 1.34 Cu.ft Portable Washing Machine User Manual

Model: Pan6320W\_01

## INTRODUCTION

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Panda 1.34 Cu.ft Portable Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference.





*Figure 1: Panda 1.34 Cu.ft Portable Washing Machine. This compact top-load washer is designed for small living spaces, offering full automatic functionality.*

## SAFETY INFORMATION

---

Always adhere to basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is connected to a 110-volt power supply.
- Do not operate the machine with a damaged cord or plug.
- Keep children away from the appliance during operation. The machine includes a child lock feature for added safety.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Always unplug the machine before cleaning or performing any maintenance.
- Ensure the machine is placed on a stable, level surface to prevent vibration and noise. Adjustable leveling legs are provided.

## PRODUCT OVERVIEW

---

### Key Features

- **Multi-functional:** Offers Soak, Wash, Rinse, and Spin cycles.
- **Compact Design:** Dimensions of 18.5"D x 19.5"W x 34.05"H, ideal for small living spaces.
- **Large Capacity:** 1.34 Cu.Ft. capacity, capable of holding up to 10 Lbs of clothes.
- **Durable Tub:** Features a chipping and rust-resistant stainless steel inner tub.
- **Transparent Lid:** Amber yellow transparent and foldable lid allows monitoring of washing progress.
- **Multiple Programs:** 10 washing programs including Normal, Standard, Quick Wash, Heavy Duty, Soak & Wash, Wash,

Wash & Rinse, Rinse & Spin, Spin, and Air Dry.

- **Water Levels:** 5 adjustable water levels (1/22L, 2/24L, 3/28L, 4/30L, 5/33L) for water efficiency.
- **User-Friendly Controls:** Easy-operated control panel.
- **Safety Features:** Child lock protection and auto unbalance detection technology.
- **Convenience:** Delay start function.

## Components

- Washing Machine Unit
- Drain Hose
- Fill Hose with Quick Adapter
- Power Cord

## EASY CONNECTION TO A FAUCET



Figure 2: Overview of the Panda Portable Washing Machine's user-friendly design and key components.

## Unpacking and Placement

- Carefully remove all packaging materials.
- Place the washing machine on a firm, level surface. Use the adjustable leveling legs at the bottom to ensure stability and reduce vibration during operation.
- The machine features two built-in casters at the back bottom for easy movement. To move, tilt the machine down to a 45-degree angle and drag or push it.



Figure 3: Moving the washing machine using its side handles and rear wheels.

## Water Connection

1. Connect the provided water inlet hose to the quick adapter.
2. Attach the quick adapter to your standard faucet. Ensure a secure connection to prevent leaks.
3. Connect the other end of the inlet hose to the water inlet port on the washing machine. Note: This machine has only one water inlet and is designed for cold water connection. Adjust water temperature at your faucet if warm water is desired.
4. Hang the drain hose into a sink or wash basin. Ensure it is securely positioned to prevent it from falling out during drainage.




Figure 4: Water inlet hose with quick adapter.



*Figure 5: Connecting the inlet hose to the machine.*



*Figure 6: Connecting the quick adapter to a standard faucet.*

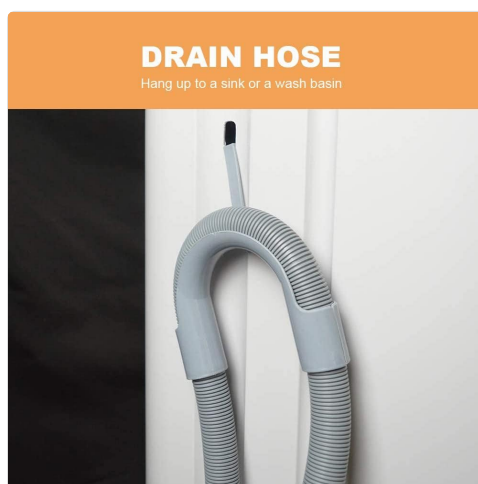

*Figure 7: Proper placement of the drain hose into a sink or basin.*

## OPERATING INSTRUCTIONS

---

The Panda Portable Washing Machine is fully automatic once the program is selected and the water supply is turned on.

### Control Panel Overview



# EASY-OPERATED CONTROL PANEL

10 Programs, 5 Water Levels



Figure 8: Easy-operated control panel with 10 programs and 5 water levels.

## Washing Programs

Select the appropriate program based on your laundry needs:

- **Normal:** For everyday laundry.
- **Standard:** General washing cycle.
- **Quick Wash:** For lightly soiled items or small loads requiring a faster cycle.
- **Heavy Duty:** For heavily soiled or bulky items.
- **Soak & Wash:** Pre-soak cycle followed by a wash.
- **Wash:** Wash cycle only.
- **Wash & Rinse:** Wash cycle followed by a rinse.
- **Rinse & Spin:** Rinse cycle followed by a spin.
- **Spin:** Spin cycle only to remove excess water.
- **Air Dry:** High-speed spinning to help dry clothes and clean the tub.

## Water Levels and Load Size

Choose from 5 water levels to optimize water usage based on your load size:

- Level 1: 22 Liters
- Level 2: 24 Liters
- Level 3: 28 Liters
- Level 4: 30 Liters
- Level 5: 33 Liters

You can also adjust the load size setting (Small, Medium, Large) on the control panel, which will automatically select an appropriate water level.

## Additional Functions

- **Child Lock:** Activates to prevent accidental changes to settings during operation. Refer to the control panel for activation instructions (typically press and hold a button for 3 seconds).
- **Delay Start:** Allows you to set a delayed start time for your wash cycle.
- **Auto Unbalance Detection:** The machine automatically detects and attempts to correct unbalanced loads to ensure stable operation.



*Figure 9: The transparent lid allows you to monitor the washing process.*

## STAINLESS STEEL TUB



Figure 10: The durable stainless steel tub.

## MAINTENANCE

### Cleaning the Tub

Regularly use the "Tub Clean" program to maintain the cleanliness and hygiene of the washing machine's tub. This helps prevent odor and residue buildup.



Figure 11: The Air Dry function contributes to tub cleanliness.

### General Care

- Wipe down the exterior of the machine with a soft, damp cloth.
- Clean the lint filter regularly to ensure efficient operation.
- After each use, leave the lid slightly ajar to allow the tub to air dry and prevent mildew.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------



Problem	Possible Cause	Solution
Machine does not start.	Power cord not plugged in; lid not closed properly; program not selected.	Ensure power cord is securely plugged in. Close the lid completely. Select a washing program and press Start/Pause.
Excessive vibration or noise.	Machine is not level; load is unbalanced.	Adjust leveling legs to ensure the machine is stable. Redistribute laundry evenly inside the tub. The auto unbalance detection system will attempt to correct this.
Water not draining completely.	Drain hose is kinked or blocked; drain hose not positioned correctly.	Check the drain hose for kinks or obstructions. Ensure the drain hose is securely placed in the sink/basin and not submerged in water. Select the 'Spin' program to drain remaining water.
Clothes are too damp after spin cycle.	Load is too heavy or unbalanced; insufficient spin time.	Reduce load size or redistribute clothes. Select the 'Spin' or 'Air Dry' program for an additional spin cycle.

## Specifications

Attribute	Detail
Brand	Panda
Model Name	Pan6320W_01
Capacity	1.34 Cubic Feet (10 LBS Load Volume)
Product Dimensions (D x W x H)	18.5" x 19.5" x 34.05"
Item Weight	60 Pounds
Voltage	110 Volts
Access Location	Top Load
Special Features	Adjustable Leveling Legs, Child Lock, Delay Start
Included Components	Drain Hose, Fill Hose, Power Cord
Manufacturer	Panda
Date First Available	October 29, 2024

## Warranty and Support

### Warranty Information

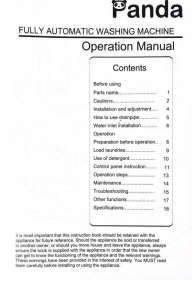
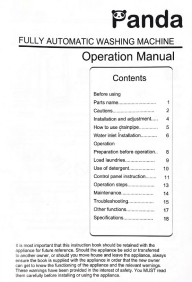

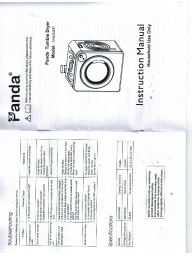

This Panda Portable Washing Machine comes with a **1 Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims.

### Customer Support

For any questions, technical assistance, or warranty service, please contact Panda customer support. Refer to the product packaging or the official Panda website for the most current contact information.

You can also visit the [Panda Store on Amazon](#) for more information and support resources.

## Related Documents - Pan6320W\_01

	<p><a href="#">Panda FULLY AUTOMATIC WASHING MACHINE Operation Manual</a></p> <p>This operation manual provides comprehensive instructions for the Panda FULLY AUTOMATIC WASHING MACHINE. It covers installation, parts identification, safety precautions, operation steps, maintenance, troubleshooting, error codes, and technical specifications. Essential reading for safe and efficient use of the appliance.</p>
	<p><a href="#">Panda PAN356HB Fully Automatic Washing Machine Operation Manual</a></p> <p>This operation manual provides comprehensive instructions for the Panda PAN356HB Fully Automatic Washing Machine, covering installation, operation, maintenance, troubleshooting, and specifications. Learn how to safely and effectively use your Panda washing machine.</p>
	<p><a href="#">Panda 1.6 cu. ft. Portable Washing Machine User Manual</a></p> <p>This user manual provides essential information for the Panda 1.6 cu. ft. portable washing machine, Model PAN50SWF2. It guides users through safe installation, efficient operation, routine maintenance, and troubleshooting steps to ensure optimal performance and longevity of the appliance. Discover how to get the most out of your compact washing machine with clear instructions and helpful tips.</p>
	<p><a href="#">Panda PAN202MT Tumble Dryer: User Manual and Safety Guide</a></p> <p>Comprehensive user manual for the Panda PAN202MT compact electric tumble dryer, covering operation, safety instructions, maintenance, and troubleshooting.</p>
	<p><a href="#">Panda PAN760SF Clothes Dryer Instruction Manual</a></p> <p>Comprehensive instruction manual for the Panda PAN760SF clothes dryer, covering installation, operation, safety, maintenance, troubleshooting, and warranty information.</p>

