

Manuals.plus /

> Fockety /

> Cordless Doorbell, Battery Operated Doorbell Receiver Kit with Plug in Receiver, 262ft Range 38 Ringtones Sensitive Cordless Door Bell for Home School Apartment Office

Fockety Focketyfwvet1p6yc

Cordless Doorbell Instruction Manual

Brand: Fockety

Model: Focketyfwvet1p6yc

PRODUCT OVERVIEW

The Fockety Cordless Doorbell system provides a convenient and reliable solution for home, school, apartment, or office use. This kit includes a battery-operated doorbell transmitter and a plug-in receiver, designed for ease of installation and versatile application.

- **Wide Coverage:** Operates effectively up to 262ft (80m) in open areas, ensuring timely notifications.
- **Customizable Melodies:** Features 38 distinct ringtones and 4 adjustable volume levels, ranging from 20db to 110db, including a silent mode.
- **Simple Installation:** Can be set up quickly using either adhesive stickers or screws, offering flexible placement options.
- **Versatile Application:** Suitable for various environments beyond residential homes, such as schools and offices.
- **Modern Design:** Combines a sleek appearance with practical functionality, including a glowing halo on the main doorbell for visual indication.

SETUP AND INSTALLATION

The Fockety Cordless Doorbell is designed for quick and straightforward installation. Follow these steps to set up your doorbell system:

Package Contents

Before beginning, ensure all components are present:

- 1 x Doorbell Transmitter (push button unit)
- 1 x Receiver (plug-in unit)
- 1 x 23A 12V Dry Battery (for transmitter)
- 1 x Double-Sided Adhesive Tape

- 2 x Screws



Figure 1: Included components of the Fockety Cordless Doorbell kit, showing the receiver, transmitter, battery, adhesive tape, and mounting screws.

Transmitter Battery Installation

1. Locate the battery compartment on the back of the doorbell transmitter unit.
2. Open the compartment and insert the provided 23A 12V dry battery, ensuring correct polarity (+/-).
3. Close the battery compartment securely.

Mounting the Transmitter

Choose a suitable location for the transmitter, typically near your front door. Ensure the surface is clean and dry.

• Using Adhesive Tape:

- a. Peel off one side of the double-sided adhesive tape and firmly attach it to the back of the transmitter.
- b. Peel off the other side of the tape and press the transmitter firmly onto the desired mounting surface for at least 30 seconds.

• Using Screws:

- a. Mark the positions for the screw holes on your desired mounting surface using the transmitter as a guide.
- b. Drill pilot holes if necessary.
- c. Secure the transmitter to the surface using the provided screws.

Receiver Placement

Plug the receiver unit into any standard electrical outlet within the desired listening range. For optimal performance, avoid

placing the receiver near large metal objects or other electronic devices that may cause interference.



Figure 2: The doorbell receiver and transmitter units, ready for installation.

OPERATING INSTRUCTIONS

Once installed, the Fockety Cordless Doorbell is ready for use. Here's how to operate it:

Basic Operation

When the doorbell transmitter button is pressed, it sends a wireless signal to the receiver. The receiver will then play the selected melody and illuminate its glowing halo, providing both auditory and visual notification.

Open area working range up to 262ft/80m
Ensures you hear the bell and open the door in time



Figure 3: Demonstrating the use of the doorbell transmitter and receiver.

Changing Melodies

The receiver unit features a button (often on the side) to cycle through the 38 available melodies. Press this button repeatedly until you find your preferred chime.

Adjusting Volume

The receiver also has a volume control button, typically located near the melody selection button. Press this button to cycle through the 4 volume levels (20db to 110db), including a silent mode, to suit your environment.



Figure 4: Visual representation of the doorbell's range and sound customization options.

Important Note on Pressing

If you need to press the doorbell button multiple times in quick succession, please allow the current ringing cycle to complete before pressing the button again. Continuous rapid pressing may prevent the doorbell from registering subsequent presses correctly.

MAINTENANCE

To ensure the longevity and optimal performance of your Fockety Cordless Doorbell, consider the following maintenance tips:

- **Cleaning:** Wipe the doorbell transmitter and receiver units with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which can damage the surface.

- **Battery Replacement:** If the transmitter's range decreases or it stops functioning, the 23A 12V dry battery may need replacement. Replace it with a new battery of the same type.
- **Environmental Protection:** While the transmitter is designed for outdoor use, extreme weather conditions (heavy rain, direct prolonged sunlight, extreme temperatures) can affect its lifespan. Consider placing it in a sheltered location if possible.

TROUBLESHOOTING

If you encounter issues with your Fockety Cordless Doorbell, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Doorbell does not ring.	• Transmitter battery is dead or low. • Receiver is unplugged or not powered. • Distance between transmitter and receiver is too far or obstructed. • Interference from other electronic devices.	• Replace the 23A 12V battery in the transmitter. • Ensure the receiver is securely plugged into a working power outlet. • Reduce the distance between units or reposition them to avoid large obstructions (e.g., thick walls, metal structures). • Move the receiver away from other electronics like microwaves or Wi-Fi routers.
Ringtone is too quiet or too loud.	Volume setting is not optimal.	Press the volume control button on the receiver to cycle through the 4 volume levels until desired loudness is achieved.
Doorbell rings intermittently or with delay.	• Weak signal due to distance or obstruction. • Transmitter battery is low. • Rapid, continuous pressing of the button.	• Reposition the receiver closer to the transmitter or in a clearer line of sight. • Replace the transmitter battery. • Allow the current ringing cycle to finish before pressing the button again.

PRODUCT SPECIFICATIONS

Detailed specifications for the Fockety Cordless Doorbell system:

Feature	Specification
Working Distance	Approx. 80m / 262ft (in open area)
Ringtones	38 selectable melodies

Feature	Specification
Volume Levels	4 levels (20db to 110db), including silent mode
Transmitter Battery	1 x 23A 12V Dry Battery (included)
Receiver Power	Plug-in (AC powered)
Product Dimensions (Receiver)	91mm x 55mm x 21mm (3.6 x 2.2 x 0.8 inches)
Product Dimensions (Transmitter)	78mm x 42mm x 21mm (3.1 x 1.7 x 0.8 inches)
Item Weight	5.1 ounces (total kit)
Material	ABS
Model Number	Focketyfwvet1p6yc



Figure 5: Detailed dimensions of the doorbell receiver and transmitter units.

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty. For specific details regarding warranty duration and terms, please refer to the packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need further support regarding your Fockety Cordless Doorbell, please contact the seller or manufacturer through the platform where the product was purchased. Provide your model number (Focketyfwvet1p6yc) and a detailed description of your issue for faster service.

© 2023 Fockety. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DLCJG5YH>

More documents and user manuals: <https://manuals.plus/>