

[Manuals.plus](#) /

› [OmniBreeze](#) /

› OmniBreeze Tower Fan User Manual

OmniBreeze B0DLCR6B6Y

Comprehensive guide for the OmniBreeze Tower Fan (Model B0DLCR6B6Y) covering crucial safety tips, how to use controls, simple maintenance steps, and quick troubleshooting solutions. Get the most out of your fan!

OmniBreeze Tower Fan User Manual

Model: B0DLCR6B6Y

INTRODUCTION

Welcome to the OmniBreeze Tower Fan user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tower fan. Please read this manual thoroughly before using the product.

SAFETY INFORMATION

Please read all safety instructions carefully before use to prevent injury or damage.

- Do not operate the fan with a damaged cord or plug.
- Keep the fan out of reach of children and pets.
- Do not immerse the fan in water or other liquids.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- Do not insert fingers or foreign objects into the fan grilles.

PACKAGE CONTENTS

Verify that all items are present in the package:


- OmniBreeze Tower Fan Unit
- Remote Control

- User Manual

PRODUCT OVERVIEW

The OmniBreeze Tower Fan features a sleek, space-saving design with internal oscillation for wide air distribution and enhanced stability.

Front View

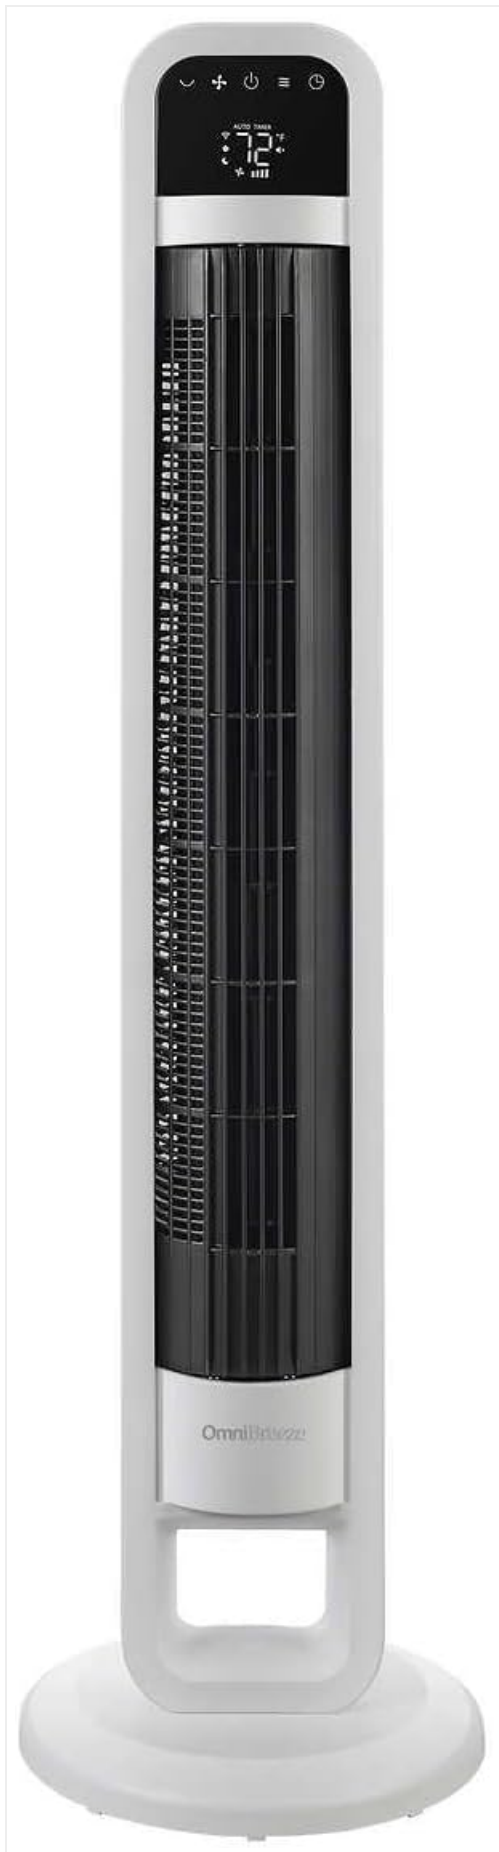

This image displays the front of the OmniBreeze Tower Fan, highlighting its tall, slender white casing and the black air outlet grille. The top panel features digital controls and a display.

Control Panel



A detailed view of the fan's top-mounted digital control panel, showing various touch-sensitive buttons for power, fan speed, oscillation, mode selection, and timer, along with a digital temperature display.

Rear View



This image shows the back of the OmniBreeze Tower Fan, revealing the air intake grille and a designated slot for remote control storage.

SETUP

Follow these steps to set up your OmniBreeze Tower Fan:

1. Carefully unpack the fan unit and all accessories from the packaging.
2. Place the fan on a firm, level, and stable surface, ensuring it is away from curtains or other objects that could obstruct airflow.
3. Plug the power cord securely into a standard electrical outlet.
4. If not pre-installed, insert the required batteries into the remote control, observing correct polarity.

OPERATING INSTRUCTIONS

The OmniBreeze Tower Fan offers multiple control options for your convenience.

Controls

The fan can be operated via the touch control panel on the unit itself, the included remote control, or through a Wi-Fi enabled application on your smartphone.

Control Panel & Remote Functions

- **Power Button:** Turns the fan On or Off.
- **Fan Speed Button:** Cycles through 4 speed settings: Ultra Quiet, Low, Medium, and High.
- **Oscillation Button:** Activates or deactivates the internal oscillation feature for wide air distribution across the room.
- **Breeze Mode Button:** Selects from 4 distinct breeze modes to personalize your comfort: Normal, Natural, Sleep, and Auto.
- **Timer Button:** Sets an automatic shut-off timer for up to 15 hours, allowing you to conserve energy.
- **Digital Display:** Shows the current room temperature and selected operational settings.

Wi-Fi Connectivity

For convenient remote control via your smartphone, download the OmniBreeze app from your device's app store. Follow the in-app instructions to connect your fan to your home Wi-Fi network. This feature allows you to control the fan's settings from anywhere within your home network.

Official Product Video: Wi-Fi Connectivity

No official seller videos demonstrating Wi-Fi connectivity were available for this product.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your OmniBreeze Tower Fan.

- **Cleaning the Exterior:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.
- **Cleaning the Dust Filter:** The fan features a washable dust filter located at the rear. Gently remove the filter by following the instructions or diagrams on the back of the unit. Rinse the filter with clean water and allow it to air dry completely before reinserting it into the fan. Ensure the filter is fully dry to prevent mold or mildew growth.
- **Storage:** When the fan is not in use for extended periods, unplug it from the power outlet, clean it thoroughly, and store it in a cool, dry place. It is recommended to store the fan in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outage; Remote control batteries dead.	Ensure power cord is securely plugged into a live outlet; Check household circuit breaker; Replace remote control batteries.
Weak airflow.	Dust filter clogged; Fan speed set too low.	Clean the washable dust filter; Increase fan speed setting.
Fan wobbles during oscillation.	Uneven surface.	Place the fan on a flat, stable, and level surface.
Wi-Fi connection issues.	Incorrect Wi-Fi password; Router too far; App not updated.	Verify Wi-Fi password and re-enter; Move fan closer to your Wi-Fi router; Update the OmniBreeze app to the latest version.

Official Product Video: Controls Navigation

No official seller videos demonstrating controls navigation were available for this product.

SPECIFICATIONS

- **Brand:** OmniBreeze
- **Model:** B0DLCR6B6Y
- **Dimensions (W x L x H):** 10.31" W x 10.31" L x 38.3" H
- **Item Weight:** 7.5 pounds (Product), 9.8 pounds (Package)
- **Mounting Type:** Floor Mount
- **Fan Speeds:** 4 (Ultra Quiet, Low, Medium, High)
- **Breeze Modes:** 4 (Normal, Natural, Sleep, Auto)
- **Oscillation:** Internal Oscillation
- **Connectivity:** Wi-Fi Enabled
- **Timer:** Up to 15 hours
- **Filter:** Washable Dust Filter
- **UPC:** 819079023571

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the contact details provided on the OmniBreeze official website or the product packaging. It is advisable to retain your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I replace the remote control for my OmniBreeze B0DLCR6B6Y Tower Fan if it is not working after a battery change?

If your OmniBreeze B0DLCR6B6Y remote control is still not working after replacing the batteries, you have a few options for control and replacement: Use the Smartphone App: This fan is Wi-Fi enabled. You can download...

[Read full answer](#)

How can I lower the temperature on the Omni breeze tower fan?

It is important to clarify that the OmniBreeze Tower Fan is a fan and not an air conditioner; it does not have a cooling element to lower the actual room temperature. The digital display...

[Read full answer](#)

My OmniBreeze Tower Fan was bumped and now spins slowly without blowing air, even though the lights work. How can I fix this?

Based on your description that the OmniBreeze Tower Fan was bumped and is now spinning slowly without moving air, it is likely that the impact caused an internal mechanical misalignment or damage to the...

[Read full answer](#)