

[Manuals.plus](#) /

> [Aecooly](#) /

> Aecooly Slim Portable Fan, Thin Handheld Fan, USB Rechargeable Mini Personal [24H Max Cooling Time], Battery Powered Small Foldable Pocket for Travel, Summer, Gifts for Women&Men, Girls -Black 1 Pack Black

Aecooly PF01

Aecooly Slim Portable Fan

Model: PF01 - User Instruction Manual

INTRODUCTION

The Aecooly Slim Portable Fan is designed for ultimate portability and convenience, offering powerful cooling in a compact, foldable design. With its long-lasting battery and adjustable airflow, it's perfect for staying refreshed on the go, at your desk, or during outdoor activities. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new fan.

SAFETY INFORMATION

- Do not insert fingers or any objects into the fan blades while it is operating. The blades are designed to stop upon contact, but caution is advised.
- Keep the fan away from water and excessive moisture to prevent electrical hazards.
- Do not disassemble, repair, or modify the fan yourself. Contact qualified personnel for service.
- Store the fan in a cool, dry place when not in use.
- Keep out of reach of small children unless under direct adult supervision.

PACKING LIST

Upon unboxing your Aecooly Slim Portable Fan, please ensure all items listed below are present:

- 1 x Slim Handheld Fan
- 1 x Charging Cable (USB Type-C)
- 1 x Portable Lanyard
- 1 x User Manual



Packing List

1 Charging Cable

2 Portable Lanyard

3 Slim Handheld Fan

4 User Manual

Image: Contents of the Aeecooly Slim Portable Fan package, including the fan, charging cable, lanyard, and user manual.

SETUP

1. Initial Charging

Before first use, fully charge your Aeecooly Slim Portable Fan. Connect the provided USB Type-C charging cable to the fan's charging port and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port). The indicator light will show charging status. A full charge provides up to 24 hours of cooling time.



Image: Close-up of the fan's USB Type-C charging port and power button, highlighting its 2000 mAh battery capacity.

2. Attaching the Lanyard

For added security and portability, you can attach the included portable lanyard to the designated loop on the fan. This allows you to wear it on your wrist or hang it for easy access.


OPERATING INSTRUCTIONS

1. Power On/Off and Speed Adjustment

To power on the fan, unfold it to the desired position and press the power button located near the charging port. The fan will start at Speed 1. Press the button repeatedly to cycle through the 3 speed settings (Speed 1 → Speed 2 → Speed 3 → Off).

2. Handheld Mode

Hold the fan comfortably in your hand to direct airflow as needed. Its slim and lightweight design makes it easy to carry and use for extended periods.

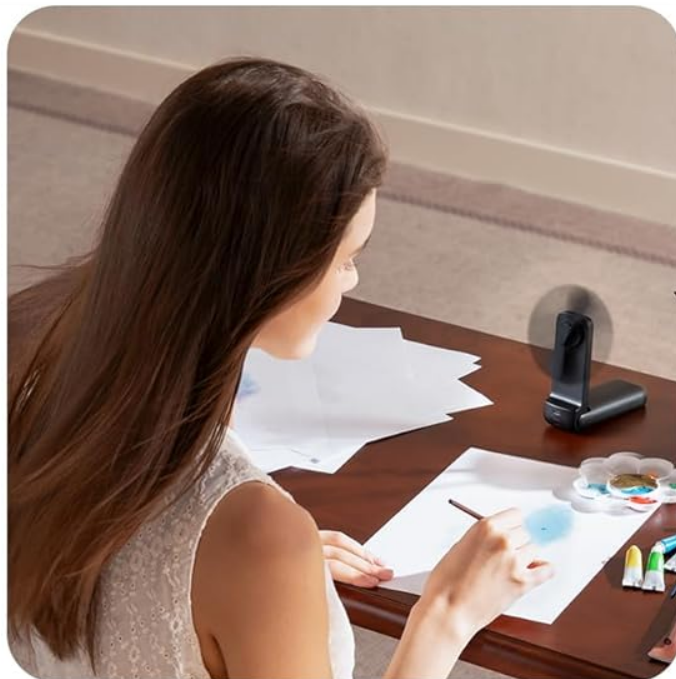


**Always There,
Keeping
You Fresh**

Image: A person holding the Aecooly Slim Portable Fan in handheld mode, enjoying the breeze.

3. Desktop Mode

The fan features a foldable design that allows it to stand upright on a flat surface. Simply fold the handle back to create a stable base, transforming it into a personal desktop fan. This is ideal for use at a desk, table, or nightstand.

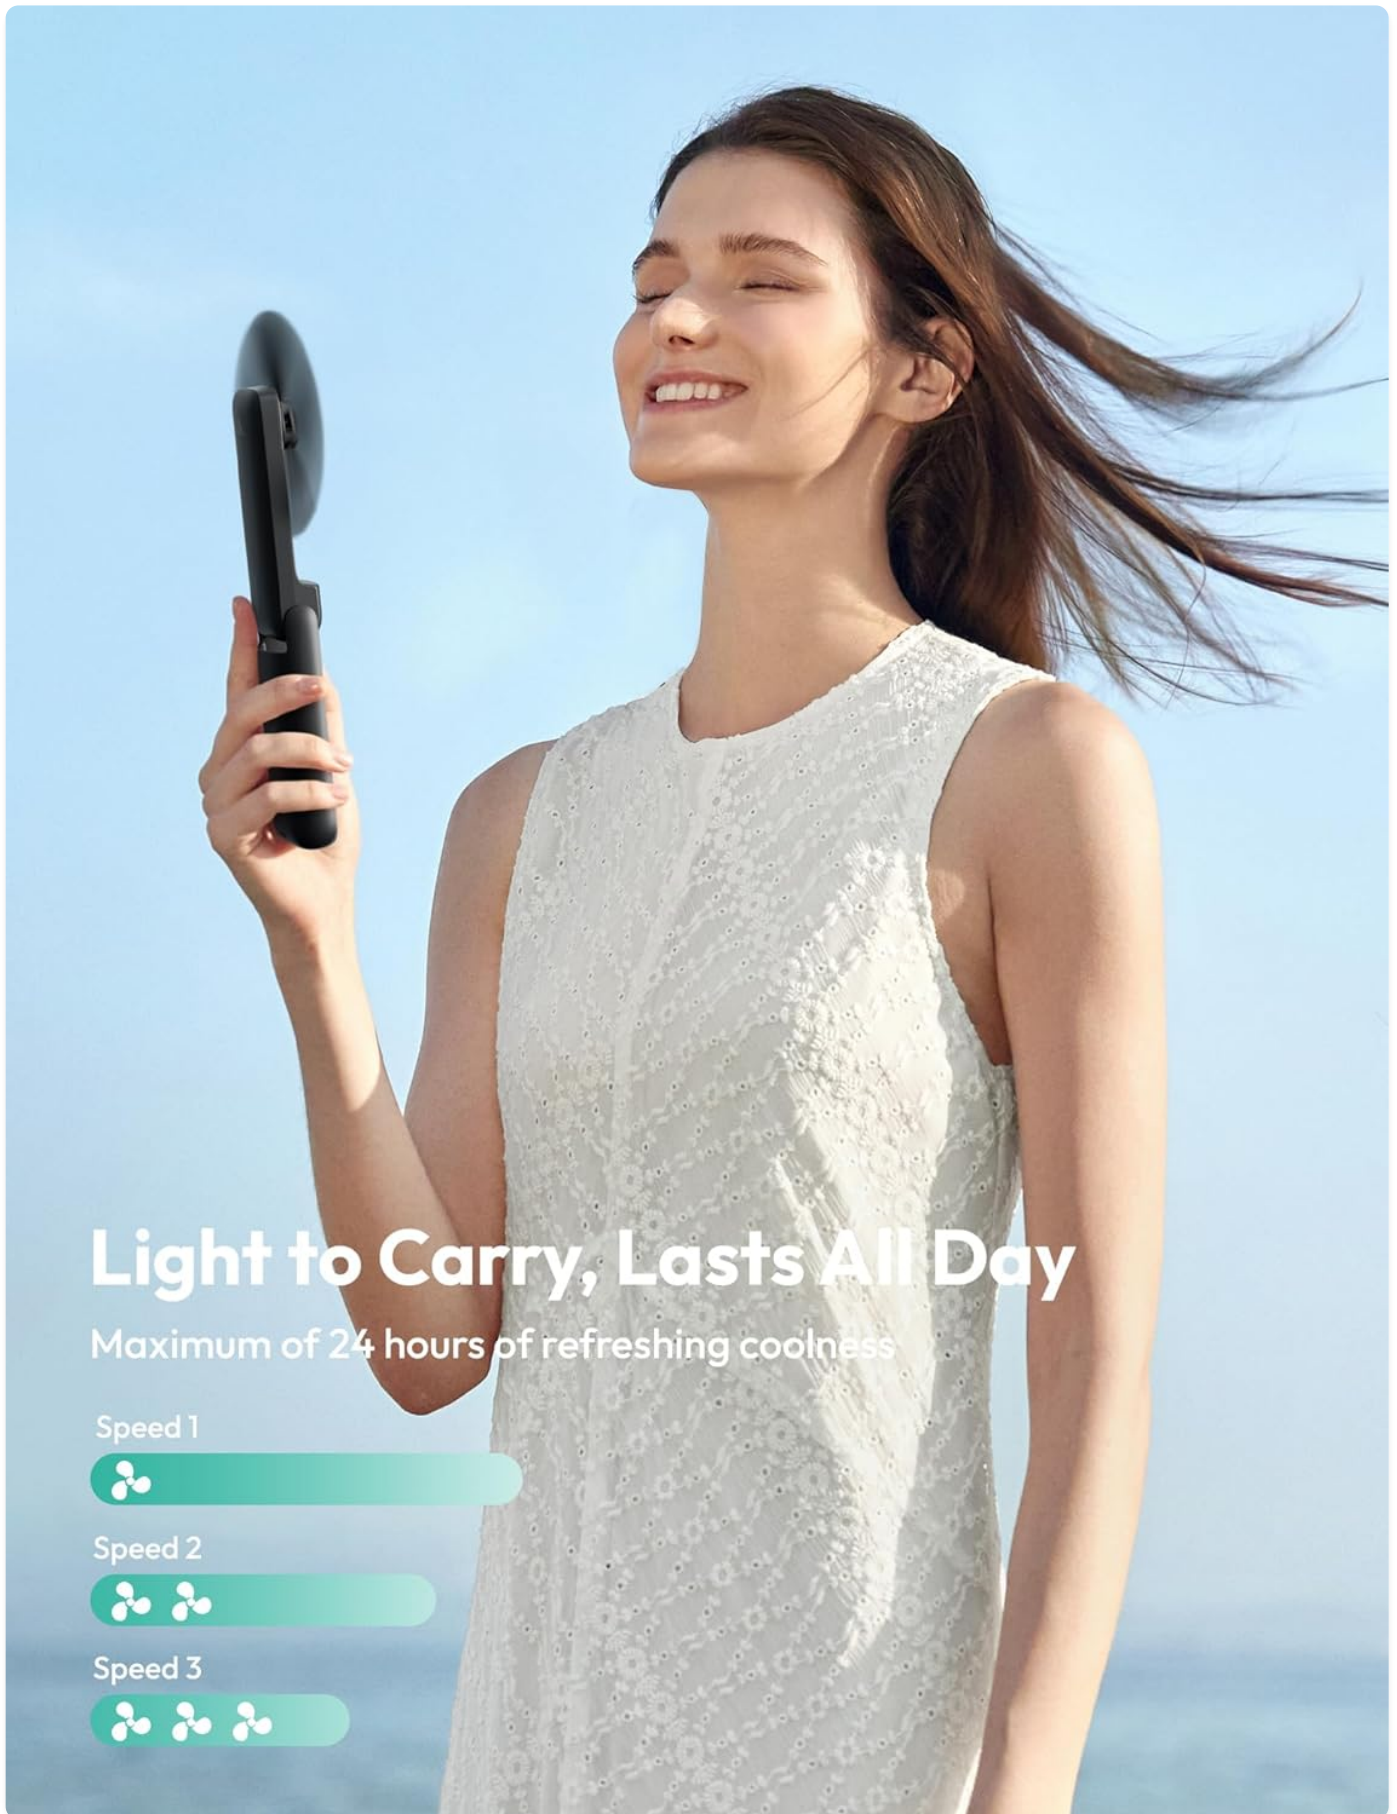

Light to Carry, Lasts All Day

Maximum of 24 hours of refreshing coolness

Speed 1



Speed 2



Speed 3



Image: The Aecoolly Slim Portable Fan set up in desktop mode on a table, providing cooling while working.

4. Safety Auto-Stop Feature

The fan is equipped with a safety mechanism that automatically stops the blades if they encounter an obstruction. This prevents injury and damage to the fan. To resume operation, remove the obstruction and restart the fan.

MAINTENANCE

1. Cleaning

Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior of the fan. Do not use abrasive cleaners or immerse the fan in water.

2. Storage

When not in use for extended periods, store the fan in its original packaging or a protective case in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Low battery; Fan not fully unfolded; Power button not pressed correctly.	Charge the fan; Ensure fan is fully unfolded; Press the power button firmly.
Weak airflow	Low speed setting; Obstruction in blades.	Increase speed setting; Remove any obstructions (fan will auto-stop).
Unusual noise	Obstruction; Internal issue.	Check for and remove obstructions; If noise persists, contact customer support. (Note: Fan operates at 50 dB).

SPECIFICATIONS

- **Brand:** Aeecooly
- **Model Name:** PF01
- **Color:** Black
- **Product Dimensions:** 1.08"D x 1.83"W x 4.33"H
- **Item Weight:** 5.3 ounces
- **Power Source:** Battery Powered (1 Lithium Polymer battery included)
- **Battery Life:** Up to 24 hours (Max Cooling Time)
- **Number of Power Levels:** 3
- **Noise Level:** 50 dB
- **Blade Material:** Thermoplastic Elastomer
- **Charging Port:** USB Type C
- **Manufacturer:** Shenzhen Aikuli Technology Co., Ltd
- **Certifications:** FCC, CE, ROHS, UN38.3, KC

WARRANTY & SUPPORT

For warranty information, technical support, or any inquiries regarding your Aeecooly Slim Portable Fan, please contact the manufacturer directly through their official website or the contact information provided with your purchase documentation. Please retain your proof of purchase for warranty claims.