

RAINPOINT Sky Blue 4 outlets

RAINPOINT 4-Outlet Sprinkler Timer User Manual

Model: Sky Blue 4 outlets (ASIN: B0DLFQLBXC)

INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your RAINPOINT 4-Outlet Sprinkler Timer. Designed for efficient and automated watering, this device helps manage your lawn, garden, and other watering needs with precision. Please read this manual thoroughly before use to ensure optimal performance and longevity of your sprinkler timer.

PRODUCT FEATURES

- **4 Individual Programmable Zones:** Customize watering schedules (start time, duration, frequency) for each of the four outlets, catering to different plant needs across various zones.
- **3 Timed Watering Cycle Modes:** Flexible scheduling with options for 12-hour or 24-hour format start times, watering durations from 1 minute to 3 hours 59 minutes, and frequencies of every 8 hours, every 12 hours, or every 1-7 days.
- **Rain Delay Function:** Temporarily pause watering for 24, 48, or 72 hours to conserve water during rainy periods.
- **Manual Watering Mode:** Allows for immediate, non-scheduled watering from 1 minute to 6 hours without affecting programmed schedules.
- **Easy-to-Use Interface:** Features a large 3.4-inch LCD display, a large dial, and four clear buttons for intuitive programming and readability.
- **Heavy-Duty Structure with Brass Inlet:** Constructed with a weatherproof design and a reinforced brass water inlet to withstand water pressure up to 116 PSI, reducing wear and preventing leaks.
- **Low Power Protection:** Equipped with a low power indicator that flashes to remind you to replace batteries, and valves automatically close to prevent flooding when power is critically low.



Figure 1: Front view of the RAINPOINT 4-Outlet Sprinkler Timer, showing the LCD display, control dial, and four outlets.



Figure 2: The sprinkler timer installed on a faucet, demonstrating its four programmable outlets connected to hoses for different watering zones.

SETUP

1. Battery Installation:

The timer requires 4 AA batteries (not included). Locate the battery compartment on the back of the unit. Open the waterproof battery cover and insert the batteries, ensuring correct polarity. Close the cover securely to maintain water resistance.

RAIN DELAY WATERING

AVOID OVERWATRING



Figure 3: Image showing the waterproof battery compartment of the sprinkler timer, highlighting the secure closure for outdoor use.

2. Connecting to Faucet:

Attach the brass inlet of the sprinkler timer to a standard 3/4" outdoor faucet. Ensure the connection is tight to prevent leaks. The brass inlet is designed for durability and a secure fit.



Figure 4: Close-up view of the upgraded brass inlet, designed for stronger and less wear connection to the faucet.

3. Connecting Hoses:

Connect your garden hoses to the four individual outlets at the bottom of the timer. Each outlet is a separate zone. Ensure all connections are secure.

4. Setting the Clock:

Turn the main dial to "SET CLOCK". Use the "+" and "-" buttons to adjust the current time. Press "OK/Manual" to confirm and move to the next setting (e.g., minutes). Press "ZONE" to switch between 12-hour and 24-hour format.

OPERATING INSTRUCTIONS

The RAINPOINT Sprinkler Timer offers automatic, manual, and rain delay watering modes. Follow the steps below to program your desired watering schedules.

Automatic Watering Program

This mode allows you to set a recurring watering schedule for each zone.

1. **Set Start Time:** Turn the dial to "START TIME". Use "+" or "-" to set the desired start time. Press "OK/Manual" to confirm. Use "ZONE" to select the zone (1-4) you are programming.
2. **Set How Long (Duration):** Turn the dial to "HOW LONG". Use "+" or "-" to set the watering duration (from 1 minute to 3 hours 59 minutes). Press "OK/Manual" to confirm. Use "ZONE" to select the zone.
3. **Set How Often (Frequency):** Turn the dial to "HOW OFTEN". Use "+" or "-" to set the watering frequency (every 8 hours, every 12 hours, or every 1-7 days). Press "OK/Manual" to confirm. Use "ZONE" to select the zone.
4. **Activate Program:** Turn the dial to "ON" to activate your programmed watering schedule. The timer will now operate automatically based on your settings.

EASY PROGRAMMING

LARGE LCD & DIAL FOR EASY SETUP



Figure 5: The large LCD display and intuitive dial make programming easy for setting start times, durations, and frequencies.

WATERING CYCLE MODES

AUTOMATIC, TIME-SAVING & WORRY-FREE



Figure 6: Visual representation of the three timed watering cycle modes: start time, duration, and frequency options.

Manual Watering

Use this mode for immediate watering without affecting your automatic schedule.

1. Turn the dial to "ON".
2. Press and hold the "OK/Manual" button for 3 seconds. The display will show "ZONE" with numbers 1-4.
3. Use the "+" or "-" buttons to select the desired zone(s) for manual watering. A short line will appear under the selected zone number.
4. Press "OK" to set the watering time (from 1 minute to 6 hours).

5. Press "OK/Manual" again to confirm and start manual watering. The timer will automatically revert to its programmed schedule after the manual watering is complete.



Figure 7: The manual watering feature allows for custom, on-demand watering for specific durations across selected zones.

Rain Delay Function

To prevent overwatering during rainy periods, use the rain delay function.

1. Turn the dial to "ON".
2. Press and hold the "+/DELAY" button for 3 seconds.

3. Use the "+" or "-" buttons to select the desired delay duration (24, 48, or 72 hours).
4. Press "OK" to confirm the rain delay. The timer will pause watering for the selected period and resume its programmed schedule afterward.



Figure 8: The rain delay feature helps conserve water by pausing scheduled watering for a set duration during rainy conditions.

Instructional Video

Your browser does not support the video tag.

Video 1: Official RAINPOINT Sprinkler Timer instructional video, demonstrating setup and programming steps for automatic, manual, and rain delay functions.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the low power indicator flashes on the display. Ensure to use 4 new AA batteries.
- **Cleaning:** Periodically clean the filter washer located in the brass inlet to prevent debris from clogging the timer. Use a soft brush and water.
- **Winterization:** Before the first frost, disconnect the timer from the faucet and hoses. Drain any remaining water from the unit and store it indoors in a dry, frost-free location. Freezing temperatures can damage the internal components.
- **Leak Prevention:** Always ensure connections are tight. If leaks occur, check the rubber washers for proper seating and replace if damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer not watering / Valves not opening.	Low batteries; Incorrect programming; Water pressure too low; Valves stuck.	Replace batteries. Review programming steps carefully. Ensure faucet is fully open. Check for debris in valves or inlet filter.
Leaks from connections.	Loose connections; Damaged washers.	Tighten all connections. Check rubber washers in the inlet and outlets; replace if worn or damaged.
Manual mode not working as expected.	Incorrect selection of zones or confirmation.	Ensure you hold "OK/Manual" for 3 seconds, then use "+" or "-" to select the zone(s) (a line appears underneath), then press "OK" to set time, and "OK/Manual" again to confirm.
Display is blank or dim.	Dead or low batteries.	Replace all 4 AA batteries with new ones.

SPECIFICATIONS

Attribute	Detail
Brand	RAINPOINT
Model	Sky Blue 4 outlets
Color	Sky Blue
Material	Brass (Inlet)
Product Dimensions	7"D x 8"W x 4.5"H
Item Weight	2.2 Pounds
Number of Settings	7 (referring to programming options)
Screen Size	3.4 Inches
Water Pressure Resistance	Up to 116 PSI
Power Source	4 AA Batteries (not included)






WARRANTY AND SUPPORT

RAINPOINT products are designed for durability and performance. While specific warranty details are not provided in this manual, most RAINPOINT products come with a manufacturer's warranty covering defects in materials and workmanship. For detailed warranty information, product registration, or technical support, please visit the official RAINPOINT website or contact their customer service directly.

You can often find support contact information on the product packaging or on the RAINPOINT brand store page on Amazon: [RAINPOINT Amazon Store](#).

© 2025 RAINPOINT. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - Sky Blue 4 outlets

 <p>USER MANUAL</p> <p>Model: ITV205</p> <p>Save the user manual for future reference. If you have any questions, please contact us to get support.</p>	<p>RainPoint ITV205 Water Timer User Manual</p> <p>Comprehensive user guide for the RainPoint ITV205 automatic garden hose timer, covering setup, programming for multiple zones, rain delay, manual watering, troubleshooting, and maintenance.</p>
 <p>USER MANUAL</p> <p>Model: ITV205-DLS</p> <p>Save the user manual for future reference. If you have any questions, please contact us to get support.</p>	<p>RainPoint ITV205-DLS 2-Zone Water Timer User Manual</p> <p>Comprehensive user manual for the RainPoint ITV205-DLS 2-Zone Water Timer, covering installation, programming, features like rain delay and manual watering, and troubleshooting.</p>
 <p>INSTALLATION GUIDE</p>	<p>RainPoint ITV305/ITV405 Quick Start Guide: Easy Hose Timer Setup</p> <p>Get your RainPoint ITV305 and ITV405 hose timers up and running quickly with this easy-to-follow quick start guide. Learn installation, battery insertion, programming, and troubleshooting for your garden watering.</p>
 <p>USER MANUAL</p> <p>1-Zone Water Timer</p> <p>Model No. ITV105</p> <p>Save the user manual for future reference. If you have any questions, please contact us to get support.</p>	<p>RainPoint 1-Zone Water Timer User Manual (Model ITV105)</p> <p>Comprehensive user manual for the RainPoint ITV105 1-Zone Water Timer, detailing installation, programming, additional functions like Rain Delay and Manual Watering, troubleshooting, precautions, and warranty information.</p>
 <p>1-Zone Water Timer USER MANUAL</p> <p>Model NO. ITV105</p> <p>Save the user manual for future reference. If you have any questions, please contact us to get support.</p>	<p>RainPoint 1-Zone Water Timer User Manual (Model ITV105)</p> <p>Comprehensive user manual for the RainPoint 1-Zone Water Timer (Model ITV105). This guide covers installation, battery replacement, programming watering schedules, utilizing additional functions like Rain Delay and Manual Watering, troubleshooting common issues, cleaning procedures, and warranty information. Learn how to efficiently manage your garden irrigation.</p>

RainPoint®

USER MANUAL

1-Zone Digital Hose Timer

Model No. ITV117



See the user manual for full instructions. If you have any questions please contact us to get support.

[RainPoint ITV117 1-Zone Digital Hose Timer User Manual](#)

User manual for the RainPoint ITV117 1-Zone Digital Hose Timer. Learn how to install, program, and troubleshoot your automatic garden watering system for efficient water management.