

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZWP](#) /

› [ZWP Replacement Remote Control User Manual](#)

ZWP IF-32FSB

ZWP Replacement Remote Control User Manual

Model: IF-32FSB

INTRODUCTION

This user manual provides comprehensive instructions for the ZWP Replacement Remote Control, model IF-32FSB. This remote is designed to operate various electric fireplace models, including those from Intertek (IF-32FSB, IF1340, IF1350, IF1360), COSTWAY (EP24725US, EP24726US, EP24727US), DWVO, and BETELNUT (30", 36", 40", 50", 60", 68" Electric Fireplace models). Please read this manual thoroughly before use to ensure proper operation and longevity of your remote control.

PRODUCT OVERVIEW

The ZWP Replacement Remote Control is a durable and ergonomic device, crafted from high-quality ABS material for comfortable handling and wear resistance. It features a straightforward button layout for intuitive control of your electric fireplace functions.



Image: Front view of the ZWP Replacement Remote Control, showing its ergonomic design and button layout.



Image: Front and back views of the remote control, highlighting the battery compartment on the rear.



Image: Diagram showing the dimensions of the remote control: approximately 5.70 inches in length, 1.57 inches in width, and 0.78 inches in thickness.

SETUP: BATTERY INSTALLATION

The remote control requires two 1.5V AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming is required; the remote will function immediately after battery installation.

Requires Two 1.5V AAA Batteries

(Batteries are not included)



NEW ABS

Image: Diagram illustrating the correct insertion of two AAA batteries into the remote control's battery compartment.

OPERATING INSTRUCTIONS

The remote control utilizes infrared technology for long-distance, precise control of your electric fireplace. Ensure a clear line of sight between the remote and the fireplace's receiver for optimal performance.

Long distance precise control

Strongest signal by Infrared technology, further transmission for multi-angle induction. Precisely control far from 10 meters / 33 feet.



Image: A hand holding the remote control, demonstrating its use for long-distance operation of an electric fireplace, with a television screen in the background indicating a typical living room setting.

Button Functions:

Button Symbol	Function
(Power Symbol)	Turns the fireplace ON or OFF.
≈≈≈ (Wavy Lines)	Controls the heat settings (e.g., low, high, off).
F (Flame Symbol)	Adjusts the flame brightness or effect.
(Light Bulb)	Controls the internal lighting or ember bed brightness.
(Clock Symbol)	Activates or adjusts the timer function.
🌀 (Fan Symbol)	Controls the fan speed or operation.

Note: Specific functions may vary slightly depending on your electric fireplace model. Refer to your fireplace's manual for detailed compatibility and operation.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote, expose it to water, or place it near heat sources.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	<ul style="list-style-type: none"> • Batteries are dead or inserted incorrectly. Replace batteries and ensure correct polarity. • Obstruction between remote and fireplace receiver. Ensure a clear line of sight. • Remote is too far from the fireplace. Move closer to the fireplace.
Intermittent response.	<ul style="list-style-type: none"> • Low battery power. Replace batteries. • Infrared interference. Ensure no strong light sources are directly aimed at the fireplace receiver.
Certain buttons not working.	<ul style="list-style-type: none"> • Button may be stuck or damaged. Gently press the button multiple times. • Function not supported by your specific fireplace model. Consult your fireplace's manual.

SPECIFICATIONS

Feature	Detail
Model Number	IF-32FSB
Brand	ZWP
Compatible Devices	Electric Fireplaces (Intertek, COSTWAY, DWVO, BETELNUT models)
Power Source	2 x 1.5V AAA Batteries (not included)
Material	High-quality ABS
Color	Black
Item Weight	2.4 ounces (approx. 68 grams)
Package Dimensions	10 x 3 x 1 inches (approx. 25.4 x 7.6 x 2.5 cm)
Special Feature	Ergonomic design

SUPPORT

For any questions or assistance regarding your ZWP Replacement Remote Control, please do not hesitate to contact the seller. We are committed to helping you resolve any issues you may encounter.

Please refer to your purchase documentation or the platform where you purchased the product for specific contact information.