

## Oceanlend 29XZ7QTFN99ND3WPK4DO7D

# Oceanlend Electronic Countdown Timer User Manual

## 1. INTRODUCTION AND OVERVIEW

Welcome to the user manual for your Oceanlend Electronic Countdown Timer. This versatile and easy-to-use timer is designed to assist you with various time-keeping needs in your kitchen, office, or home. Its large display and loud alarm ensure you never miss an important moment, making it an indispensable tool for cooking, studying, exercising, and more.

Please read this manual carefully to understand the features and operation of your new timer.

## 2. PRODUCT FEATURES

- **Large LCD Display:** Features a clear, bold digit display for easy readability from a distance, ideal for users with impaired vision.
- **Loud Alarm:** Ensures the alarm is audible even from another room, preventing missed alerts.
- **Versatile Placement Options:** Equipped with a strong rubber magnet for magnetic surfaces (e.g., refrigerators, ovens), a retractable stand for tabletop use, and a hook for hanging.
- **Simple Operation:** User-friendly design with intuitive buttons suitable for all ages.
- **Wide Timing Range:** Counts down or up from 00:00 to 99 minutes and 59 seconds.
- **Compact and Portable:** Small size (6.5 x 7.0 x 1.6 cm) for easy handling and storage.
- **Multifunctional Use:** Perfect for cooking, baking, studying, exercise, medication reminders, classroom activities, and more.

## 3. SETUP

### 3.1 Battery Installation

Your Oceanlend Electronic Countdown Timer requires one AAA battery (not included). Follow these steps to install the battery:

1. Locate the battery compartment on the back of the timer.
2. Slide open the battery compartment cover.
3. Insert one AAA battery, ensuring the correct polarity (+ and -) matches the diagram inside the compartment.
4. Close the battery compartment cover securely.



*Image: Rear view of the timer, highlighting the battery compartment and the integrated magnet.*

### 3.2 Placement Options

The timer offers multiple convenient placement options:

- **Magnetic Attachment:** Use the strong rubber magnet on the back to attach the timer to any magnetic surface, such as a refrigerator door, oven, or whiteboard.
- **Tabletop Stand:** Pull out the retractable stand on the back to prop the timer up on a flat surface like a kitchen counter, desk, or bedside table.
- **Hanging Hook:** Utilize the small hook integrated into the stand to hang the timer on a wall hook or nail.



*Image: The timer shown in different placement scenarios, including being attached magnetically to a surface, standing on a table, and hanging.*

## 4. OPERATING INSTRUCTIONS

The Oceanlend Electronic Countdown Timer features three main buttons: MIN, SEC, and START/STOP.

# Easy to Use

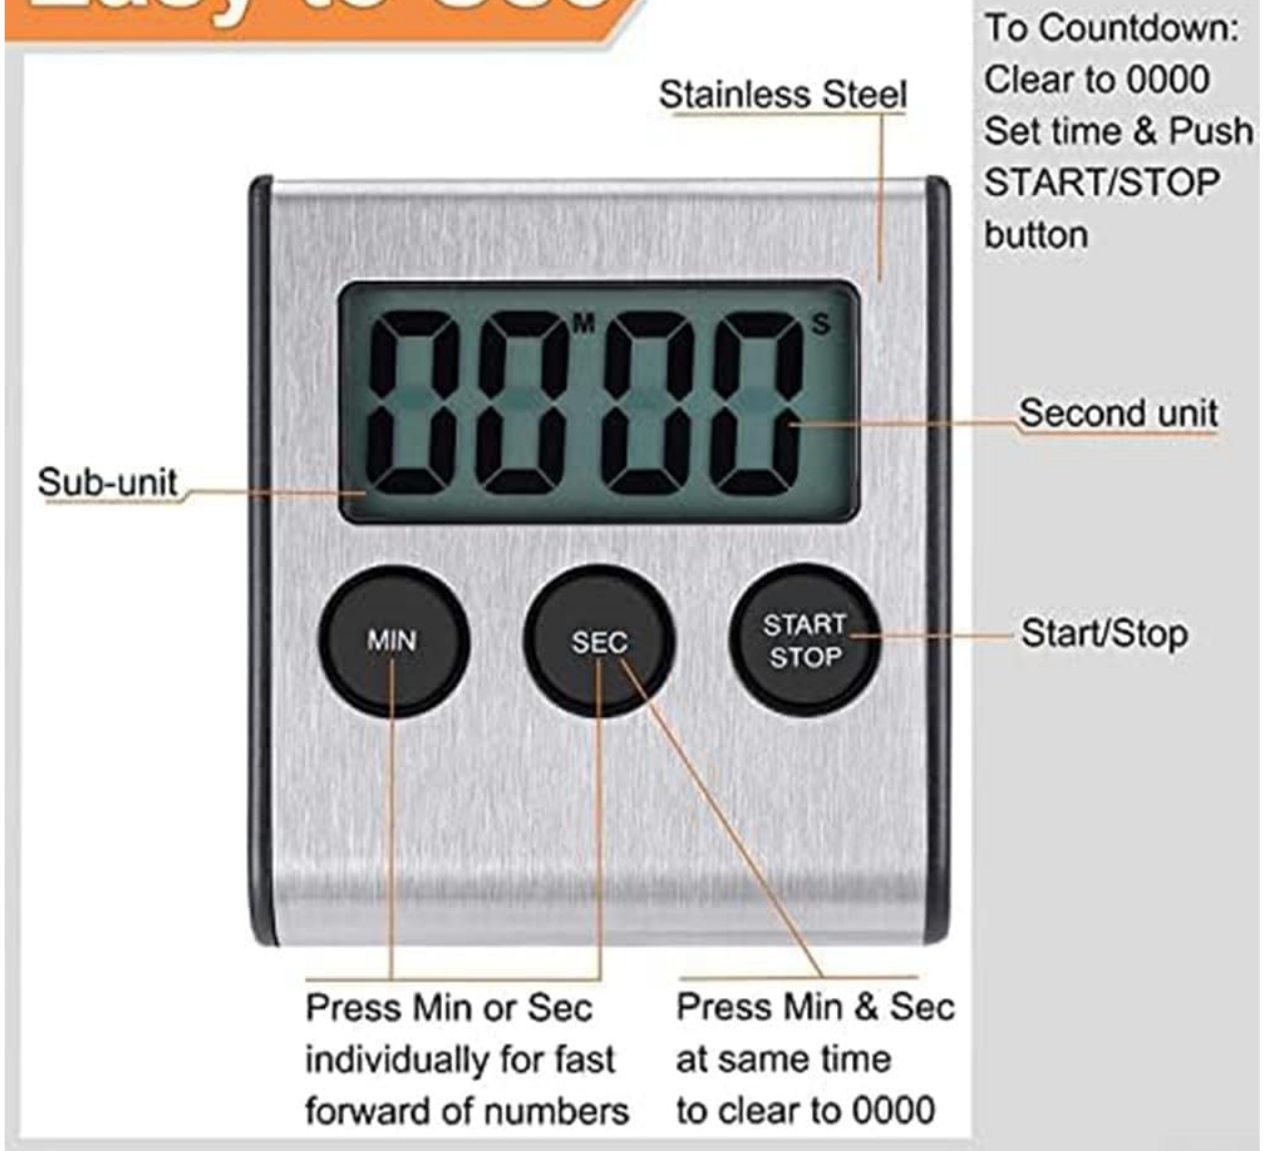


Image: Detailed view of the timer's front panel, illustrating the MIN, SEC, and START/STOP buttons and their respective functions.

## 4.1 Setting the Countdown Timer

1. Ensure the timer display shows 00:00. If not, press the **MIN** and **SEC** buttons simultaneously to reset it.
2. Press the **MIN** button to set the desired minutes. Each press increments the minute value. Hold the button down for rapid advancement.
3. Press the **SEC** button to set the desired seconds. Each press increments the second value. Hold the button down for rapid advancement.
4. The maximum setting is 99 minutes and 59 seconds.

## 4.2 Starting and Stopping the Timer

- Once the desired time is set, press the **START/STOP** button to begin the countdown. The display will show the time decreasing.
- To pause the countdown at any time, press the **START/STOP** button again.
- To resume the countdown, press the **START/STOP** button once more.

## 4.3 Alarm Function

- When the countdown reaches 00:00, a loud alarm will sound to notify you.
- To silence the alarm, press any button on the timer.

#### 4.4 Count-Up Function

- To use the timer as a stopwatch (count-up), ensure the display is reset to 00:00.
- Press the **START/STOP** button. The timer will begin counting upwards from 00:00.
- Press **START/STOP** again to pause the count-up. Press it once more to resume.



*Image: The main product view of the timer, showing its large LCD display and control buttons.*

## 5. MAINTENANCE

- Clean the timer with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water.
- Avoid exposing the timer to extreme temperatures, direct sunlight, or high humidity.
- If the timer will not be used for an extended period, remove the battery to prevent potential leakage and damage to the device.

## 6. TROUBLESHOOTING

- **Timer not turning on / Display is blank:**
  - Check if the battery is installed correctly with the correct polarity.
  - Replace the battery with a fresh AAA battery.
- **Alarm is too quiet or not sounding:**
  - Ensure the timer is not placed in an area where the sound output is obstructed.
  - Verify that the timer is functioning correctly by setting a short countdown.
- **Buttons are unresponsive:**
  - Try resetting the timer by removing and reinserting the battery.
  - Ensure the buttons are not stuck or obstructed.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Oceanlend
Model Number	29XZ7QTFN99ND3WPK4DO7D
Color	As shown
Product Dimensions (L x W x H)	6.5 x 7.0 x 1.6 cm
Weight	80 g
Maximum Timing	99 minutes 59 seconds
Power Source	1 x AAA Battery (not included)
Material	Plastic



*Image: The timer with its physical dimensions clearly indicated.*

## 8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Oceanlend Electronic Countdown Timer, please contact Oceanlend directly through their official customer service channels or the retailer from whom you purchased the product. Please retain your proof of purchase for warranty claims.