



[Manuals.plus](#) /

› [Maestri House](#) /

› Maestri House Rechargeable Milk Frother & Milk Frothing Pitcher User Manual

## Maestri House B0DLGF1J24

# Maestri House Rechargeable Milk Frother & Milk Frothing Pitcher

## USER MANUAL

### Introduction

Thank you for choosing the Maestri House Rechargeable Milk Frother and 12oz Milk Frothing Pitcher. This versatile set is designed to help you create rich, creamy froth for your coffee, lattes, cappuccinos, and other beverages with ease. Please read this manual carefully before first use to ensure proper operation, maintenance, and safety.



Image: The Maestri House rechargeable milk frother (black, handheld) shown alongside the 12oz stainless steel milk frothing pitcher, which contains frothed milk and includes a temperature probe.

## Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.

- Do not immerse the frother handle or charging port in water or other liquids. Only the whisk attachment is washable.
- Keep out of reach of children. This appliance is not intended for use by children.
- Use only for its intended purpose of frothing milk or similar liquids.
- Do not operate the frother with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use outdoors.
- Always ensure the frother is fully charged before use for optimal performance.
- Exercise caution when handling hot liquids in the pitcher.

## Product Components

---

- Rechargeable Milk Frother (main unit with whisk attachment)
- 12oz Stainless Steel Milk Frothing Pitcher
- USB Charging Cable (for frother)

## Setup

---

1. **Initial Charge:** Before first use, fully charge the milk frother. Connect the provided USB charging cable to the frother's charging port and to a suitable USB power source (e.g., computer, wall adapter). The indicator light will show charging status and turn off or change color when fully charged.
2. **Initial Cleaning:** Wash the stainless steel frothing pitcher with warm soapy water and rinse thoroughly. The frother whisk attachment can be rinsed under running water. Wipe the frother handle with a damp cloth. Ensure all parts are dry before assembly and storage.

## Operating Instructions

---

Follow these steps to create perfectly frothed milk:

1. **Prepare Milk:** Pour your desired amount of cold or hot milk into the 12oz stainless steel frothing pitcher. For best results, use fresh, cold milk. Do not fill the pitcher more than one-third full to allow for foam expansion.
2. **Position Frother:** Submerge the whisk end of the frother into the milk, ensuring the whisk is fully immersed but not touching the bottom of the pitcher.
3. **Start Frothing:** Press the power button on the frother to start. The frother will begin to create foam.
4. **Frothing Technique:**
  - For a thick, creamy foam, keep the whisk just below the surface of the milk, allowing air to be incorporated.
  - Move the frother up and down gently to ensure even frothing throughout the milk.
  - Continue frothing for 15-30 seconds, or until the desired consistency is achieved.
5. **Stop Frothing:** Press the power button again to turn off the frother.
6. **Serve:** Gently tap the pitcher on a flat surface to remove any large air bubbles. Pour the frothed milk into your beverage. The pitcher's spout is designed for precise pouring, ideal for latte art.

# Froth with Ease

One-button operated  
for well frothing



Image: A close-up of the Maestri House rechargeable milk frother being used to froth milk in a small white cup, demonstrating its one-button operation for easy frothing.

# Be Your Own Barista Master

Make perfect latte or cappuccino



Image: A stainless steel milk frothing pitcher pouring frothed milk into a coffee cup, illustrating how to create latte art and become a barista master.

## Cleaning and Maintenance

Regular cleaning ensures the longevity and hygiene of your Maestri House frother and pitcher.

- **Frother Whisk:** Immediately after each use, rinse the whisk attachment under warm running water. You can briefly turn on the frother while the whisk is submerged in water to help clean it thoroughly.

- **Frother Handle:** Wipe the frother handle with a damp cloth. **Do not immerse the handle or charging port in water.**
- **Frothing Pitcher:** Wash the stainless steel pitcher with warm soapy water after each use. Use a soft sponge or cloth to prevent scratching. Rinse thoroughly and dry completely to prevent water spots.
- **Storage:** Store the frother and pitcher in a clean, dry place when not in use.

## Troubleshooting

Problem	Possible Cause	Solution
Frother not turning on.	Battery is low or depleted.	Charge the frother fully using the provided USB cable.
Frother not frothing milk effectively.	Insufficient battery charge; milk type or temperature; whisk attachment dirty or damaged.	Ensure frother is fully charged. Use fresh, cold milk (dairy or non-dairy). Clean the whisk attachment thoroughly. Ensure whisk is properly attached.
Frother stops unexpectedly.	Low battery; motor overload.	Recharge the frother. If frothing very thick liquids, try a smaller quantity or thinner consistency.

## Specifications

**Brand:** Maestri House

**Model:** B0DLGF1J24

**Special Feature:** Rechargeable

**Color:** Black (Frother) / Silver (Pitcher)

**Material:** Stainless Steel (Pitcher), Plastic/Metal (Frother)

**Pitcher Capacity:** 12oz

**Power Source:** Battery Powered (Rechargeable)

## Warranty and Customer Support

Maestri House products are designed for quality and durability. For information regarding returns or exchanges, please refer to the retailer's return policy where the product was purchased. Typically, products purchased on Amazon.com are eligible for return within 30 days of receipt for a full refund or replacement.

For further assistance, product inquiries, or technical support, please visit the official Maestri House Store on Amazon or contact their customer service directly through the platform.

[Visit the Maestri House Store on Amazon](#)