



Manuals.plus /

› FCXJTU /

› FCXJTU Digital Triple Kitchen Timer (Model FC003) User Manual

FCXJTU FC003

FCXJTU Digital Triple Kitchen Timer User Manual

Model: FC003 / YS318 | Brand: FCXJTU

1. INTRODUCTION

Thank you for choosing the FCXJTU Digital Triple Kitchen Timer. This versatile timer is designed to assist you with various timing needs, from cooking and baking to studying and exercise. Featuring three independent channels, a large display, adjustable alarm volume, and multiple placement options, it offers convenience and reliability.

Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

Independent 3-channels Timer



Count Down



Stopwatch



Memory Storage



Screen-off
Standby



Image 1.1: The FCXJTU Digital Triple Kitchen Timer in a kitchen setting, highlighting its independent 3-channel functionality for various tasks like cooking.

2. PACKAGE CONTENTS

- 1 x FCXJTU Digital Triple Kitchen Timer
- 2 x AAA Batteries
- 1 x User Manual

3. PRODUCT FEATURES

- **Triple Timer Functionality:** Three independent channels (T1, T2, T3) for simultaneous countdown or count-up.
- **Large LCD Screen:** Clear, high-contrast display with bold digits for easy readability.
- **Countdown & Stopwatch:** Functions as both a countdown timer (up to 99 hours, 59 minutes, 59 seconds) and a stopwatch.
- **Memory Function:** Stores the last countdown setting for quick reuse.
- **Adjustable Alarm:** Three volume levels (Loud, Medium, Mute) to suit different environments.
- **Flashing Light Indicator:** A red flashing light accompanies the alarm for visual notification.

- **Sleep Mode:** Conserves battery power when not in use.
- **Multiple Placement Options:** Features a strong magnetic back, a retractable stand, and a hanging hole.



Image 3.1: Detailed view of the timer's display and control buttons, including HR, MIN, SEC, M, Clear, ST/SP, and T1/T2/T3 selection buttons.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover downwards to open it.
3. Insert two AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Slide the cover back into place until it clicks securely.

Batteries Included



Image 4.1: The back of the timer, illustrating the battery compartment and overall dimensions.

4.2 Placement Options

The timer offers flexible placement options:

- **Magnetic Back:** Strong magnets allow attachment to metallic surfaces like refrigerators or oven doors.
- **Retractable Stand:** Pull out the stand on the back to place the timer upright on a countertop or table.
- **Hanging Hole:** Use the integrated hole to hang the timer on a hook.

Multiple Placement Options



Image 4.2: Various placement methods for the timer, including magnetic attachment, tabletop stand, and hanging.

5. OPERATING INSTRUCTIONS

5.1 Setting a Countdown Timer

1. Press the **T1**, **T2**, or **T3** button to select the desired timing channel. The selected channel's display will flash.
2. Press the **HR** button to set hours, **MIN** for minutes, and **SEC** for seconds. Hold down the buttons for faster adjustment.
3. Press the **ST/SP** button to start the countdown. The timer will begin counting down, and a small triangle icon will appear next to the active channel.
4. To pause the countdown, press **ST/SP** again. Press it once more to resume.
5. When the countdown reaches zero, an alarm will sound, and a red light will flash. The timer will then automatically start counting up (stopwatch mode) to show elapsed time since the alarm.
6. To stop the alarm and clear the timer, press the **Clear** button.

5.2 Using the Stopwatch Function

1. Ensure the desired channel (T1, T2, or T3) is cleared (displaying 0:00:00). If not, select the channel

and press **Clear**.

2. Press the **ST/SP** button to start the stopwatch. The timer will begin counting up from 0:00:00.
3. To pause the stopwatch, press **ST/SP** again. Press it once more to resume.
4. To reset the stopwatch to 0:00:00, press the **Clear** button while the stopwatch is paused or running.

5.3 Memory Function

The timer can store a frequently used countdown time.

1. Set a desired time on any channel (e.g., T1).
2. Long press the **M** button. The current time setting will be saved as the memory time.
3. To recall the memory time, simply press the **M** button. The saved time will appear on the selected channel.

5.4 Adjusting Alarm Volume

The alarm volume can be adjusted to three levels: Loud, Medium, or Mute.

1. On the side of the timer, locate the volume switch.
2. Slide the switch to select your preferred volume level.



Image 5.1: The side of the timer with the volume switch and a visual representation of the flashing light alarm.

5.5 Sleep Mode

To conserve battery life, the timer features a sleep mode.

1. To activate sleep mode, long press the **Clear** button until the display turns off.
2. To wake the timer, press any button.

6. MAINTENANCE

6.1 Cleaning

Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

6.2 Battery Replacement

When the display becomes dim or the timer functions erratically, it's time to replace the batteries. Follow the battery installation steps in Section 4.1.

6.3 Storage

If storing the timer for an extended period, remove the batteries to prevent leakage and damage to the device.

7. TROUBLESHOOTING

- **Timer not turning on:** Check if batteries are inserted correctly and are not depleted. Replace batteries if necessary.
- **Display is dim or blank:** Batteries may be low. Replace them. Ensure the timer is not in sleep mode (press any button to wake).
- **Alarm not sounding:** Check the volume switch on the side of the timer. Ensure it is not set to 'Mute'.
- **Buttons unresponsive:** Try removing and reinserting the batteries to reset the device.
- **Cannot decrease time when setting:** This model requires clearing the time and re-entering if you overshoot the desired value. There is no direct 'decrease' function.

8. SPECIFICATIONS

Feature	Specification
Brand	FCXJTU
Model Number	FC003 (also YS318)
Color	Green
Material	Plastic
Product Dimensions (L x W x H)	9.7 x 2.03 x 8.13 cm (3.82 x 0.8 x 3.2 inches)
Item Weight	77.1 g (2.72 ounces)
LCD Screen Size	5.8 cm (2.28 inches)
Max Time Setting	99 Hours, 59 Minutes, 59 Seconds
Power Source	2 x AAA Batteries (included)

9. WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any support inquiries, please refer to the retailer or manufacturer's contact information provided at the point of purchase.