



Manuals.plus /

› HANNLOMAX /

› HANNLOMAX HX-336CD CD Player with Alarm Clock Radio User Manual

## HANNLOMAX HX-336CD

# HANNLOMAX HX-336CD User Manual

CD Player with Alarm Clock Radio

## INTRODUCTION

---

Thank you for purchasing the HANNLOMAX HX-336CD CD Player with Alarm Clock Radio. This device combines a top-loading CD player, PLL AM/FM radio, Bluetooth connectivity, and a digital alarm clock with a vibrant RGB LED display. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your unit.

## PACKAGE CONTENTS

---

Upon unpacking, please ensure all items listed below are present:

- HANNLOMAX HX-336CD Unit
- User Manual
- AC Power Cord

If any items are missing or damaged, please contact customer support.

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components and features of your HANNLOMAX HX-336CD.



**Image:** Front view of the HANNLOMAX HX-336CD, showing the top-loading CD compartment, front RGB LED display, and control buttons. The display shows "12:13" in multi-colored digits.

- **Top-Loading CD Player:** For standard audio CDs.
- **1.2" RGB LED Display:** Large, multi-color display for time and function indicators.
- **Control Buttons:** Located on the top panel for various functions (e.g., Power, Play/Pause, Skip, Volume, Mode, Alarm, Snooze).
- **Built-in Speakers:** For audio output.
- **Aux-In Jack:** For connecting external audio devices.
- **AC Power Input:** Located at the rear for power connection.

## SETUP

---

### Power Connection

1. Uncoil the AC power cord.
2. Insert the small end of the AC power cord into the AC IN jack located on the back of the HX-336CD unit.
3. Plug the other end of the AC power cord into a standard wall outlet (AC 120V~60Hz).
4. The unit will power on and the display will illuminate.

### Antenna Setup (for Radio)

For optimal FM reception, extend the telescopic FM antenna fully. For AM reception, the unit has a built-in AM antenna; try rotating the unit for better reception if needed.

## OPERATING INSTRUCTIONS

---

### Basic Operation

- **Power On/Off:** Press the **POWER** button to turn the unit on or off.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the sound level.
- **Mode Selection:** Press the **MODE** button to switch between CD, FM Radio, AM Radio, Bluetooth, and Aux-In modes.

## CD Player Operation

1. Open the CD compartment lid by gently lifting it.
2. Place an audio CD onto the spindle with the label side facing up.
3. Close the CD compartment lid.
4. Press the **MODE** button to select CD mode. "CD" will appear on the display.
5. The CD will begin playing automatically. If not, press the **PLAY/PAUSE** button.
6. Press **SKIP FORWARD** or **SKIP BACKWARD** to navigate between tracks.
7. Press the **REPEAT** button to repeat the current track or all tracks.
8. Press the **STOP** button to stop CD playback.



**CD COMPARTMENT BACK LIGHT**

**Image:** Top view of the HANNLOMAX HX-336CD showing the CD compartment with a blue backlight, indicating the CD is active or the compartment is open. An inset shows a close-up of the illuminated CD area.

### **Radio Operation (AM/FM)**

1. Press the **MODE** button to select FM or AM radio mode.
2. Press and hold the **TUNE +** or **TUNE -** buttons to automatically scan for the next available station.
3. Press briefly to manually tune the frequency.
4. **Preset Stations:** To save a station, tune to the desired frequency, then press and hold the **PRESET** button until the preset number flashes. Use **SKIP FORWARD** or **SKIP BACKWARD** to select a preset number, then press **PRESET** again to confirm.
5. To recall a preset station, briefly press the **PRESET** button, then use **SKIP FORWARD** or **SKIP BACKWARD** to select the desired preset.

### **Bluetooth Operation**

1. Press the **MODE** button to select Bluetooth mode. "BT" will appear on the display and flash, indicating pairing mode.

2. Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for "HX-336CD".
3. Select "HX-336CD" from the list of available devices to pair. Once paired, "BT" will stop flashing and a confirmation tone may sound.
4. You can now play audio from your Bluetooth device through the HX-336CD. Use the controls on your device or the HX-336CD (Play/Pause, Skip) to control playback.

## Aux-In Operation

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN jack on the HX-336CD.
2. Connect the other end of the cable to the headphone jack or audio output of your external audio device (e.g., MP3 player, smartphone).
3. Press the **MODE** button to select Aux-In mode. "AUX" will appear on the display.
4. Control playback and volume from your external audio device.

## Clock and Alarm Settings

### 1. Setting the Clock:

- In standby mode, press and hold the **TIME SET** button. The hour digits will flash.
- Use the **HOUR** and **MINUTE** buttons to set the desired time.
- Press **TIME SET** again to confirm.
- The clock can also auto-sync with Bluetooth when connected to a device that provides time information.

### 2. Setting Alarms (Dual Alarm):

- In standby mode, press and hold **ALARM 1** or **ALARM 2** button. The alarm hour digits will flash.
- Use the **HOUR** and **MINUTE** buttons to set the alarm time.
- Press **ALARM 1/2** again to select the alarm source (Buzzer, Radio, or CD).
- Press **ALARM 1/2** one more time to confirm the alarm setting.

3. **Snooze Function:** When an alarm sounds, press the **SNOOZE** button to temporarily silence it for a few minutes.

4. **Sleep Function:** Press the **SLEEP** button repeatedly to set a sleep timer (e.g., 15, 30, 60, 90 minutes). The unit will automatically turn off after the set time.

## Display Dimmer and Color Options

The 1.2" RGB LED display offers various brightness levels and color options.

- **Dimmer:** Press the **DIMMER** button repeatedly to cycle through different brightness levels for the display.
- **RGB Color Changing:** The display can show time in 7 regular colors or 4 dynamic RGB color changing modes. Refer to the unit's specific controls for cycling through these color options, usually integrated with the dimmer or a dedicated color button.

### 7 Regular Colours



### 4 Dynamic RGB Colour Changing



**Image:** A visual representation of the HANNLOMAX HX-336CD's 1.2" RGB LED display, illustrating 7 regular static color options (red, blue, green, yellow, cyan, magenta, white) and 4 dynamic color-changing modes for the time digits.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Storage:** When not in use for extended periods, unplug the unit from the power outlet and store it in a cool, dry place.
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block ventilation openings.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not properly connected.	Ensure the AC power cord is securely plugged into the unit and the wall outlet. Check if the outlet is functional.
No sound from speakers.	Volume is too low or muted; incorrect mode selected.	Increase the volume. Press the <b>MODE</b> button to ensure the correct source (CD, Radio, BT, AUX) is selected.
CD skips or does not play.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD with a soft cloth. Try a different CD. Ensure the CD is placed correctly in the compartment.
Poor radio reception.	Antenna not extended or unit position.	Fully extend the FM telescopic antenna. For AM, rotate the unit to find the best reception. Move away from other electronic devices that may cause interference.
Bluetooth device cannot pair.	HX-336CD not in pairing mode; device too far; previously paired.	Ensure the HX-336CD is in Bluetooth mode and "BT" is flashing. Move your device closer. If previously paired, try unpairing and re-pairing.

## SPECIFICATIONS

Feature	Detail
Model Number	HX-336CD
Power Source	AC Operation Only
Display	1.2" RGB LED Display with Dimmer Function
CD Player	Top Loading, Program and Repeat Function
Radio	PLL AM/FM Radio with Preset Stations
Bluetooth	Yes, for audio streaming
Clock	Digital Clock, Auto Time Sync with Bluetooth
Alarm	Dual Alarm (Wake to Buzzer, Radio, or CD)
Connectivity	Aux-In Jack (3.5mm)
Dimensions (L x W x H)	8.31 x 7.17 x 3.23 inches
Weight	2.9 pounds
Manufacturer	Hannix Ltd.
Country of Origin	China

## WARRANTY AND SUPPORT

HANNLOMAX products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official HANNLOMAX website.

**Online Support:** Visit the HANNLOMAX Store on Amazon

Please have your model number (HX-336CD) and purchase information ready when contacting support.

