

CIARRA CABBIH4-E

CIARRA CABBIH4-E Induction Hob User Manual

Model: CABBIH4-E

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your CIARRA CABBIH4-E Induction Hob. Please read this manual thoroughly before installation, operation, or maintenance. Keep it for future reference.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not touch hot surfaces. Use handles or knobs.
- Supervise children closely when the appliance is in use. The hob includes a child safety lock function to prevent accidental operation.
- Do not operate the hob if the glass ceramic surface is cracked or broken. Contact service immediately.
- Only use cookware compatible with induction hobs (magnetic base).
- Avoid placing metallic objects like knives, forks, spoons, or lids on the hob surface as they can become hot.
- The hob features an automatic shut-off function if no pot is detected or if it overheats.
- Disconnect the appliance from the power supply before cleaning or maintenance.

3. PRODUCT OVERVIEW

The CIARRA CABBIH4-E is a built-in induction hob designed for efficient and fast cooking. It features four cooking zones and intuitive touch controls.

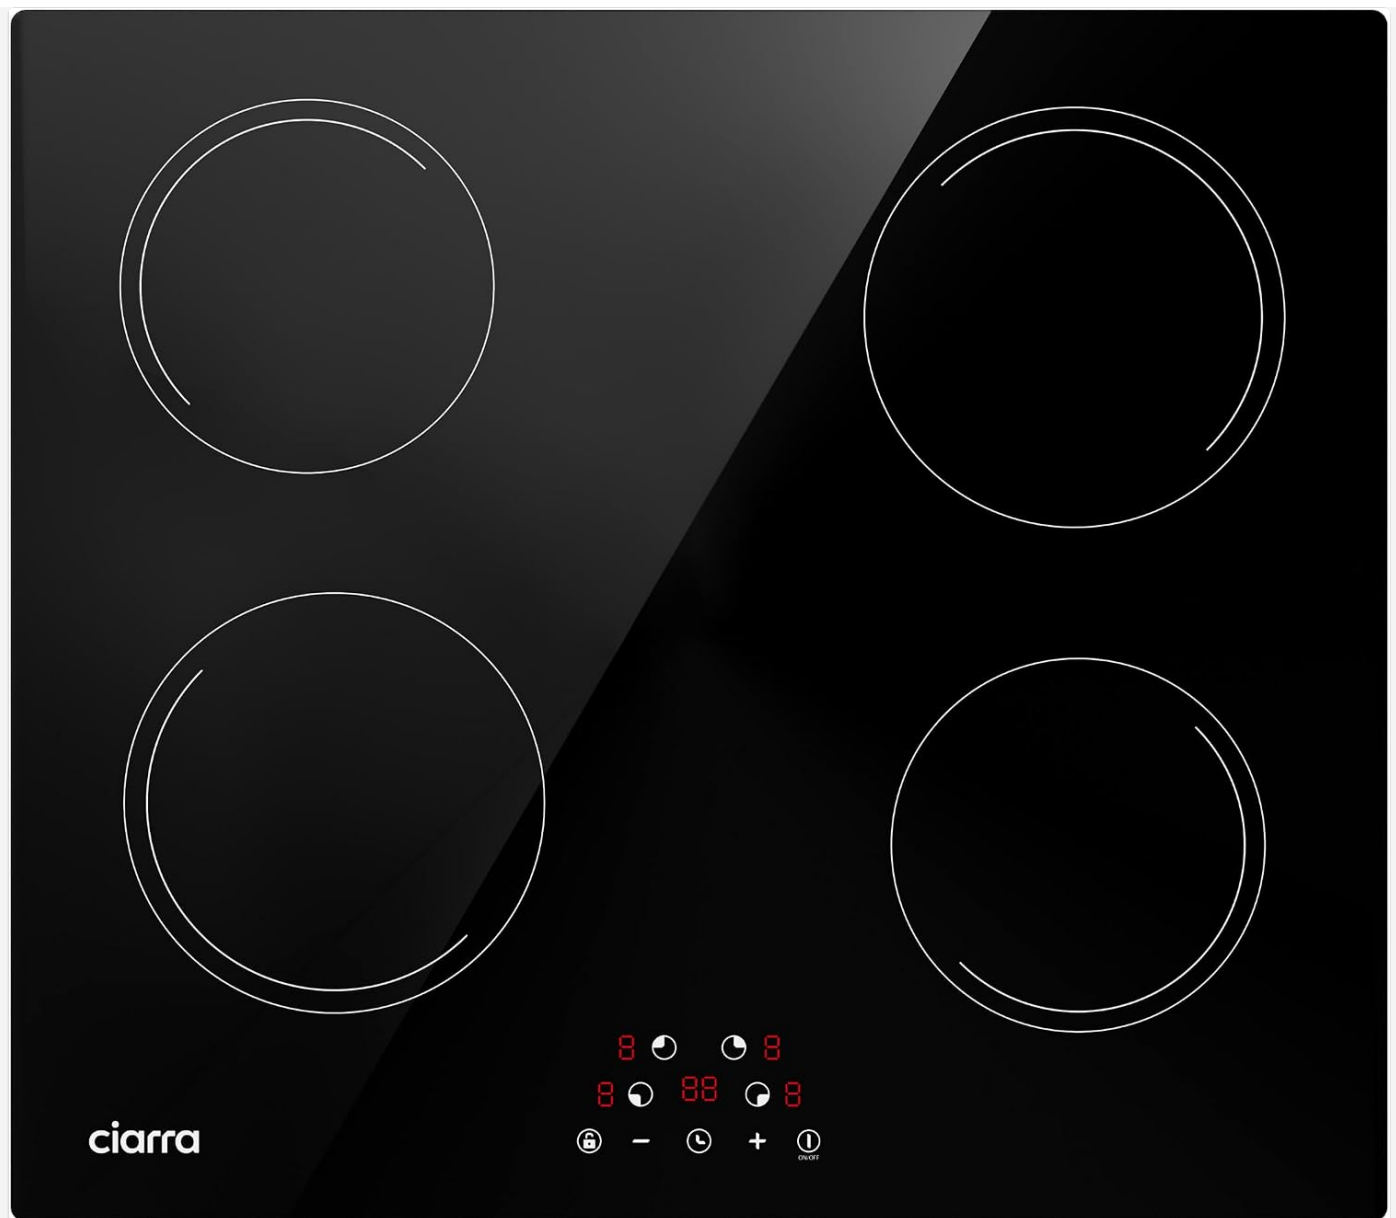


Figure 3.1: Top view of the CIARRA CABBIH4-E Induction Hob, showing the four cooking zones and the central touch control panel.

3.1. Key Features

- **4 Induction Cooking Zones:** Two 180mm zones (1800W each) and two 160mm zones (1200W each).
- **Touch Control Operation:** Easy and precise selection of power levels and functions.
- **9 Power Levels:** Offers versatile heat settings for various cooking needs.
- **Timer Function:** Individual timers for each cooking zone (1 to 99 minutes).
- **Child Lock:** Locks the control panel to prevent unintended operation.
- **Automatic Shut-Off:** Safety feature for unattended operation or overheating.
- **Residual Heat Indicator:** Alerts when a cooking zone is still hot.
- **Easy-to-Clean Surface:** Smooth glass ceramic, stain and scratch resistant.

4. SETUP AND INSTALLATION

The CIARRA CABBIH4-E is a built-in appliance. Proper installation is crucial for safety and performance. It is recommended that installation be performed by a qualified professional.

4.1. Dimensions and Cut-out Size

Ensure your kitchen countertop has the correct dimensions for installation.

- **Product Dimensions:** 52 cm (Depth) x 59 cm (Width) x 5.8 cm (Height)
- **Cut-out Dimensions:** 56 cm (Width) x 49 cm (Depth)

Built-in Design

Set into the cooktop of you kitchen, saving space for your kitchen

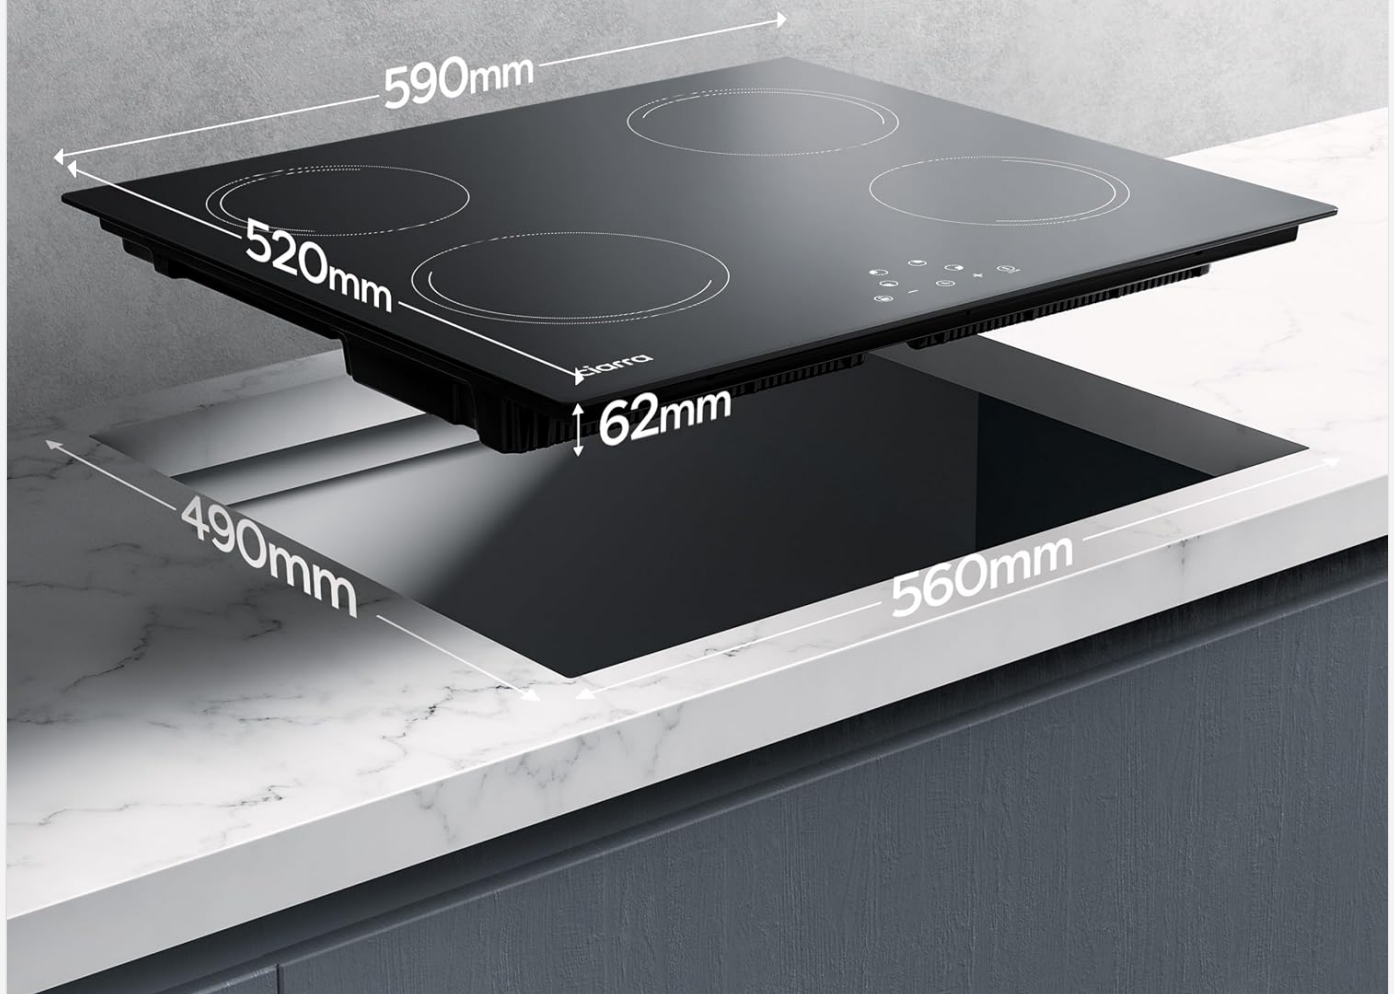


Figure 4.1: Diagram illustrating the built-in design and required dimensions for installation, showing the hob's overall size (590mm x 520mm) and the necessary cut-out size (560mm x 490mm) with a height of 62mm from the bottom of the hob to the top surface.

4.2. Electrical Connection

The hob requires a 220 Volts power supply with a total wattage of 6000 Watts. The cables are prepared for single-phase connection with earthing. Consult a qualified electrician for proper wiring and connection to your household electrical system.

5. OPERATING INSTRUCTIONS

5.1. Compatible Cookware

Induction hobs require cookware with a magnetic base. Compatible materials include:

- Stainless Steel with Magnetic Bottom
- Magnetic Pot
- Cast Iron Pan
- Cast Iron Wok

Incompatible materials include enamel, copper/aluminum, ceramics, and glass without a magnetic base.



Figure 5.1: Visual guide to cookware compatibility, showing various types of magnetic cookware (stainless steel, magnetic pot, cast iron pan, cast iron wok) as compatible, and non-magnetic types (enamel, copper/aluminum, ceramics, glass) as incompatible. The hob is compatible with 12-26 cm diameter cookware.

5.2. Basic Operation

1. **Power On/Off:** Press the On/Off button (usually indicated by a circle with a vertical line) to turn the hob on or off.
2. **Select Cooking Zone:** Once powered on, select the desired cooking zone by touching its corresponding control.

3. **Adjust Power Level:** Use the '+' and '-' buttons to adjust the power level from 1 to 9.

Touch Control

Easily select the required power



Figure 5.2: A hand demonstrating the touch control operation on the hob's panel, highlighting the ease of selecting desired power levels and functions.

5.3. Timer Function

Each cooking zone has an independent timer:

1. Select the cooking zone you wish to set a timer for.
2. Press the Timer button (often indicated by a clock icon).
3. Use the '+' and '-' buttons to set the desired cooking time (1 to 99 minutes).
4. The hob will automatically switch off the zone once the set time expires.

Timer Function

Set the time: 99 min



Figure 5.3: The hob displaying a set timer of 30 minutes, with a pot and pan on the cooking zones, illustrating the timer function in action.

5.4. Child Lock

To activate the child lock:

1. Ensure the hob is turned on but no cooking zones are active.
2. Press and hold the Child Lock button (often indicated by a lock icon) for a few seconds until the indicator lights up.
3. To deactivate, press and hold the Child Lock button again until the indicator turns off.

Child Safety



Figure 5.4: A child observing the induction hob from a safe distance, emphasizing the importance and presence of the child safety lock feature.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your induction hob.

- Always ensure the hob is cool and disconnected from the power supply before cleaning.
- Wipe the glass ceramic surface with a damp cloth and a mild detergent.
- For stubborn stains, use a specialized ceramic hob cleaner.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals that can scratch the surface.
- Dry the surface thoroughly after cleaning to prevent water spots.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child lock activated.	Check power connection; Deactivate child lock.
Cooking zone not heating.	Incompatible cookware; No pot detected; Overheating.	Use induction-compatible cookware; Place pot centrally; Allow hob to cool down.
Display shows an error code.	Internal fault; Sensor issue.	Turn off the hob, wait a few minutes, then restart. If the error persists, contact customer support.
Unusual noise during operation.	Normal fan operation; Cookware vibration.	A slight humming sound from the cooling fan is normal. Some cookware may vibrate slightly. This is not a fault.

8. SPECIFICATIONS

Feature	Detail
Brand	CIARRA
Model	CABBIH4-E
Installation Type	Built-In
Product Dimensions (L x W x H)	52 x 59 x 5.8 cm
Item Weight	8.86 Kilograms
Heating Elements	4 Induction Zones
Power (Total)	6000 Watts
Voltage	220 Volts
Material Type	Ceramic glass
Color	Black
Special Features	Safety Lock, Timer, Automatic Shut-Off, Residual Heat Indicator, Touch Operation

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact CIARRA customer service directly.

- **Warranty:** Check your purchase receipt or product packaging for specific warranty terms and duration.
- **Customer Service:** For technical assistance, spare parts, or service requests, please visit the official CIARRA website or contact their authorized service centers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question