

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Silvergear](#) /

› [Silvergear Retro Foldable Portable Gaming Console \(Model 4660\) User Manual](#)

Silvergear 4660

Silvergear Retro Foldable Portable Gaming Console (Model 4660) User Manual

Comprehensive instructions for setup, operation, and maintenance.

INTRODUCTION

The Silvergear Retro Foldable Portable Gaming Console brings the nostalgia of classic 8-bit games directly to your pocket. This mini gaming console features 240 pre-installed games, offering entertainment anywhere, anytime. With its 2.8-inch screen and lightweight, foldable design, it is ideal for on-the-go gaming. Enjoy an immersive gaming experience with extended battery life thanks to its rechargeable 3.7V 500mAh lithium-ion battery.

1. SETUP

- Unpack the Console:** Carefully remove the Silvergear foldable retro portable gaming console and all accessories from its packaging.
- Charge the Battery:** Connect the provided USB cable to the console's charging port and to a compatible USB power source (e.g., computer, USB wall adapter). The console uses a rechargeable 3.7V 500mAh lithium-ion battery. Allow sufficient time for a full charge before first use.



Image: The Silvergear Retro Foldable Portable Gaming Console in its open position, displaying a game on its screen.

2. OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the power switch, usually on the side of the console. Slide it to the "ON" position to power on the device. To power off, slide it to the "OFF" position.
2. **Select a Game:** Once powered on, navigate through the list of 240 pre-installed 8-bit games using the directional pad (D-pad) and selection buttons.
3. **Start Playing:** Select your desired game and press the "Start" button to begin.
4. **Game Controls:** Use the D-pad for movement and the action buttons (A, B, X, Y) for in-game actions. The "Reset" button can be used to restart the current game or return to the game selection menu.
5. **Pause/Stop Game:** To pause or stop a game, press the corresponding buttons as indicated within the game or use the "Reset" button to exit to the main menu.
6. **Folding the Console:** For portability, gently fold the screen down until it clicks into place, closing the console.



Image: An angled view of the Silvergear Retro Foldable Portable Gaming Console, showing its open position and controls.



Image: A collage of four different 8-bit game screenshots, demonstrating the variety of pre-installed games.

3. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the console's exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the console regularly, even if not in use for extended periods.
- **Avoid Moisture:** Keep the console away from water and high humidity to prevent damage to internal components.



Image: The back view of the Silvergear Retro Foldable Portable Gaming Console, showing the Silvergear logo and its closed, compact form.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Console does not turn on.	Battery is discharged.	Charge the console using the USB cable. Ensure the power switch is in the "ON" position.
Screen is blank or frozen.	Console is not powered on, or a game has crashed.	Ensure the console is powered on and charged. If a game is frozen, press the "Reset" button or power cycle the console (turn off, then on again).
No sound.	Volume is too low or muted.	Adjust the volume using the dedicated volume controls on the console.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try restarting the console. Ensure the battery is sufficiently charged.

5. SPECIFICATIONS

- **Model Number:** 4660
- **Brand:** Silvergear
- **Material:** Plastic
- **Form Factor:** Portable, Foldable
- **Screen Size:** 2.8 Inches
- **Pre-installed Games:** 240 (8-bit classics)
- **Battery:** 3.7V 500mAh Lithium-ion (Rechargeable)
- **Power Source:** Battery Powered
- **Controller Type:** Button Control (D-pad, A, B, X, Y, Start, Reset)
- **Number of Players:** 1
- **Hardware Interface:** Headphone Jack (implied)
- **Approximate Dimensions (Folded):** 19 x 12 x 4 cm
- **Approximate Weight:** 457g (from product description)

6. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical support, please refer to the documentation included with your purchase or visit the official Silvergear website. You may also contact Silvergear customer service directly for assistance with any issues or questions regarding your console.