

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BarcaLounger](#) /

› [BarcaLounger Lloyd Power Lift Recliner Instruction Manual](#)

BarcaLounger Lloyd (Model: 23PHLH-1444-2145-93)

BarcaLounger Lloyd Power Lift Recliner Instruction Manual

Model: Lloyd (23PHLH-1444-2145-93) | Brand: BarcaLounger

INTRODUCTION

Thank you for choosing the BarcaLounger Lloyd Power Lift Recliner. This manual provides essential information for the safe and efficient use of your new recliner. Please read it thoroughly before assembly and operation, and retain it for future reference.

Key Features:

- Dual motor power lift and recline mechanism
- Independent power headrest and power lumbar support
- Steel seat box for enhanced durability
- Chaise bucket seat design for full leg support
- 3-zone heating in back, seat, and footrest
- Hand control wand with integrated USB port
- Convenient side pocket for storage
- Weight capacity: 350 pounds

SETUP AND ASSEMBLY

Before beginning assembly, ensure all components are present and undamaged. It is recommended to have two people for assembly.

Assembly Steps:

1. Carefully unpack all parts from the packaging. Place the base of the recliner on a soft, clean surface to prevent damage.
2. Attach the backrest to the base by aligning the metal brackets on the backrest with the receivers on the base. Push down firmly until the backrest locks into place.
3. Connect any electrical cables located at the back or underside of the recliner. Ensure all connections are secure.
4. Connect the power adapter to the recliner's power input and then plug it into a grounded electrical outlet.

5. Test all functions using the hand control wand to ensure proper operation.



The BarcaLounger Lloyd Power Lift Recliner in a living room setting, showcasing its design and fabric.



A side view of the BarcaLounger Lloyd Power Lift Recliner, highlighting its sturdy base and reclining mechanism.

OPERATING INSTRUCTIONS

Your recliner is equipped with a hand control wand to manage all its functions.

Hand Control Wand Functions:

- **Power Lift:** Press and hold the 'Lift' button to gently raise the chair to an assisted standing position.
- **Power Recline:** Press and hold the 'Recline' button to smoothly recline the backrest and extend the footrest. Release the button at your desired position.
- **Power Headrest:** Use the dedicated headrest buttons to adjust the angle of the headrest for optimal neck and head support.
- **Power Lumbar:** Use the dedicated lumbar buttons to adjust the lumbar support for personalized comfort.
- **3-Zone Heating:** Activate and adjust the heating elements in the back, seat, and footrest using the corresponding buttons on the wand.
- **USB Port:** The integrated USB port allows you to charge your electronic devices while relaxing.
- **All Close Button:** Press this button to return the recliner to its fully upright, closed position.

MAINTENANCE

Proper maintenance will extend the life and appearance of your recliner.

General Care:

- **Cleaning:** For fabric upholstery, vacuum regularly to remove dust and debris. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals.
- **Mechanism:** Periodically check all nuts and bolts to ensure they are tight. Do not lubricate the mechanism unless specifically instructed by a qualified technician.
- **Electrical Components:** Keep all electrical cords and connections away from moisture and heat. Do not attempt to repair electrical components yourself.
- **Placement:** Position the recliner at least 15 inches from a wall to allow for full recline. Avoid direct sunlight to prevent fading.

TROUBLESHOOTING

If you encounter any issues with your recliner, refer to the following common problems and solutions:

- **Recliner does not operate:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check that all internal electrical connections within the recliner are properly connected.
- Verify the power switch (if present) on the recliner's power supply is in the 'ON' position.

- **Recliner makes unusual noises:**

- Check for any loose hardware and tighten if necessary.
- Ensure no objects are obstructing the reclining mechanism.

- **USB port not charging:**

- Confirm the recliner is powered on and plugged in.
- Try a different USB cable or device to rule out a faulty accessory.

If these steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

Brand	BarcaLounger
Model Name	Lloyd
Item Model Number	23PHLH-1444-2145-93
Color	Stonewash-dove
Product Dimensions	40.5"D x 34.5"W x 42"H
Material	Textile
Back Style	Bucket Seat Design
Arm Style	Armless

Seat Height	20 Inches
Seat Depth	20.5 Inches
Arm Height	25 Inches
Leg Style	Straight Leg
Reclining Position Count	3
Item Weight	138 pounds
Wall Proximity	15"
UPC	850063215602

WARRANTY AND SUPPORT

BarcaLounger is committed to providing quality products and customer satisfaction.

Returns:

This product is eligible for 30-day easy returns. Please refer to your purchase documentation for specific return policy details.

Customer Support:

For any questions, assistance with assembly, operation, or troubleshooting, please contact BarcaLounger customer support. Contact information can typically be found on the product packaging or the official BarcaLounger website.