

[Manuals.plus](#) /

› [Briloner](#) /

› BRILONER Rechargeable Touch Dimmable LED Wall Lamp - Instruction Manual (Model 3807015)

Briloner 3807015

BRILONER Rechargeable Touch Dimmable LED Wall Lamp

Model: 3807015 - Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the BRILONER Rechargeable Touch Dimmable LED Wall Lamp, Model 3807015. This versatile lamp offers cordless operation, adjustable brightness, and a modern design, suitable for various indoor and outdoor settings. Please read these instructions carefully before installation and use to ensure safe and optimal performance.

SAFETY INSTRUCTIONS

- Ensure the lamp is fully charged before first use.
- Do not expose the lamp to extreme temperatures or direct sunlight for prolonged periods.
- Keep out of reach of children.
- Do not attempt to open or repair the lamp yourself, except for battery and LED module replacement as described in this manual.
- Use only the provided USB-C cable or a certified equivalent for charging.
- Avoid contact with water or other liquids, especially during charging, unless specifically designed for wet environments (this lamp is rated for indoor/outdoor use, but avoid submersion).

PACKAGE CONTENTS

Please check that all items are present:

- 1 x BRILONER Rechargeable LED Wall Lamp
- 1 x USB-C Charging Cable (0.5m)
- Mounting Accessories (screws, wall plugs)

SETUP AND INSTALLATION

The BRILONER wall lamp is designed for easy installation. No complex assembly is required for the lamp unit itself.

1. **Charge the Lamp:** Before mounting, fully charge the lamp using the provided USB-C cable. Connect the cable to the lamp's USB-C port and to a standard USB power adapter (not included). The charging indicator will show the status.
2. **Select Mounting Location:** Choose a suitable indoor or outdoor wall location. Ensure the surface is clean and capable of supporting the lamp's weight.
3. **Mark Drilling Points:** Use the lamp's mounting plate as a template to mark the drilling points on the wall.
4. **Drill Holes:** Drill holes at the marked points and insert the wall plugs (if necessary for your wall type).
5. **Mount the Lamp:** Secure the lamp to the wall using the provided screws.

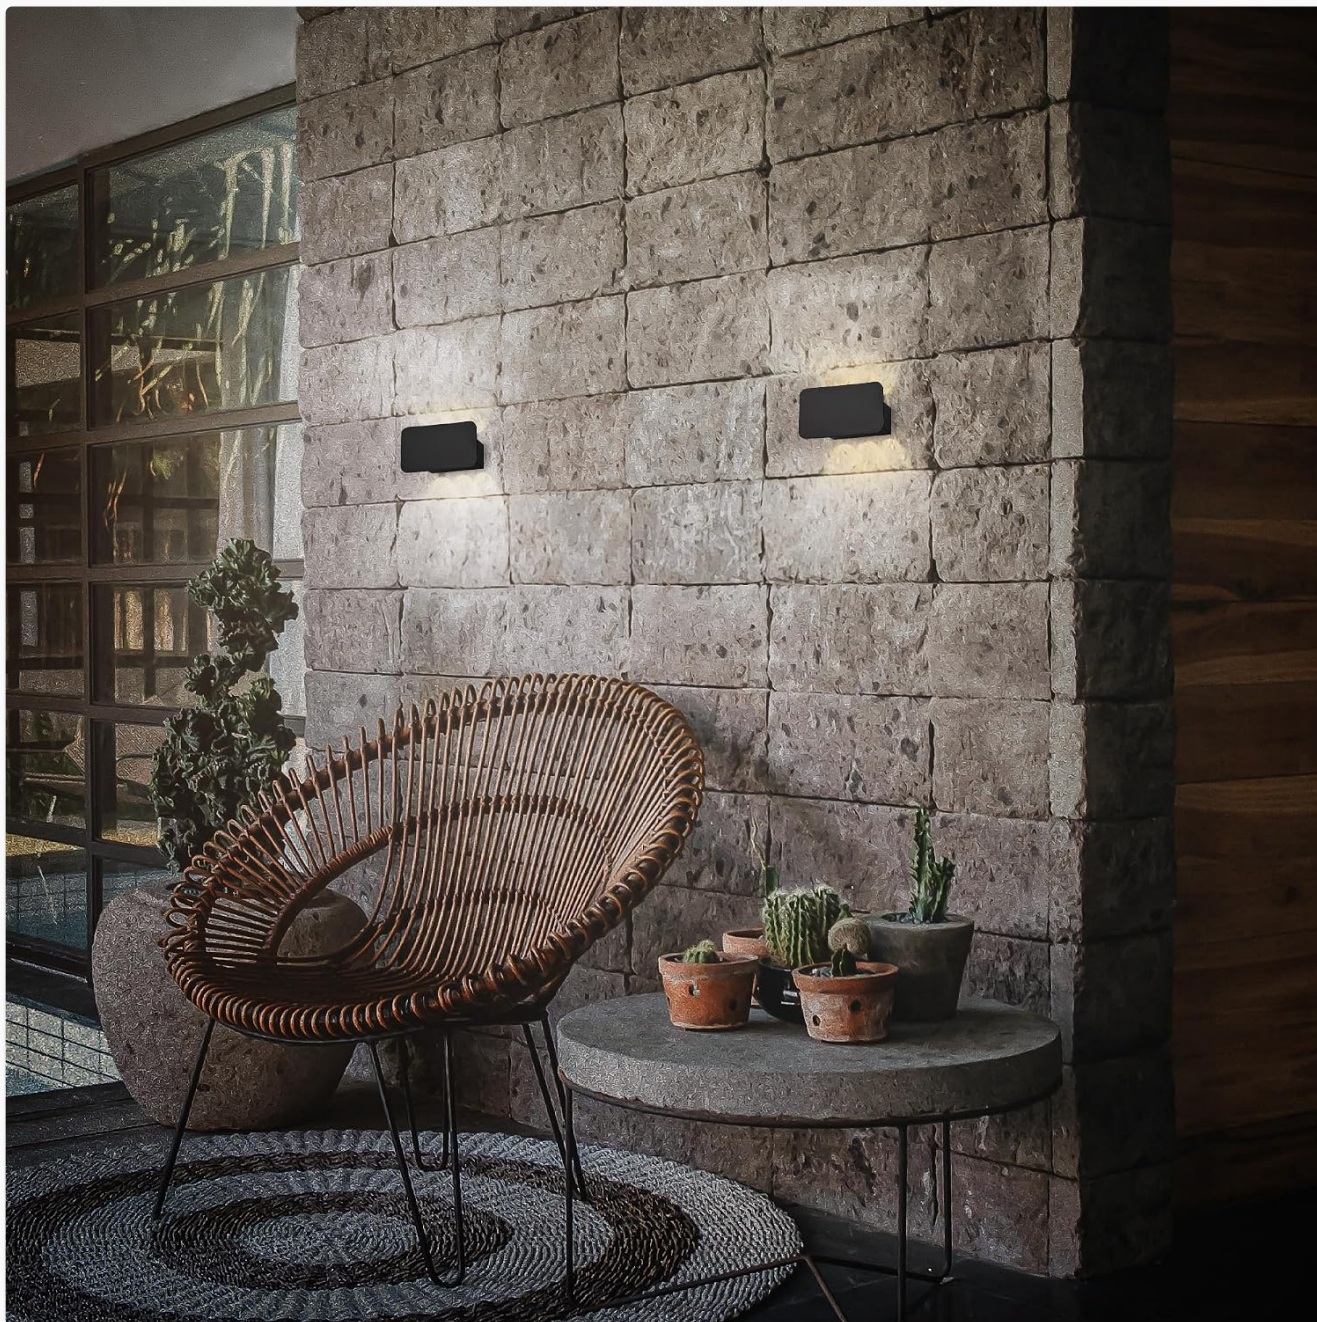 


Image: Two BRILONER wall lamps mounted on a textured stone wall, providing indirect lighting to an outdoor seating area.



Image: A BRILONER wall lamp installed in a contemporary indoor setting, demonstrating its indirect lighting effect.

OPERATING INSTRUCTIONS

The BRILONER wall lamp features intuitive touch control and a mechanical switch for battery protection.

- **Power On/Off:** Locate the mechanical ON/OFF switch, typically on the side or back of the lamp. This switch protects against deep discharge of the battery. Ensure it is in the 'ON' position for operation.
- **Touch Dimming:** The lamp is equipped with a 3-step touch dimmer. Gently touch the designated area on the lamp's surface to cycle through brightness levels: 100% → 50% → 15% → OFF.
- **Charging:** When the battery is low, connect the supplied USB-C cable to the lamp's charging port and a USB power source. The lamp can be used while charging.



Image: Key features of the BRILONER lamp, including cordless operation, warm white light, USB-C charging, and touch dimming.

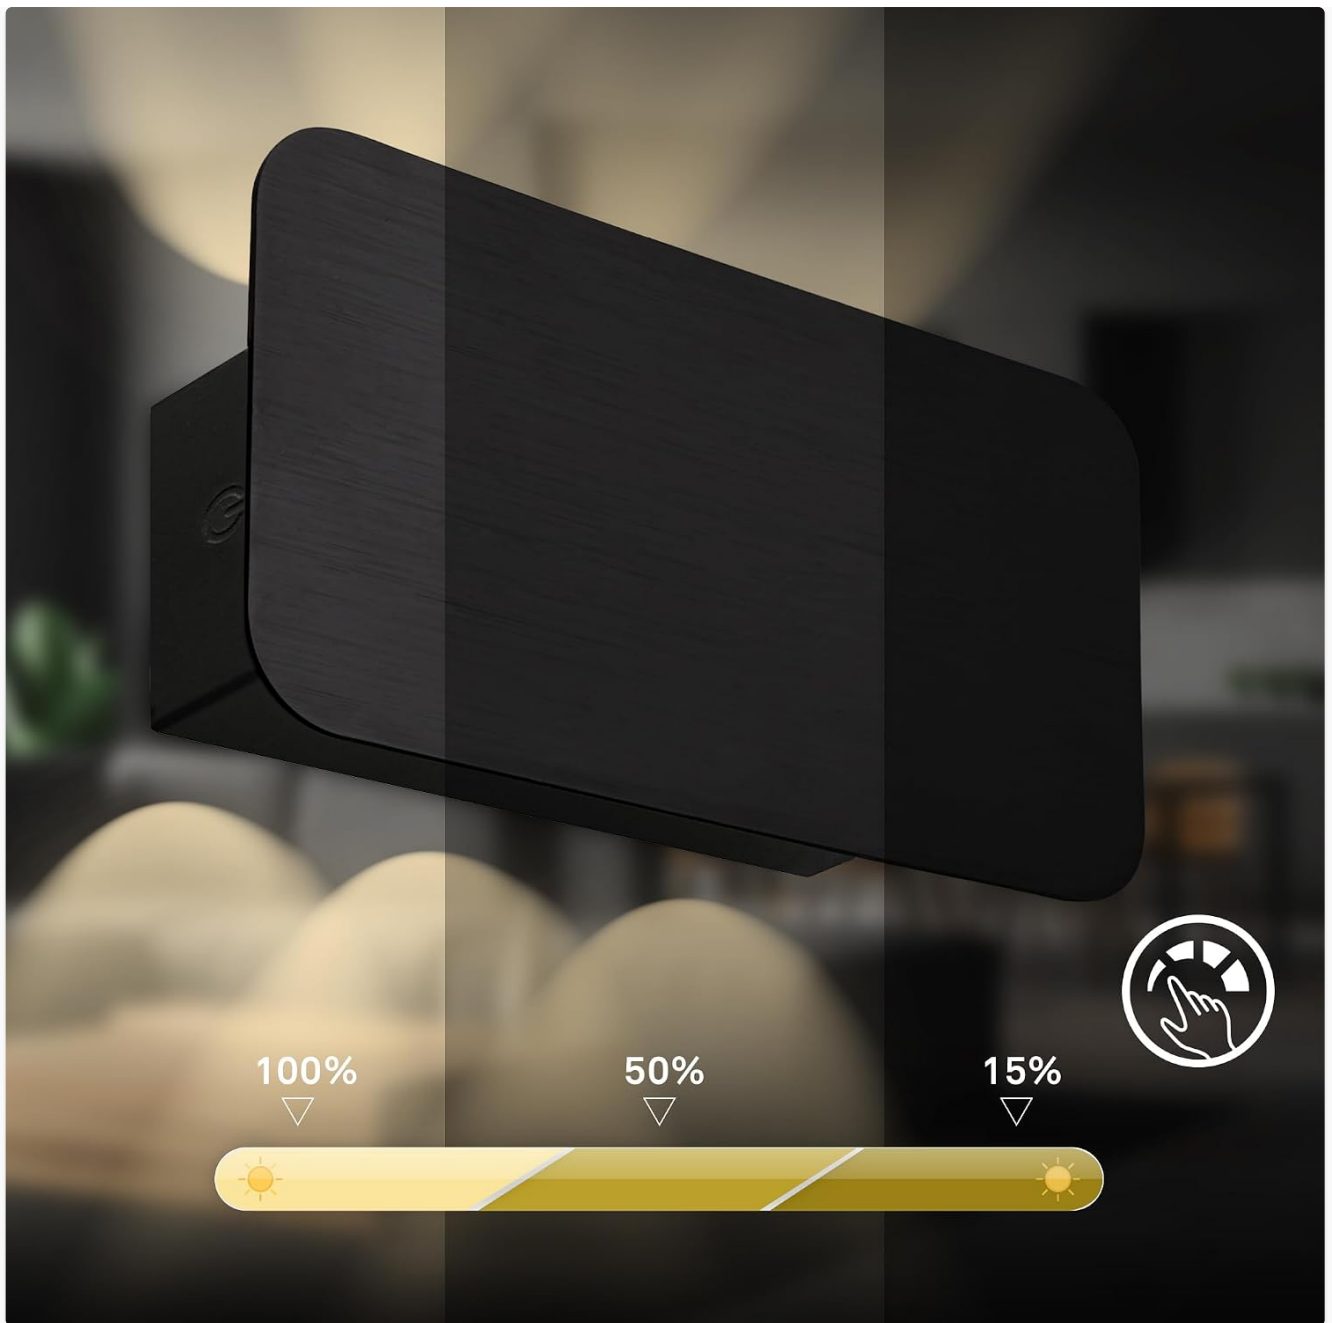 


Image: Illustration of the touch dimming feature, allowing adjustment to 100%, 50%, or 15% brightness.



Akku und
Lichtquelle tauschbar



On/Off
Schalter gegen Tiefenentladung



USB-C

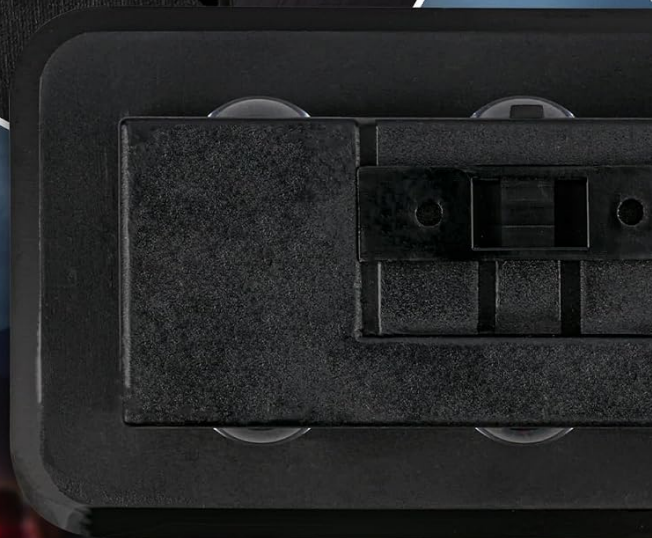 


Image: Detailed view of the lamp's rear, showing the replaceable battery/LED module, on/off switch, and USB-C charging port.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your BRILONER wall lamp.

- **Cleaning:** Wipe the lamp's surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** The integrated rechargeable battery is designed to be replaceable. If battery life significantly decreases, consult the manufacturer's guidelines or a qualified technician for replacement.
- **LED Module Replacement:** The LED print plate is also replaceable, contributing to the lamp's extended lifespan. For replacement, contact customer support or a qualified electrician.



Image: Features emphasizing the lamp's sustainable design, including replaceable components and repairability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on	Battery is depleted; Mechanical switch is OFF	Charge the lamp; Ensure mechanical switch is in 'ON' position
Dimming function not working	Incorrect touch area; Sensor obstruction	Ensure you are touching the correct sensor area; Clean the lamp surface
Short battery life	Battery not fully charged; Battery degradation	Ensure full charge cycle; Consider battery replacement if degradation is significant

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	3807015
Product Dimensions (L x W x H)	17 x 9 x 4.5 cm
Weight	309 g
Light Source	3W LED print plate
Luminous Flux	300 lumens
Color Temperature	2700K (Warm White)
Dimming	3-step touch dimmer (100%, 50%, 15%)
Power Source	Integrated Rechargeable Battery
Charging Port	USB-C
Material	Metal, Polycarbonate (PC)
Color	Black
Usage Environment	Indoor, Outdoor (Residential)

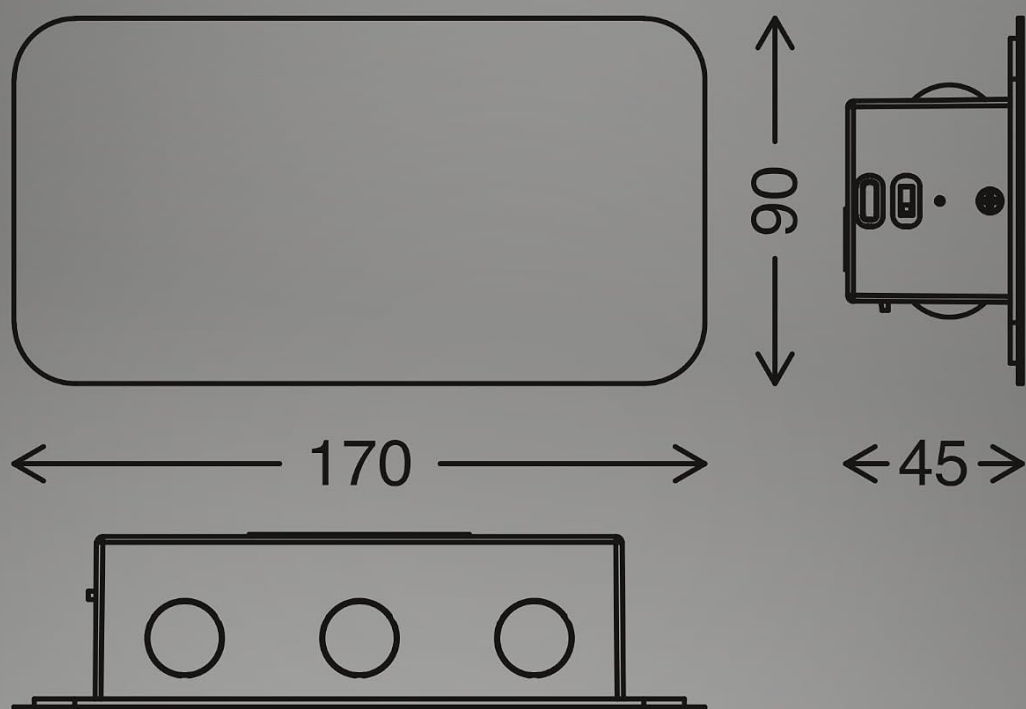 


Image: Dimensional drawing of the BRILONER wall lamp, with measurements in millimeters.

WARRANTY AND SUPPORT

BRILONER, a German family business since 1978, stands behind the quality of its lighting solutions. For warranty claims, technical support, or inquiries regarding replaceable parts (battery, LED module), please contact your retailer or visit the official BRILONER website for customer service information.