

**zx942**

# Generic zx942 Fixed Wall Mount Instruction Manual

For JVC F4232 and LT-32VF42L Televisions

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your Generic zx942 Fixed Wall Mount. This durable and sleek wall mount is designed to securely hold your television, creating a clean and modern aesthetic in your home or office. It offers universal compatibility, including specific models such as JVC F4232 and LT-32VF42L.

Please read this manual thoroughly before installation and retain it for future reference.

## 2. SAFETY INFORMATION

**WARNING: Improper installation may result in serious personal injury and property damage. If you do not understand these instructions or have doubts about the safety of the installation, please contact a qualified professional installer.**

- Verify that the mounting surface can safely support the combined weight of the mount and the television.
- Do not exceed the maximum weight capacity of 1000 kg (2200 lbs) for this mount. *Note: This weight capacity is exceptionally high; always verify your TV's actual weight and ensure it is well within the mount's stated limit.*
- Use only the provided mounting hardware. If your installation requires different hardware, consult a professional.
- Ensure all screws are tightened securely but do not overtighten.
- Keep children and pets away during installation.

## 3. PACKAGE CONTENTS

Please check to ensure all components are present and undamaged before beginning installation.

- Wall Plate (1)
- TV Brackets (2)
- Mounting Hardware Kit (screws, anchors, washers)
- Integrated Bubble Level (1)
- Instruction Manual (this document)

## 4. SETUP (INSTALLATION)

Follow these steps carefully for a secure installation.

## 1. Prepare the Wall:

Determine the desired height and location for your television. Use a stud finder to locate wall studs if mounting on drywall. Mark the drilling points for the wall plate.

## 2. Attach Wall Plate:

Drill pilot holes at the marked locations. Secure the wall plate to the wall using the appropriate screws and anchors from the hardware kit. Use the integrated bubble level to ensure the wall plate is perfectly horizontal before tightening all screws.

## 3. Attach TV Brackets to Television:

Carefully place your television face down on a soft, clean surface. Attach the two TV brackets to the back of your television using the screws that fit your TV's VESA mounting holes. Ensure the brackets are oriented correctly and are securely fastened.

## 4. Mount Television to Wall Plate:

With assistance, carefully lift the television and hook the TV brackets onto the wall plate. Ensure both brackets are properly seated on the wall plate.

## 5. Engage Safety Locks:

Locate the safety locks on the TV brackets. Engage these locks to prevent accidental detachment of the television from the wall plate. Refer to the detailed diagrams in the included installation guide for specific lock mechanism operation.



Image 1: Overview of the Generic zx942 Fixed Wall Mount components and an assembled view. This image illustrates the main bracket and how it connects to the television.

## 5. OPERATING

Once installed, the Generic zx942 is a fixed wall mount, meaning it holds your television in a static position. There are no moving parts for adjustment after installation. Ensure the safety locks are engaged to maintain the television's secure position.

To remove the television, disengage the safety locks and carefully lift the television off the wall plate with assistance.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mount. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Periodically inspect all mounting screws and connections to ensure they remain tight and secure. Check for any signs of wear or damage to the mount.
- Do not attempt to modify the mount. Any modifications will void the warranty and could compromise safety.

## 7. TROUBLESHOOTING

---

## Issue: Television is not level.

**Solution:** If the television appears unlevel after installation, it indicates the wall plate was not perfectly horizontal. Carefully remove the television, loosen the wall plate screws, adjust the wall plate using the bubble level, and re-tighten the screws before re-mounting the television.

## Issue: Television feels loose on the mount.

**Solution:** Ensure that the safety locks on the TV brackets are fully engaged. Also, check that all screws attaching the TV brackets to the television and the wall plate to the wall are securely tightened.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand Name	Generic
Manufacturer Model	zx942
ASIN	B0DLJC67RX
Mounting Type	Wall Mount
Movement Type	Fixed
Material	High-quality, Heavy-duty Steel
Maximum Weight Capacity	1000 kg (2200 lbs)
Distance from Wall	1.2 inches (Ultra-slim design)
Special Features	Integrated bubble level, Safety locks

## 9. WARRANTY AND SUPPORT

---

This Generic zx942 Fixed Wall Mount comes with a two-year warranty, as indicated in the product title. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or assistance with installation, please contact the retailer or manufacturer directly. Contact information may be available on the product packaging or the retailer's website.