

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER Steam Iron Instruction Manual](#)

BLACK+DECKER ICR004B

BLACK+DECKER Steam Iron Instruction Manual

Model: ICR004B

INTRODUCTION

The BLACK+DECKER Steam Iron with Retractable Cord is designed to combat wrinkles effectively and efficiently. Featuring a durable stainless steel soleplate, powerful steam options, and convenient storage, this iron simplifies your garment care routine. This manual provides essential information for safe and optimal use of your new steam iron.





Figure 1: Front view of the BLACK+DECKER Steam Iron.

SETUP

1. **Unpacking:** Carefully remove the iron and all accessories from the packaging. Inspect for any damage.
2. **Water Tank Fill:** Ensure the iron is unplugged and cool. Open the water fill cover located on top of the iron. Fill the 250ml water tank with tap water up to the 'MAX' line. Close the cover securely.
3. **Cord Extension:** The iron features an 8-foot retractable cord. Gently pull the cord from the base until it reaches the desired length. Do not force the cord beyond its maximum extension.
4. **Power Connection:** Plug the iron into a standard electrical outlet. The indicator light will illuminate, signaling that the iron is heating up.
5. **Temperature Selection:** Rotate the temperature dial to the appropriate setting for your fabric type. Refer to the fabric guide in the Operating section for recommended settings.

Anti-Drip Design Prevents Unwanted Dripping During Use



Figure 2: Demonstrating the retractable cord feature for easy storage.

OPERATING INSTRUCTIONS

- **Heating Up:** Allow the iron to heat to the selected temperature. The indicator light will turn off when the desired temperature is reached.
- **Steam Function:** For steam ironing, ensure the water tank is filled and the temperature is set to a steam-compatible fabric setting (usually higher temperatures). Press the steam button for a burst of steam (13g/min steam rate) to remove stubborn wrinkles.
- **Spray Mist:** Use the ergonomic spray mist button to lightly dampen fabrics for easier wrinkle removal.
- **Vertical Steaming:** The iron supports vertical steaming for garments on hangers or draperies. Hold the iron upright and press the steam button to release steam.
- **Anti-Drip System:** The anti-drip system prevents water spotting at lower temperatures, ensuring clean results.
- **Auto Shut-off:** For safety, the iron features a 3-way auto shut-off. It will automatically turn off if left motionless for a period of time (e.g., on its soleplate or side).



Figure 3: Utilizing the vertical steam function for hanging garments.



Figure 4: The iron's powerful steam burst in action.

MAINTENANCE

Regular maintenance ensures the longevity and performance of your BLACK+DECKER Steam Iron.

- **Auto Clean System:** The Auto Clean selector helps prevent mineral buildup. Refer to the user manual for detailed instructions on activating this feature. This system uses hot water and steam to flush out mineral deposits from the vents.
- **Draining Water Tank:** After each use, unplug the iron and allow it to cool completely. Empty any remaining water from the tank to prevent mineral buildup and odors.
- **Soleplate Cleaning:** The premium stainless steel soleplate is designed for durability. For minor residue, wipe with a damp cloth after the iron has cooled. For stubborn stains, use a non-abrasive iron cleaner according to its instructions.
- **Storage:** Once cool and empty, retract the cord fully into the base. Store the iron upright in a safe, dry place.



Figure 5: Activating the Automatic Clean System.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron not heating	Not plugged in, power outlet issue, or temperature dial set too low.	Ensure iron is securely plugged into a working outlet. Adjust temperature dial to a higher setting.
Water spotting on fabric	Temperature too low for steam, or anti-drip system overwhelmed.	Increase temperature setting for steam. Ensure water tank is not overfilled.
Cord not retracting fully	Cord may be tangled or mechanism obstructed.	Gently guide the cord while pressing the retraction button. Avoid pulling the cord excessively.
Steam output is weak or inconsistent	Mineral buildup in steam vents, or water tank low.	Perform an Auto Clean cycle. Refill the water tank.

SPECIFICATIONS

Brand: BLACK+DECKER

Model Name: BLACK+DECKER Cord Reel Iron

Model Number: ICR004B

Power: 1200W

Product Dimensions: 12.72"L x 5.63"W

Item Weight: 2.32 pounds

Base Material: Stainless Steel

Water Tank Capacity: 250ml

Steam Rate: 13g/min

Special Features: Self-Cleaning, Steam Boost Function, Vertical Steaming, Retractable Cord, Anti-Drip, 3-way Auto Shut-off

Included Components: Stainless Steel Iron, 8ft Retractable Cord

**Automatic
Clean System
Removes
Build Up**



Figure 6: The durable stainless steel soleplate.

WARRANTY

This BLACK+DECKER Steam Iron is covered by a **2-year limited warranty** from the date of purchase. This warranty covers defects in material or workmanship. Please retain your proof of purchase for warranty claims. For full warranty details and conditions, refer to the documentation included with your product or visit the official BLACK+DECKER website.

SUPPORT

For technical assistance, troubleshooting, or to inquire about replacement parts, please contact BLACK+DECKER customer support. You can find contact information on the official BLACK+DECKER website or in the product packaging. *Always refer to the complete user manual for detailed safety instructions and comprehensive product information.*

© 2025 BLACK+DECKER. All rights reserved.

Related Documents - ICR004B

	<p>Black+Decker Steam Iron User Manual and Safety Guide</p> <p>Comprehensive guide for operating, cleaning, and maintaining your Black+Decker steam iron, including safety warnings, features like Auto Clean™ and 3-way Auto Shut-Off, and warranty information. Covers models ICR12XS, ICR15X, ICR16X, ICR17X, ICR19XS, ICR1924, ICR26X, ICR26XC, ICR27XS.</p>
	<p>BLACK+DECKER Professional Steam Iron (IR1350S) - Use and Care Guide</p> <p>This guide provides essential safety instructions, operating procedures, and maintenance tips for the BLACK+DECKER Professional Steam Iron, model IR1350S. Learn how to use steam, dry iron, clean your iron, and store it safely.</p>
	<p>BLACK+DECKER Vitesa Advanced Steam Cord Reel Iron User Manual</p> <p>Comprehensive user and care manual for the BLACK+DECKER Vitesa Advanced Steam Cord Reel Iron (models ICR2010, ICR2020, ICR2030, ICR2040), covering safety, operation, features, maintenance, troubleshooting, and warranty.</p>
	<p>Black+Decker Allure Professional Steam Iron User Manual</p> <p>User manual for the Black+Decker Allure Professional Steam Iron, model D3030 and D3032G. Includes instructions for use, safety precautions, care and cleaning, and troubleshooting.</p>
	<p>BLACK+DECKER Professional Steam Iron - Model IR1350S User Manual</p> <p>This document provides important safety instructions, usage guidelines, care and cleaning information, and warranty details for the BLACK+DECKER Professional Steam Iron, model IR1350S.</p>



[BLACK+DECKER The Classic™ Iron F67E Series User Manual and Care Guide](#)

Detailed user manual for the BLACK+DECKER The Classic™ Iron (Model F67E Series). Includes safety instructions, operating guide, care and cleaning tips, and storage recommendations.