

Good Housekeeping 73027-BK

Good Housekeeping 750W Wall-Mount Mini Space Heater

Model: 73027-BK | Brand: Good Housekeeping

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product Overview](#) [Setup](#) [Operating Instructions](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Good Housekeeping 750W Wall-Mount Mini Space Heater. This manual provides important information for the safe and efficient operation of your new appliance. Please read it thoroughly before use and keep it for future reference.

This compact and lightweight heater is designed to efficiently warm small indoor spaces, offering customizable heating with two heat settings, an adjustable thermostat, and a 12-hour timer. Its wall-mount design saves floor and counter space, making it ideal for home offices, bedrooms, or other small areas requiring supplemental heat.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read and understand all instructions before using this heater.

- **DO NOT use this heater in bathrooms, laundry rooms, or other moist locations.** This is a critical safety warning.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.

- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has overheat protection. If the heater overheats, it will automatically shut off.

3. PACKAGE CONTENTS

- Good Housekeeping 750W Wall-Mount Mini Space Heater
- Remote Control
- Instruction Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your space heater:

- **Digital Display:** Shows current temperature setting and timer.
- **Control Buttons:** Power, Temperature Up/Down, Timer.
- **Side Power Button:** For manual on/off.
- **Rotatable Plug:** Allows for flexible positioning in outlets.
- **Heating Element:** Ceramic heating for efficient warmth.
- **Fan:** Circulates warm air.
- **Remote Control:** Adjust settings conveniently from anywhere in the room.



Figure 1: Front view of the heater with digital display showing '60' and heat emanating from the grille.



Figure 2: Side profile of the heater, highlighting its compact design.



Figure 3: Rear view of the heater, illustrating the rotatable plug and fan vent.



Figure 4: Detailed view of the top control panel with power, temperature, and timer buttons.



Figure 5: The included remote control for convenient operation.

5. SETUP

1. **Unpack:** Carefully remove the heater and all accessories from the packaging. Retain packaging for storage if needed.

2. **Choose Location:** Select a suitable indoor wall outlet. Ensure the location is dry and free from obstructions. Remember, **do not use in bathrooms or laundry rooms.**
3. **Plug In:** Insert the heater directly into a 120V AC wall outlet. The plug is rotatable to accommodate different outlet orientations. Ensure a snug fit.
4. **Initial Power On:** Press the side power button to activate the unit. The digital display will illuminate.



Figure 6: Detail of the rotatable plug for flexible installation.

6. OPERATING INSTRUCTIONS

Your heater can be operated using the control buttons on the unit or the included remote control.

6.1 Power On/Off

- Press the **Power button** (🔌) on the unit or remote to turn the heater ON or OFF.
- When turning off, the unit will initiate a 60-second cool-down countdown before completely powering down.

6.2 Adjusting Temperature

- Use the **Temperature Up (+)** or **Temperature Down (-)** buttons on the unit or remote to set your desired temperature.
- The temperature range is from 59°F (15°C) to 86°F (30°C).
- The heater will automatically turn off when the room temperature reaches 2 degrees above your set temperature and turn back on when it drops 2 degrees below.

6.3 Setting the Timer

- Press the **Timer button** (🕒) on the unit or remote to set an automatic shut-off time.
- Each press increases the timer by 1 hour, up to a maximum of 12 hours.
- The display will show the remaining hours before shut-off.

6.4 Fan Mode (Heat Settings)

- The heater offers two heat settings: Low (LL) and High (HH).
- Press the **Fan button**  on the remote to cycle between these settings.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the features and operation of the Good Housekeeping Wall-Mount Indoor Mini Space Heater.

7. MAINTENANCE

Regular cleaning and proper storage will ensure the longevity and efficient operation of your heater.

7.1 Cleaning

1. Always unplug the heater from the wall outlet and allow it to cool completely before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces of the heater.
3. Do not use abrasive cleaners or solvents as they may damage the surface.
4. Gently vacuum the air intake and exhaust grilles to remove any dust or lint buildup.
5. Ensure the heater is completely dry before plugging it back in.

7.2 Storage

- When not in use, store the heater in a cool, dry place.
- It is recommended to store it in its original packaging to protect it from dust and damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit.	Ensure the heater is securely plugged into a working 120V AC outlet. Check the circuit breaker.
Heater turns off unexpectedly.	Overheat protection activated.	Unplug the heater, allow it to cool for 10 minutes, then plug it back in. Ensure air intakes/exhausts are not blocked.
No heat, only fan.	Temperature setting is too low or fan mode is selected.	Increase the temperature setting. Ensure the heat setting (LL/HH) is selected, not just fan mode.
Remote control not working.	Dead batteries or obstruction.	Replace remote control batteries. Ensure there are no obstructions between the remote and the heater.

9. SPECIFICATIONS

- **Brand:** Good Housekeeping
- **Model Number:** 73027-BK
- **Color:** Black
- **Power:** 750W
- **Voltage:** 120V AC

- **Special Feature:** Digital Display, Adjustable Thermostat, Remote Control, Timer
- **Form Factor:** Rectangular
- **Indoor/Outdoor Usage:** Indoor only
- **Product Dimensions:** 5.31"D x 5.11"W x 3.74"H
- **Mounting Type:** Wall Mount (Plug-in)
- **Room Type:** Home Office (suitable for small spaces)
- **Fuel Type:** Electric
- **Min Temperature Setting:** 59 Degrees Fahrenheit
- **Max Temperature Setting:** 86 Degrees Fahrenheit
- **Item Weight:** 1.01 pounds
- **Manufacturer:** Ocean Air
- **UPC:** 877697004723

10. WARRANTY & SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the Good Housekeeping official website. Keep your proof of purchase for any warranty claims.