

[manuals.plus](#) /

› [Primevolve](#) /

› [Primevolve Portable Oscillating Standing Fan User Manual](#)

Primevolve PF11S

Primevolve Portable Oscillating Standing Fan

USER MANUAL

Model: PF11S

Introduction

Thank you for choosing the Primevolve Portable Oscillating Standing Fan. This versatile fan is designed for convenience and powerful cooling, suitable for various environments including bedrooms, offices, camping, and travel. It features a rechargeable battery, USB-C power, remote control, adjustable height, and oscillation for optimal air distribution. Please read this manual carefully before use to ensure proper operation and maintenance.



Figure 1: Primeevolve Portable Oscillating Standing Fan in its extended, desk, and folded configurations.

Product Overview Video

Your browser does not support the video tag.

Video 1: A comprehensive overview of the Primeevolve 7.7" Portable Oscillating Standing Fan, demonstrating its features and versatility.

Package Contents

- 1 x Primeevolve Portable Oscillating Standing Fan

- 1 x Remote Control
- 1 x USB-C Charging Cable
- 1 x User Manual (this document)



Figure 2: All items included in the Primevolve fan package.

Setup

1. Unfolding the Fan

The fan comes in a compact, folded state for easy storage and portability. To unfold:

1. Locate the "OPEN" position indicator on the base of the fan.
2. Gently pull the fan head upwards from the base. The telescopic stand will extend.
3. Adjust the height to your desired level, from 3.93 inches (desk fan) to 39.3 inches (standing fan).
4. Ensure the base is stable on a flat surface.

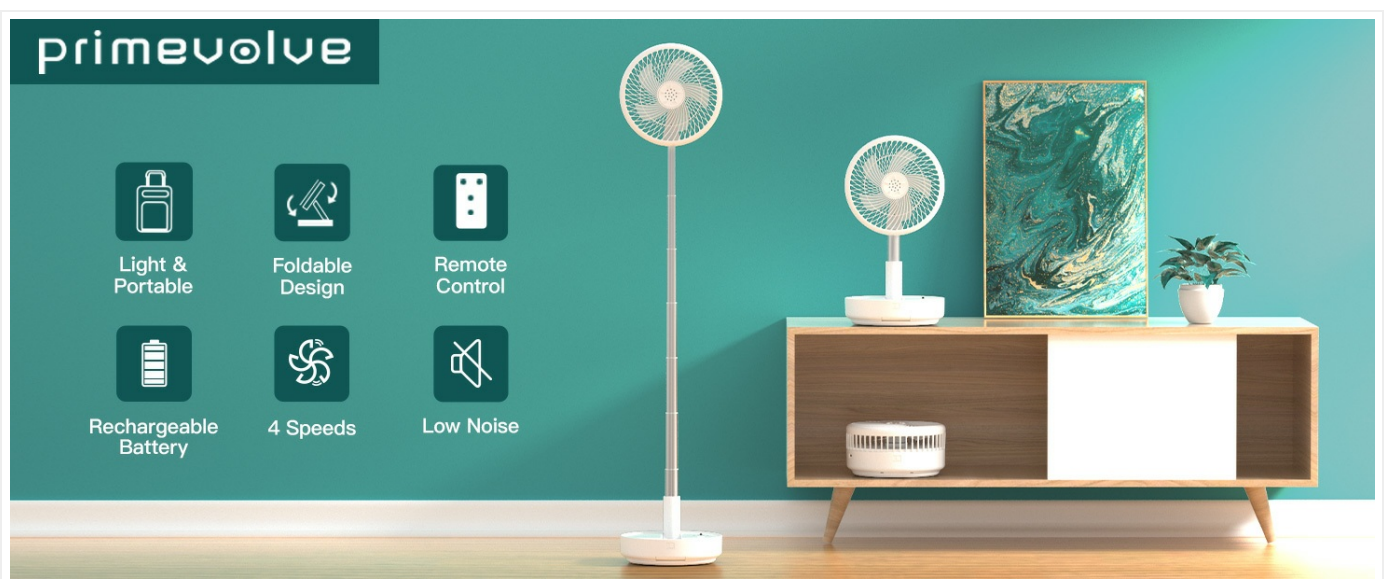 


Figure 3: Step-by-step guide to expanding the fan from its folded position.

Unboxing and Setup Video

Your browser does not support the video tag.

2. Charging the Battery

The fan is equipped with a large rechargeable battery. For first use, please charge the fan fully.

- Connect the included USB-C charging cable to the fan's USB-C port.
- Connect the other end of the cable to a compatible USB power source (5V/2A), such as a PC/laptop, power bank, AC adapter, or car charger.
- A full charge takes approximately 5 hours.
- The fan can provide 6 to 21 hours of wireless operation depending on the speed and oscillation settings.

Large capacity battery for emergency use
like Hurricanes, Power off...

USB-C Powered



Figure 4: The fan's USB-C charging port and compatible power sources.

Operating Instructions

1. Power On/Off

Press the power button on the fan's base or the remote control to turn the fan on or off.

2. Speed Settings

The fan offers four speed settings: Breeze, Soft, Strong, and Natural mode. Press the speed button on the fan or remote to cycle through the modes.

- **Breeze (Low):** Up to 21 hours of operation.
- **Soft (Mid):** Up to 11.5 hours of operation.
- **Strong (High):** Up to 6 hours of operation.
- **Natural Mode:** Simulates natural wind with varying speeds.



Figure 5: Fan speed settings and estimated battery life.

3. Oscillation and Head Rotation

The fan features a 90° auto oscillation function and a 180° manual head rotation for wide air distribution.

- Press the oscillation button on the fan or remote to activate/deactivate 90° automatic oscillation.
- Manually adjust the fan head up to 180° to direct airflow precisely where needed.

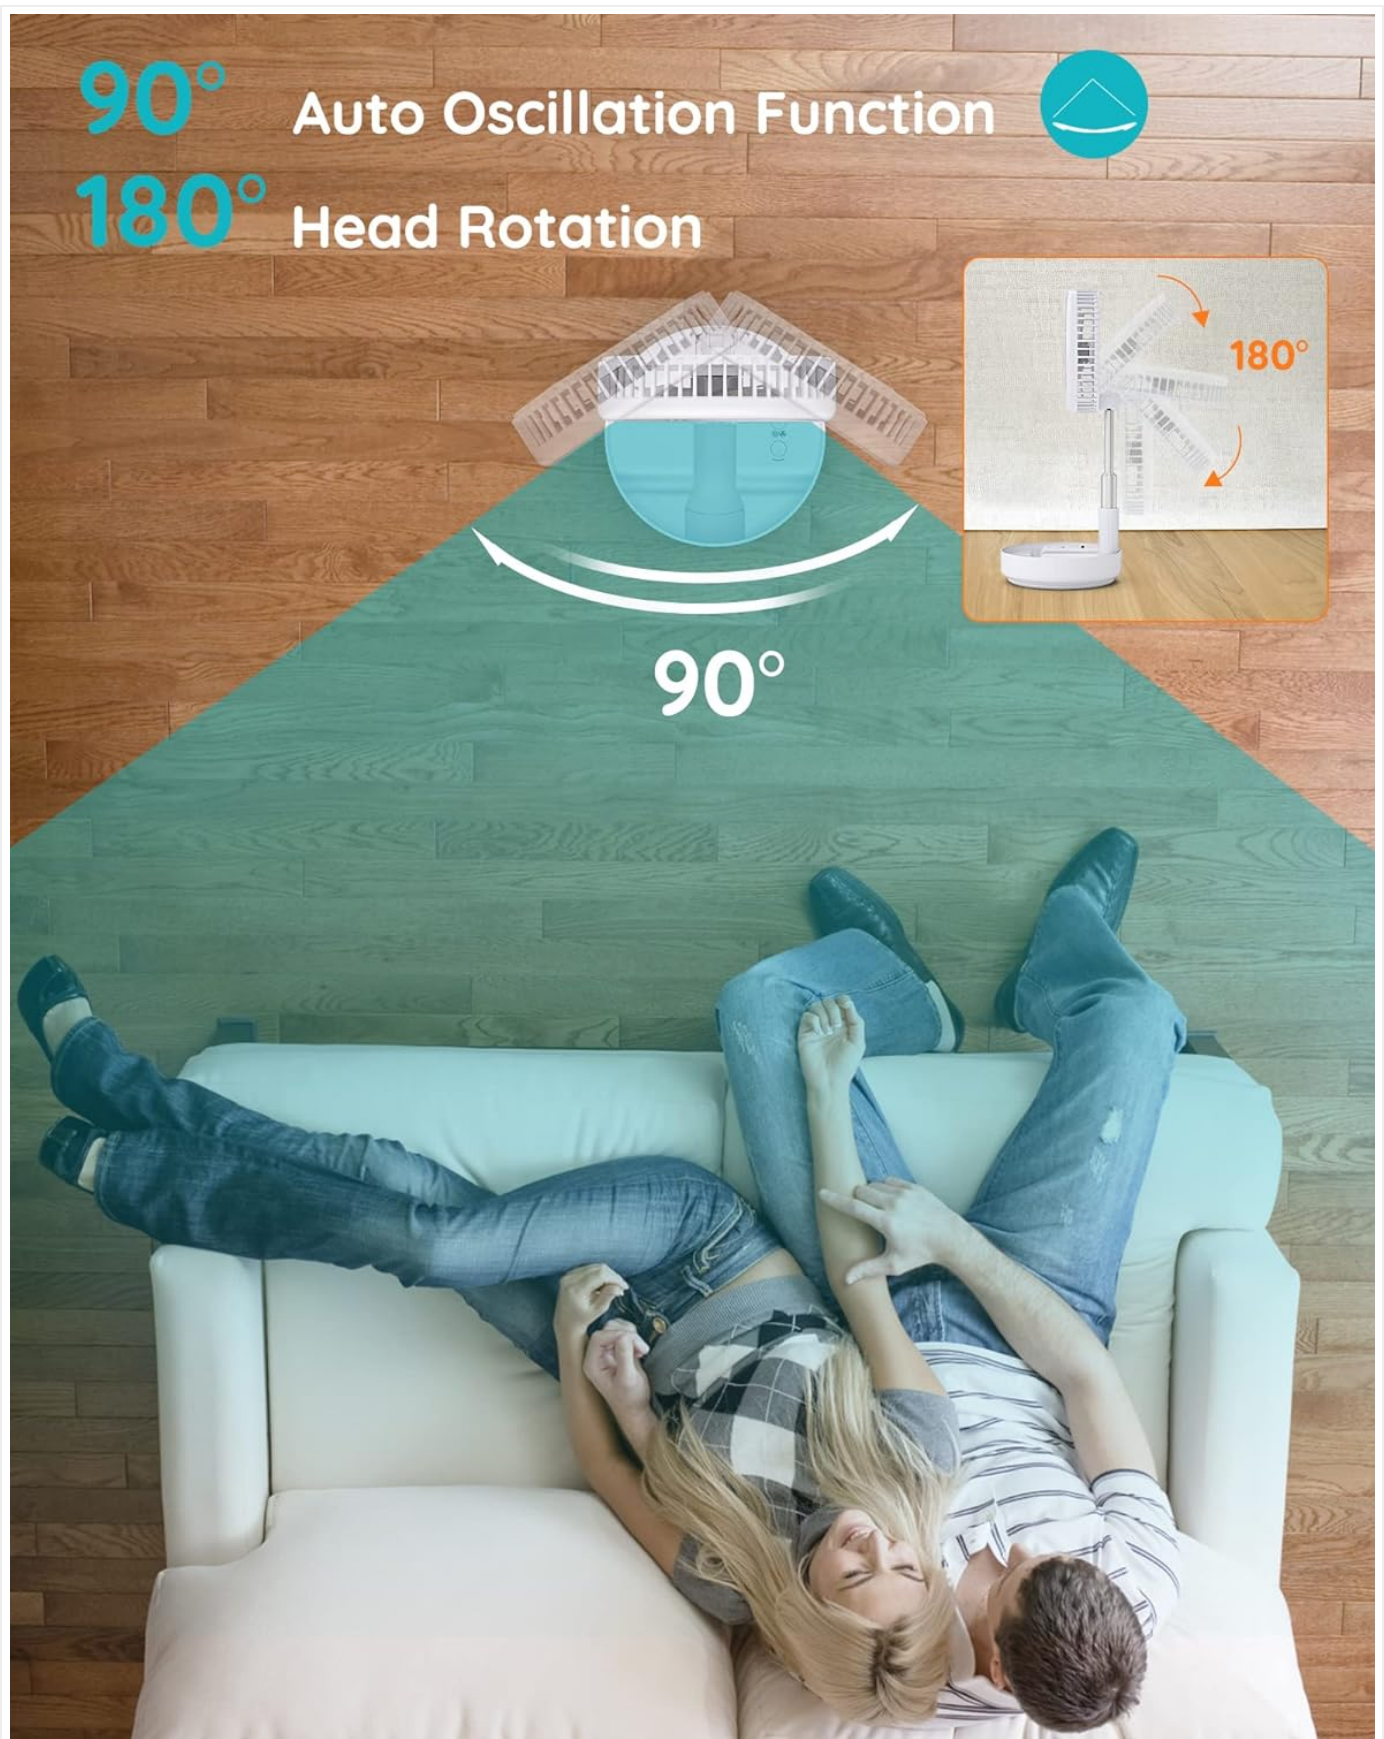 


Figure 6: Fan oscillation and head rotation capabilities.

4. Remote Control Operation

The infrared remote control allows you to operate all fan features from up to 13 feet away, providing convenience and flexibility.

- **Power Button:** Turns the fan on/off.
- **Speed Button:** Cycles through the four speed settings.

- **Oscillation Button:** Toggles the 90° auto oscillation.

Your browser does not support the video tag.

Video 3: An honest review demonstrating the remote control functionality and overall performance of the Primevolve Portable Rechargeable Fan.

5. Aromatherapy Feature

The fan includes a special scent box where you can add your favorite aromatherapy oils for a pleasant fragrance.

- Locate the scent box on the fan.
- Open the box and add a few drops of essential oil or place a scented pad inside.
- Close the box. The fan's airflow will diffuse the aroma.

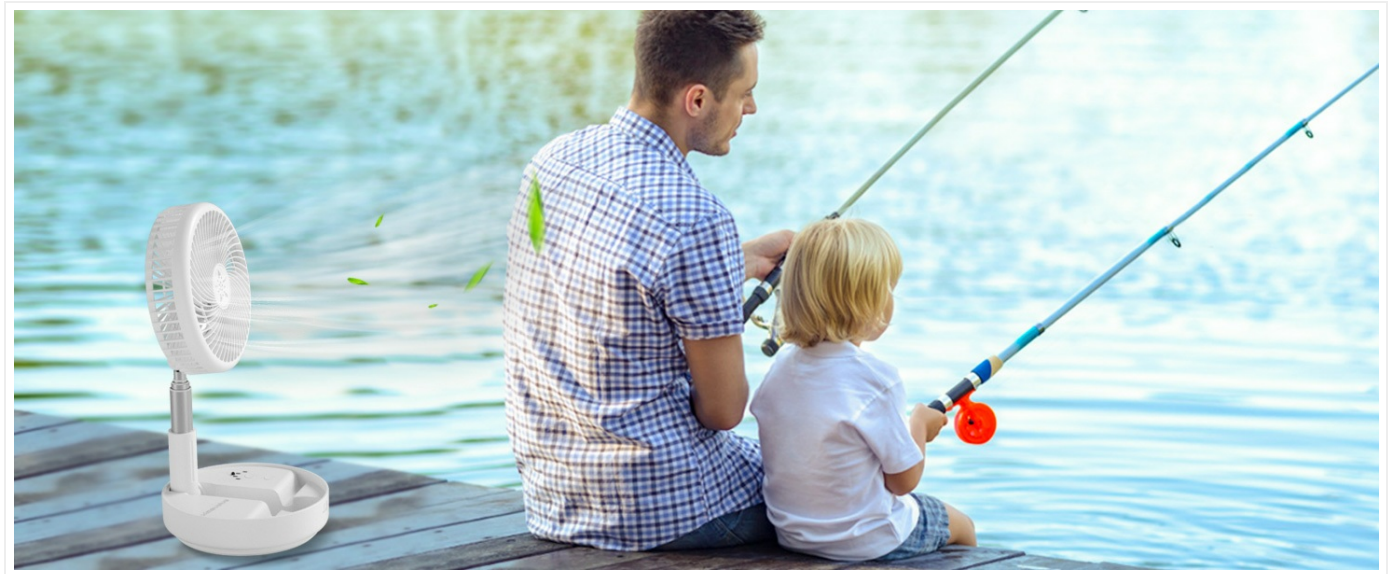 


Figure 7: Adding aromatherapy to the fan's scent box.

Maintenance

1. Cleaning the Fan

To ensure optimal performance and hygiene, regularly clean your fan. The fan hood is detachable for easy cleaning.

1. Ensure the fan is turned off and unplugged before cleaning.
2. Gently detach the front fan hood.
3. Wipe the fan blades and the inside of the hood with a soft, damp cloth. Do not immerse the fan in water.
4. Allow all parts to dry completely before reassembling.



Figure 8: Detachable fan hood for convenient cleaning.

2. Storage

When not in use, the fan can be folded back into its compact form for easy storage.

- Ensure the fan is clean and dry.
- Gently push the fan head down into the base until it is fully collapsed.
- Store in a cool, dry place away from direct sunlight.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted or not charged.	Charge the fan fully using the USB-C cable. Ensure the power source is active.
Remote control not working.	Battery in remote is dead or incorrectly inserted. Obstruction between remote and fan.	Replace the AAAA battery in the remote. Ensure clear line of sight to the fan's sensor.
Weak airflow.	Fan blades are dirty. Fan is not on highest setting.	Clean the fan blades and hood as per maintenance instructions. Increase fan speed.
Fan makes unusual noise.	Obstruction in fan blades. Fan not on a stable surface.	Turn off and unplug the fan, then check for any foreign objects. Place the fan on a flat, stable surface.
Difficulty unfolding/folding.	Mechanism is stiff or not aligned.	Ensure you are pulling/pushing directly upwards/downwards. Refer to the setup section for proper technique. Do not force the mechanism.

Specifications



Feature	Detail
Brand	Primevolve

Feature	Detail
Model Name	PF11S
Color	White
Power Source	Battery Powered / USB-C (5V/2A)
Battery Type	Rechargeable (1 AAAA battery included for remote)
Battery Life	6-21 hours (depending on speed/oscillation)
Charging Time	Approx. 5 hours
Product Dimensions (Folded)	9.06"D x 4.33"W x 9.06"H
Adjustable Height	3.93" to 39.3"
Oscillation Angle	90° Auto Oscillation
Head Tilt Angle	180° Manual Adjustment
Speed Settings	4 (Breeze, Soft, Strong, Natural)
Noise Level	30-40 dB (at max speed)
Control Method	Remote, Touch Button
Item Weight	2.77 pounds

Warranty and Support

Primevolve offers a **One Year After-sales Service** for this product. If you encounter any issues or have questions regarding your Primevolve Portable Oscillating Standing Fan, please contact our customer support team. We are committed to providing prompt assistance and will respond to your inquiries within 24 hours. For support, please refer to the contact information provided on the product packaging or the official Primevolve website.

Related Documents - PF11S

	<p>Primevolve P2000 Folding Storage Fan - User Manual and Operation Guide</p> <p>Comprehensive guide for the Primevolve P2000 Folding Storage Fan, detailing product parameters, function descriptions, step-by-step operation, and safety precautions. Learn how to set up, use, and maintain your fan.</p>
	<p>Primevolve Foldable Fan PF100 User Manual and Specifications</p> <p>Comprehensive guide for the Primevolve Foldable Fan PF100, covering safety instructions, assembly, operation, maintenance, and technical specifications. Learn how to use and care for your portable fan.</p>

