



Manuals.plus /

› OKD /

› OKD 75-Inch Electric Fireplace TV Stand (Model VSC75FP36P) Instruction Manual

OKD VSC75FP36P

OKD 75-Inch Electric Fireplace TV Stand (Model VSC75FP36P) Instruction Manual

Model: VSC75FP36P | Brand: OKD

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your OKD 75-Inch Electric Fireplace TV Stand. This modern highboy entertainment center is designed to accommodate TVs up to 85 inches and features a 36-inch electric fireplace with LED lights, widened drawers, and glass door storage cabinets. Please read all instructions carefully before assembly and use to ensure safe and proper operation.



Image 1.1: The OKD 75-Inch Electric Fireplace TV Stand, showcasing its design and functionality.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Always unplug the electric fireplace from the power outlet before cleaning or performing any maintenance.
- Do not operate the fireplace with a damaged cord or plug, or if the heater malfunctions or has been dropped or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- Ensure the TV stand is placed on a stable, level surface to prevent tipping.
- Do not overload the TV stand with weight exceeding its capacity (up to 300 lbs).
- Keep children and pets away from the electric fireplace and moving parts during operation.
- This product features overheat protection. If the heater overheats, it will automatically shut off.
- The electric fireplace is ETL/FCC certified for safety.

3. PACKAGE CONTENTS

Your OKD Electric Fireplace TV Stand is shipped in two separate packages. These packages may not arrive simultaneously. Please ensure you have received both packages and all components before beginning assembly.

The packages contain:

- All necessary engineered wood panels and components for the TV stand structure.
- One 36-inch electric fireplace insert.
- Hardware kit (screws, cam bolts, hinges, drawer slides, etc.).
- Remote control for the electric fireplace.
- Assembly instructions manual.

PRODUCT DIMENSIONS



Image 3.1: Product dimensions and illustration of the two shipping packages.

4. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	OKD
Model Name	Fireplace TV Stand (VSC75FP36P)
Product Dimensions	17"D x 75"W x 32"H
Material	Engineered Wood
Finish Type	Distressed Finish (Antique White)
Installation Type	Freestanding
Heat Output	5118 BTU (Heats up to 400 sq ft)
Special Feature	LED Flame, 3-Sided Glass Display, Timer Function (1-9H)
Power Source	Corded Electric
Max TV Size Supported	Up to 85 inches
Weight Capacity	Up to 300 lbs
Item Weight	120 Pounds



Image 4.1: Detail of the distressed finish on the TV stand's top surface.

5. SETUP AND ASSEMBLY

Assembly of the OKD Electric Fireplace TV Stand requires patience and careful attention to the provided instructions. All parts are labeled for easy identification.

5.1 Before You Begin

- Clear a spacious area for assembly.
- Unpack all components and verify against the parts list in your included manual.
- Gather necessary tools (e.g., screwdriver, hammer).
- It is recommended to have two people for assembly due to the size and weight of the components.

5.2 Assembly Steps

1. Follow the step-by-step diagrams in the included assembly manual.
2. Pay close attention to the orientation of each piece as shown in the illustrations.
3. When using cam bolts, turn them gently to lock components into place. Avoid over-tightening, as this can

damage the metal.

4. Ensure all connections are secure before proceeding to the next step.
5. Install the 36-inch electric fireplace insert into the designated central compartment.
6. Adjust drawer slides and cabinet door hinges as needed to ensure smooth operation and proper alignment.

Note: The assembly process can take several hours. Take your time and refer to the diagrams for clarity.

6. OPERATING INSTRUCTIONS

6.1 Electric Fireplace Operation

The electric fireplace can be controlled via the integrated touch screen panel or the included remote control, which has an effective range of up to 19 feet.



Image 6.1: The 36-inch electric fireplace insert, showing the control panel and remote.

- **Power:** Press the power button on the control panel or remote to turn the fireplace ON/OFF.
- **Heat:** The fireplace provides 5118 BTUs of heat, suitable for areas up to 400 sq ft. Use the heat setting

to adjust the temperature between 64°F to 82°F. Flame and heat functions can be controlled separately.

- **Flame Effect:** Enjoy a realistic 3D flame effect with 3 elegant color options. Adjust the flame speed (P1-P5) and brightness (L1-L5) to your preference.
- **Timer:** Utilize the 1-9 hour timer function to automatically shut off the fireplace, reducing energy consumption.

6.2 LED Lights for Storage Cabinets

The glass door storage cabinets are equipped with integrated LED lights to illuminate your displayed items.

- Widen Storage Cabinet with Lights
- Adjustable Glass Shelves



Image 6.2: Illuminated storage cabinet with adjustable glass shelves.

- The LED lights for the cabinets are typically controlled by a switch located near the cabinet or on the main unit. Refer to your specific assembly manual for exact switch location.
- These lights enhance the aesthetic appeal of your entertainment center and highlight items stored within.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TV stand and electric fireplace.

7.1 Cleaning the TV Stand

- Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the distressed finish.
- For glass doors, use a standard glass cleaner and a lint-free cloth.
- Periodically check and tighten any loose hardware.

7.2 Electric Fireplace Care

- Ensure the fireplace is unplugged and cool before cleaning.
- Clean the exterior surfaces with a soft, damp cloth.
- Keep the air intake and exhaust vents clear of dust and debris to ensure proper airflow and prevent overheating. Use a vacuum cleaner with a brush attachment if necessary.
- Do not attempt to service or repair the internal components of the fireplace yourself. Contact qualified service personnel if issues arise.

8. TROUBLESHOOTING

If you encounter issues with your OKD Electric Fireplace TV Stand, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not fully plugged in, circuit breaker tripped, overheat protection activated.	Check power connection, reset circuit breaker, allow fireplace to cool down for 15-20 minutes.
No heat output.	Heat function not activated, thermostat set too low, air vents blocked.	Ensure heat function is ON, increase thermostat setting, clear air vents.
Remote control not working.	Dead batteries, obstruction between remote and fireplace sensor.	Replace remote batteries, ensure clear line of sight to fireplace sensor.
Drawers or cabinet doors are misaligned.	Improper assembly or settling of furniture.	Adjust the drawer slides and cabinet door hinges according to the assembly manual.

If the problem persists after attempting these solutions, please contact customer support.

9. WARRANTY AND SUPPORT

9.1 Limited Warranty

The OKD 75-Inch Electric Fireplace TV Stand comes with a limited warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage.

9.2 Customer Support

For any questions, missing parts, or assistance with assembly or operation, please contact OKD customer support. You can typically find contact information on the product packaging or the brand's official website.

For online purchases, you may also refer to the seller's support options available through your purchase platform.