

[Manuals.plus](#) /

> [FUNYET](#) /

> FUNYET NY-02 16-inch Laptop User Manual

FUNYET NY-02

FUNYET NY-02 16-inch Laptop User Manual

Model: NY-02 | Brand: FUNYET

1. INTRODUCTION

Welcome to the FUNYET NY-02 16-inch Laptop User Manual. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your new laptop. Please read this manual thoroughly to ensure optimal performance and longevity of your device. Keep this manual for future reference.



Image: The FUNYET NY-02 laptop displayed on a modern desk setup.

2. WHAT'S IN THE BOX

Upon unpacking your FUNYET NY-02 laptop, please verify that all the following items are included:

- FUNYET NY-02 16-inch Laptop
- Power Adapter and Cable
- User Manual (this document)
- Keyboard (as specified in product details, likely integrated)

If any items are missing or damaged, please contact customer support immediately.

3. PRODUCT OVERVIEW

3.1. External Components and Ports

Familiarize yourself with the various ports and components of your laptop for proper connection and usage.

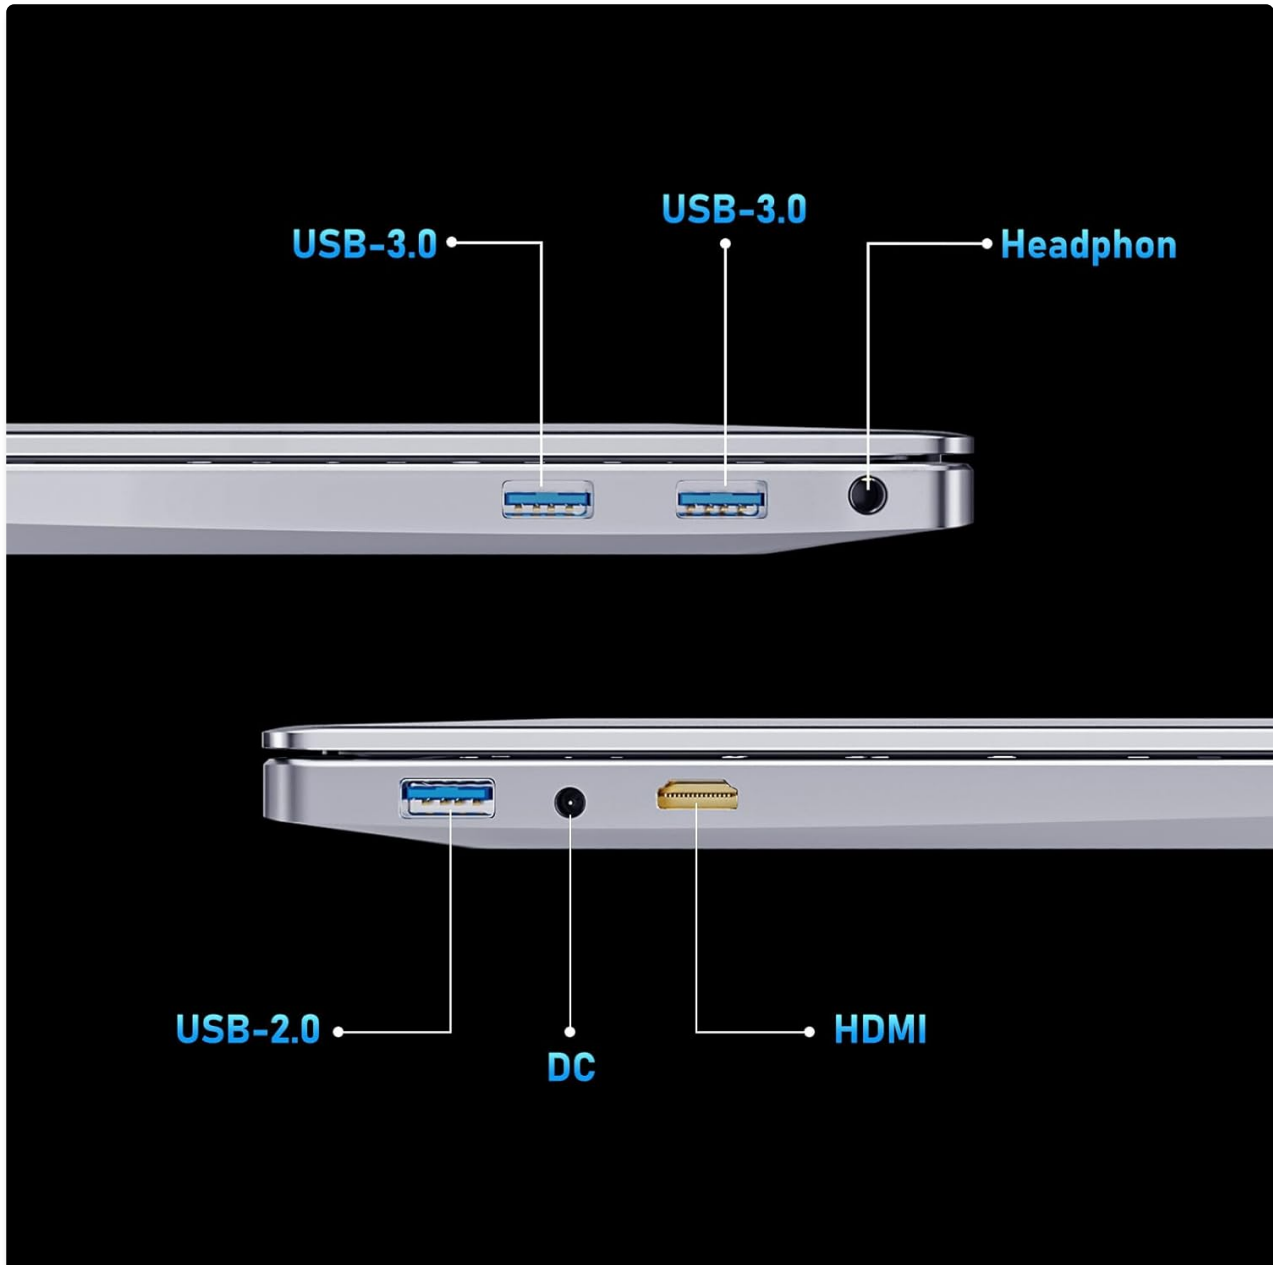


Image: Detailed view of the laptop's side ports, including USB 3.0, USB 2.0, HDMI, DC power, and headphone jack.

- **USB 3.0 Ports (x2):** For high-speed data transfer with compatible devices.
- **USB 2.0 Port (x1):** For connecting standard USB peripherals.
- **Mini HDMI Port (x1):** For connecting to external displays or projectors.
- **3.5mm Headphone Jack (x1):** For audio output to headphones or external speakers.
- **DC Power Input (x1):** Connect the power adapter here to charge the laptop.
- **Integrated Webcam:** Located above the screen for video calls.
- **Fingerprint Sensor:** Integrated for secure login.

- **Dual Stereo Speakers:** For audio output.

3.2. Key Features

The FUNYET NY-02 laptop is designed for productivity and entertainment.



Image: Graphic highlighting the N95 processor for competitive performance.



Image: Graphic showcasing the 16-inch FHD display for an immersive visual experience.



Image: Graphic illustrating the sufficient capacity of 16GB DDR4 RAM and 512GB SSD.

SYSTÈME DE REFROIDISSEMENT SCIENTIFIQUE

L'ordinateur portable est équipé d'un ventilateur silencieux et d'un tuyau de refroidissement en cuivre. Dites adieu aux inquiétudes liées à la surchauffe.

Corps léger, plus portable :

Environ 1,6 kg 357*230*20,5mm



Image: Graphic depicting the laptop's ultra-long endurance battery with 6000mAh capacity.

4. SETUP

4.1. Initial Charging

1. Connect the power adapter to the DC power input port on the laptop.
2. Plug the power adapter into a wall outlet.
3. Allow the laptop to charge for at least 30 minutes before initial use, or until the battery indicator shows sufficient charge.

4.2. First Power On and Windows Setup

1. Open the laptop lid.
2. Press the power button, usually located on the top right of the keyboard or side of the chassis.
3. Follow the on-screen instructions to complete the Windows 11 Pro setup. This includes selecting your language, region, connecting to a Wi-Fi network, and creating a user account.
4. During setup, ensure you select the correct keyboard layout (e.g., French AZERTY if applicable) for your region.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off and Sleep Mode

- **Power On:** Press the power button.
- **Shut Down:** Click the Start button, then Power > Shut down.
- **Restart:** Click the Start button, then Power > Restart.
- **Sleep Mode:** Close the laptop lid or click the Start button, then Power > Sleep.

5.2. Using the Keyboard and Touchpad

- **Backlit Keyboard:** Press the **Fn** key in combination with the appropriate function key (often F3 or F4, check keyboard icons) to activate or adjust the keyboard backlight.
- **Touchpad:** Use the touchpad for navigation. It supports multi-touch gestures for scrolling, zooming, and

other functions.

5.3. Fingerprint Unlock

To set up fingerprint unlock:

1. Go to Windows Settings > Accounts > Sign-in options.
2. Locate 'Fingerprint Recognition (Windows Hello)' and follow the prompts to register your fingerprint.

5.4. Connecting to Wi-Fi and Bluetooth

- **Wi-Fi:** Click the Wi-Fi icon in the taskbar, select your network, enter the password, and click Connect.
- **Bluetooth:** Go to Windows Settings > Bluetooth & devices, turn on Bluetooth, and pair with your desired device.

6. MAINTENANCE

6.1. Cleaning Your Laptop

- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to clean the display.
- For the keyboard and chassis, use a soft cloth. Avoid harsh chemicals.
- Regularly clean the cooling vents to prevent dust buildup, which can affect performance.



Image: A user participating in a video call on the FUNYET NY-02 laptop, demonstrating typical usage.

6.2. Battery Care

- Avoid completely discharging the battery frequently.
- Store the laptop in a cool, dry place when not in use for extended periods.

- For optimal battery health, avoid exposing the laptop to extreme temperatures.

6.3. Software Updates

Regularly check for and install Windows updates to ensure system stability, security, and performance. Go to Settings > Windows Update.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your FUNYET NY-02 laptop.

Problem	Possible Cause	Solution
Laptop does not power on.	Low battery, faulty power adapter, hardware issue.	Ensure the power adapter is securely connected and the outlet is working. Charge the laptop for at least 30 minutes. If the issue persists, contact support.
Screen is black or frozen.	Software crash, display driver issue, hardware malfunction.	Perform a hard reset by holding the power button for 10-15 seconds. If the issue recurs, try updating display drivers or reinstalling Windows.
Wi-Fi or Bluetooth connectivity issues.	Driver issues, disabled adapter, router problems.	Check if Wi-Fi/Bluetooth is enabled in Windows settings. Restart your router and laptop. Update network drivers.
Slow performance or system freezes.	Too many applications running, low storage, malware, outdated drivers.	Close unnecessary applications. Free up disk space. Run a virus scan. Update all drivers and Windows.
Battery drains quickly.	High screen brightness, power-intensive applications, background processes, aging battery.	Adjust screen brightness. Close unused applications. Check power settings. Consider battery calibration or replacement if significantly degraded.
Windows updates fail to install.	Corrupted update files, insufficient disk space, network issues.	Ensure stable internet connection. Free up disk space. Run Windows Update Troubleshooter. Try manual update via Microsoft's website.

8. SPECIFICATIONS

Detailed technical specifications for your FUNYET NY-02 laptop:

Feature	Detail
Model Name	NY-02

Feature	Detail
Processor	Intel Celeron N95 (12th Gen), up to 3.4 GHz
RAM	16 GB DDR4 LPDDR4
Storage	512 GB SSD (USB 3.0 Interface)
Display	16-inch FHD (1920 x 1200 pixels) IPS LCD
Operating System	Windows 11 Pro
Graphics	Integrated
Battery	Lithium-polymer, 6000 mAh (46.2 Wh)
Connectivity	Wi-Fi (802.11ac), Bluetooth 5
Ports	2x USB 3.0, 1x USB 2.0, 1x Mini HDMI, 1x 3.5mm Headphone Jack, 1x DC Power
Webcam	Frontal, Yes
Security	Fingerprint Recognition
Keyboard	Backlit QWERTY
Dimensions (L x W x H)	35 x 22 x 2 cm
Weight	Approx. 1.6 kg

9. WARRANTY AND SUPPORT

9.1. Limited Warranty

Your FUNYET NY-02 laptop comes with a limited warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. This warranty typically covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2. Customer Support

For technical assistance, warranty claims, or any other inquiries, please contact FUNYET customer support through the following channels:

- **Website:** Visit the official FUNYET website for support resources, FAQs, and contact forms.
- **Email:** Refer to your warranty documentation for the support email address.
- **Online Retailer:** For purchase-related issues, you may also contact the retailer where you purchased the product.

When contacting support, please have your laptop's model number (NY-02) and purchase information readily available.

