

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EnHomee](#) /

› [EnHomee 24-Drawer Dresser for Bedroom, Rustic Brown - Instruction Manual](#)

## EnHomee B0DLKXKRPS

# EnHomee 24-Drawer Dresser for Bedroom, Rustic Brown - Instruction Manual

Model: B0DLKXKRPS

[Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. SETUP AND ASSEMBLY

Before beginning assembly, ensure all parts are present and undamaged. It is recommended to assemble the dresser on a soft, clean surface to prevent scratches. While assembly can be done by one person, having two people may simplify certain steps.

### Assembly Video Guide

Your browser does not support the video tag.

**Video 1: EnHomee 24-Drawer Dresser Assembly Overview.** This video provides a general overview of the assembly process for the EnHomee 24-drawer dresser, demonstrating key steps and component connections.

### Step-by-Step Assembly Instructions

- Unpack and Identify Components:** Carefully unpack all components and hardware. Refer to the parts list in your package to ensure all items are accounted for.
- Assemble the Metal Frame:** Begin by connecting the metal frame components. Pay close attention to hole alignment. Ensure all screws are tightened securely but do not overtighten until the frame is fully assembled.
- Attach Wooden Top:** Secure the wide wooden top to the assembled metal frame. Ensure the top is flush and all connection points are firm.
- Install Fabric Drawers:** Assemble the fabric drawers by inserting the bottom panel and attaching the handles. The drawers are designed for easy setup.
- Attach Wheels:** Install the four smooth-rolling casters to the base of the dresser. Two of these wheels are lockable for stability.
- Install Anti-Tip Accessories:** For safety, attach the anti-tip accessories to the dresser and secure it to a wall according to the included instructions.

## Assembly Tips:

- For the wooden top, if screws seem short, try inserting all screws partially before fully tightening any of them. This can help align the components.
- Some users have noted a slight odor from the fabric drawers upon unpacking. It is recommended to air them out in a well-ventilated area for 24-48 hours before assembly.
- Double-check all connections to ensure stability.

## 2. OPERATING INSTRUCTIONS

---

The EnHomee 24-Drawer Dresser is designed for versatile storage and ease of use in various settings.

### Drawer Usage and Organization

This dresser features 24 drawers of varying sizes to accommodate diverse storage needs. The fabric drawers are breathable, easy to clean, and wear-resistant, making them suitable for clothing, accessories, cosmetics, and other personal items.

- **Multiple Sizes:** Utilize the different drawer sizes (e.g., 10.9"D x 10"W x 7.4"H, 16"D x 11"W x 7.4"H) to categorize and store items efficiently.
- **Smooth Operation:** The drawers are designed for smooth opening and closing. Avoid overloading to maintain optimal function.



**Image 1: Drawer Dimensions.** This image illustrates the different sizes of the fabric drawers, highlighting their depth, width, and height for various storage needs.



## ***Easily placed items***

**Image 2: Organized Drawers.** The dresser with several drawers open, showcasing how various items like scarves, accessories, and cosmetics can be neatly organized within the different compartments.

### **Mobility and Stability**

The dresser is equipped with four smooth-rolling casters for easy repositioning. Two of these wheels feature a locking mechanism to ensure stability when the dresser is in a fixed location.

- **Moving the Dresser:** Unlock the two lockable wheels before moving the dresser.
- **Securing the Dresser:** Once in the desired position, engage the locks on the two casters to prevent unintended movement.

## **Dresser with Wheels Easy to Move**



**Image 3: Easy Mobility.** A person effortlessly moving the dresser across a room, demonstrating the functionality of its smooth-rolling wheels.




**Image 4: Lockable Wheels.** A detailed view of the dresser's wheels, highlighting the locking mechanism for securing the unit in place.

## Additional Features

- **Super Wide Wooden Top:** The spacious wooden top (40.1" x 23.2") provides ample surface area for displaying decorative items, organizing cosmetics, or even serving as a temporary workspace for tasks like ironing.
- **Integrated Hooks:** The metal grid sides include hooks for hanging items such as hats, scarves, or bags, maximizing vertical storage.



**Image 5: Versatile Wooden Top.** The dresser's wide wooden top is shown adorned with decorative items and cosmetics, illustrating its utility as a display and organization surface.

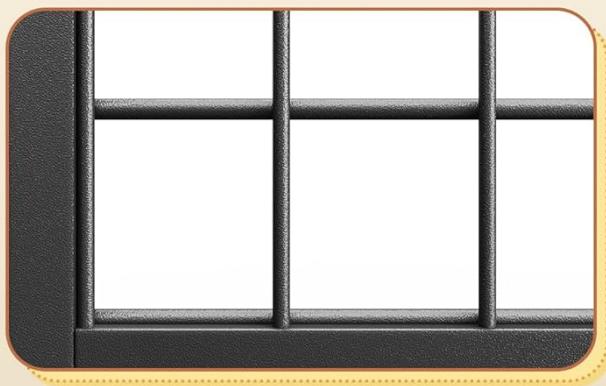

***Metal & Sturdy***



***Hook Designs***

**Image 6: Integrated Hooks.** A close-up of the metal grid design on the side of the dresser, featuring S-hooks for hanging accessories like hats and bags.

### 3. MAINTENANCE

Proper care and maintenance will extend the life and appearance of your EnHomee dresser.

- **Cleaning the Wooden Top:** Wipe the wooden top with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Cleaning Fabric Drawers:** The high-grade non-woven fabric drawers are easy to clean. Spot clean with a mild detergent and damp cloth as needed. Allow to air dry completely.
- **Metal Frame:** Clean the metal frame with a soft, dry cloth. If necessary, use a slightly damp cloth with mild soap, then dry thoroughly.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if

necessary.

## Quality Drawer for Storage Needs



Breathable



Easy to Clean



Wear-resistant



**Image 7: Quality Fabric Drawers.** A close-up view of the fabric drawer material, emphasizing its breathable, easy-to-clean, and wear-resistant properties.

## 4. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Strong Odor from Drawers:** If fabric drawers have a strong odor upon arrival, remove them from packaging and air them out in a well-ventilated area for 24-48 hours before assembly.
- **Dresser Feels Flimsy:** Ensure all screws and connections in the metal frame are fully tightened. Verify that the anti-tip accessories are correctly installed and secured to the wall.
- **Difficulty Attaching Wooden Top:** If screws for the wooden top seem too short or do not align easily, try

inserting all screws loosely into their respective holes first, then gradually tighten them all. This allows for minor adjustments and better alignment.

- **Missing Parts:** Before assembly, carefully check all package contents against the parts list. If any parts are missing or damaged, contact customer support immediately for assistance.

## 5. SPECIFICATIONS

Feature	Detail
Brand	EnHomee
Product Dimensions	23.2"D x 40.1"W x 33.5"H
Color	Rustic Brown
Room Type	Bedroom, Cloakroom, Dressing Room
Assembly Required	Yes
Model Name	closet storage drawers
Number of Drawers	24
Material	Metal frame, Wood top, Non-woven fabric drawers
Special Features	Lockable wheels, Integrated hooks, Anti-tip accessories

## 6. WARRANTY & SUPPORT

For any questions, concerns, or issues regarding your EnHomee 24-Drawer Dresser, please contact our customer support team.

- **Product Support:** If you require assistance with assembly, missing parts, or product functionality, please reach out to us.
- **Protection Plans:** Extended protection plans may be available for your product. Please refer to your purchase documentation or contact your retailer for details on available plans and coverage.
- **Contact Information:** Refer to your purchase receipt or the retailer's website for specific customer service contact details.

© 2026 EnHomee. All rights reserved.