

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Ultimate U652S Smartphone User Manual

Energizer U652SEU

Energizer Ultimate U652S Smartphone User Manual

1. PRODUCT OVERVIEW

The Energizer Ultimate U652S is a versatile smartphone designed for everyday use, featuring a large 6.5-inch HD+ display, a powerful 4000mAh battery for extended usage, and a triple rear camera system. This manual will guide you through the essential functions and features of your device.



Figure 1: Front and back view of the Energizer Ultimate U652S Smartphone.

Key Features:

- **Display:** 6.5-inch HD+ screen (720 x 1600 resolution)
- **Processor:** MediaTek Helio (MT6739WW)
- **Memory:** 2GB RAM, 64GB Internal Storage (expandable)
- **Operating System:** Android 11.0
- **Cameras:** 18MP + 0.08MP + 0.08MP Triple Rear Camera, 13MP Front Camera
- **Battery:** 4000mAh for extended talk time
- **Connectivity:** 4G LTE, Dual SIM support, USB Type-C
- **Security:** Fingerprint sensor

2. GETTING STARTED: SETUP

2.1. Package Contents

Before you begin, ensure your package contains the Energizer Ultimate U652S Smartphone and any included accessories (e.g., earphones, USB-C cable). A charger is not included.

2.2. Inserting SIM Cards and SD Card

The Energizer Ultimate U652S supports Dual SIM cards and expandable memory via a microSD card.

1. Locate the SIM tray on the side of the device.
2. Insert the SIM ejector tool (if provided) or a small paperclip into the small hole next to the tray to open it.
3. Carefully pull out the SIM tray.
4. Place your Nano-SIM cards and/or microSD card into the designated slots on the tray, ensuring the gold contacts face downwards.
5. Gently push the tray back into the slot until it clicks into place.



Figure 2: Side view of the smartphone, indicating the SIM tray location.

2.3. Charging the Battery

Before first use, it is recommended to fully charge the device. Connect the USB-C cable to the phone's charging port and the other end to a compatible USB power adapter (not included).

2.4. Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the Energizer logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select 'Power off'.
- **To Restart:** Press and hold the Power button, then select 'Restart'.

U652S - UN CONCENTRÉ DE TECHNOLOGIE

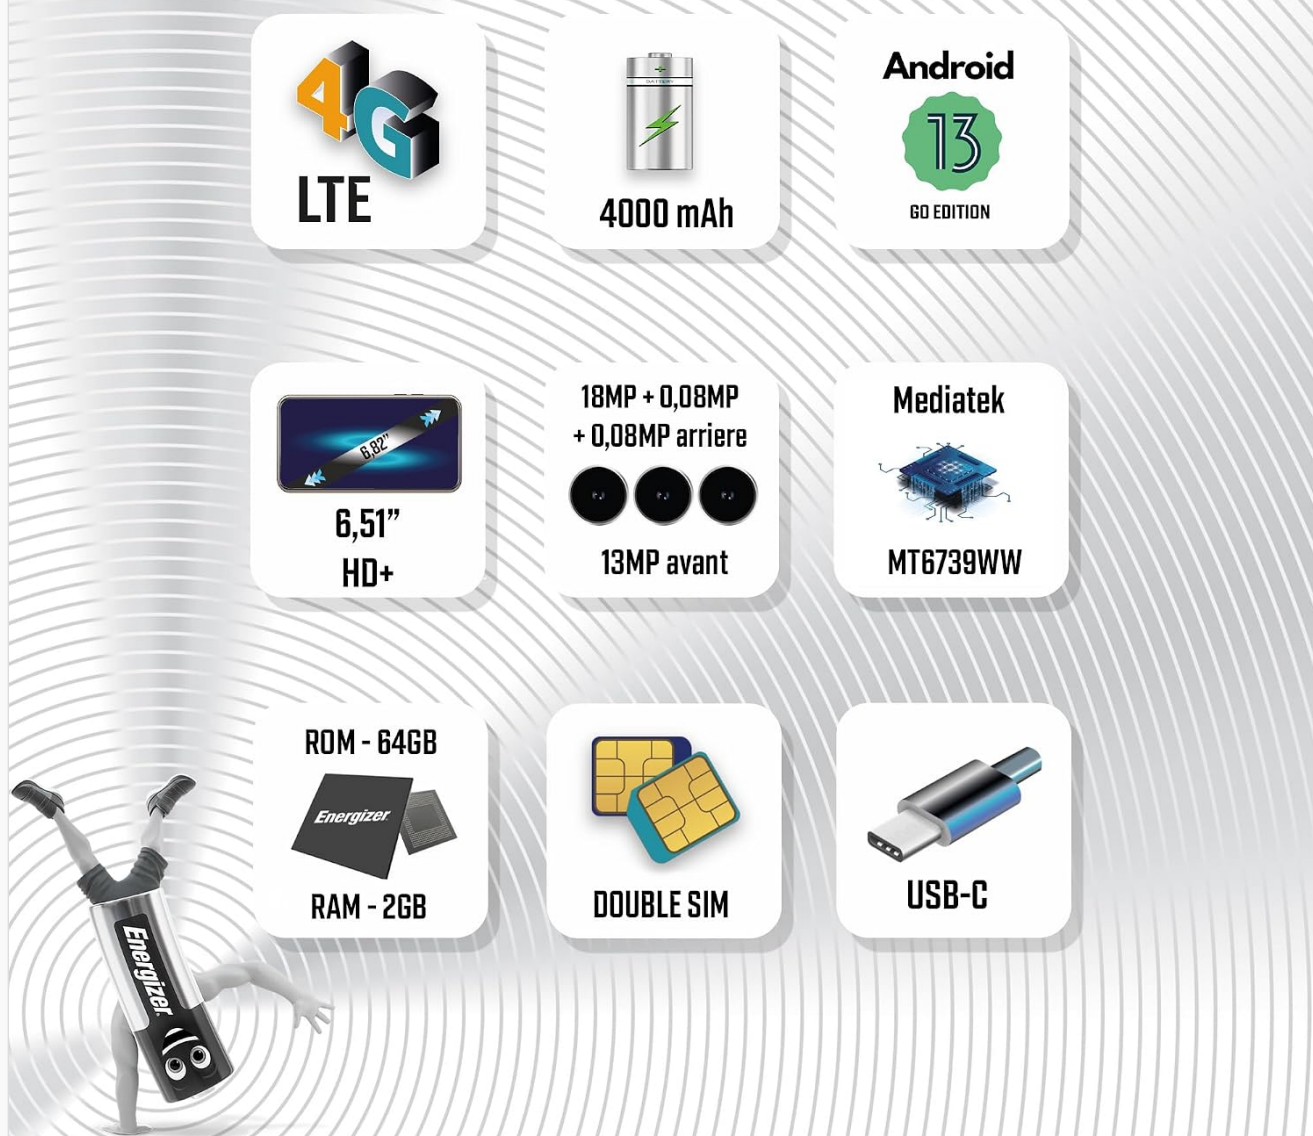


Figure 3: Front view of the smartphone, ready for initial setup.

3. OPERATING YOUR SMARTPHONE

3.1. Basic Navigation (Android 11.0)

Your Energizer Ultimate U652S runs on Android 11.0. Navigate the interface using touch gestures:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through screens or lists.
- **Pinch:** To zoom in or out on photos and web pages.
- **Long Press:** To access contextual menus or move icons.

3.2. Making Calls and Sending Messages

- **Calls:** Open the 'Phone' app, enter the number, and tap the call icon.
- **Messages:** Open the 'Messages' app, tap the new message icon, enter the recipient and your message, then send.

3.3. Using the Camera

The smartphone features an 18MP triple rear camera and a 13MP front camera.

1. Open the 'Camera' app.
2. Select your desired mode (Photo, Video, Portrait, etc.).
3. Tap the shutter button to capture a photo or start/stop recording a video.



Figure 4: Rear camera module of the Energizer Ultimate U652S.



Figure 5: Example of capturing a photo with the smartphone.

3.4. Fingerprint Sensor

The Energizer Ultimate U652S includes a side-mounted fingerprint sensor for quick and secure unlocking.

1. Go to 'Settings' > 'Security' > 'Fingerprint'.
2. Follow the on-screen instructions to register your fingerprint.
3. Once registered, you can use your fingerprint to unlock the device.



Figure 6: Location of the fingerprint sensor on the side of the device.

4. MAINTENANCE

4.1. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not leave the phone charging for excessively long periods after it's full.
- Use only compatible chargers and cables.

4.2. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your smartphone. Avoid using harsh chemicals or abrasive materials.

4.3. Software Updates

Regularly check for software updates to ensure your device has the latest features and security patches. Go to

'Settings' > 'System' > 'System update'.

4.4. Storage Management

With 64GB of internal storage, you can manage your files and apps. Consider using a microSD card for additional storage of photos and videos.

5. TROUBLESHOOTING

If you encounter issues with your Energizer Ultimate U652S, try the following basic troubleshooting steps:

- **Device Not Turning On:** Ensure the battery is charged. Connect the phone to a charger for at least 30 minutes before attempting to power on again.
- **Apps Crashing/Freezing:** Close the app and reopen it. If the issue persists, clear the app's cache and data in 'Settings' > 'Apps'.
- **Network Connectivity Issues:** Check if Airplane Mode is off. Restart the device. Verify your SIM card is properly inserted.
- **Slow Performance:** Close unused apps, clear cache, and free up storage space. Consider restarting the device regularly.
- **Factory Reset:** As a last resort, you can perform a factory reset. This will erase all data on your phone. Go to 'Settings' > 'System' > 'Reset options' > 'Erase all data (factory reset)'. **Backup your data before proceeding.**

6. SPECIFICATIONS

Feature	Specification
Brand	Energizer
Model Name	Ultimate U652S
Model Number	U652SEU
Operating System	Android 11.0, MT6739WW
Screen Size	6.51 Inches
Resolution	720 x 1600
RAM	2 GB
Storage Capacity	64 GB
CPU Model	MediaTek Helio
Rear Camera Resolution	18 Megapixels (effective fixed resolution)
Special Features	Robust body, Dual SIM, Expandable memory
Connectivity	USB Type C, 4G Cellular Technology
Battery Capacity	4000 mAh

Feature	Specification
Color	Black

7. WARRANTY AND SUPPORT

7.1. Manufacturer's Warranty

The Energizer Ultimate U652S comes with a **4-year manufacturer warranty**. Please retain your proof of purchase for warranty claims.

7.2. Manufacturer Information

This product is manufactured by **Avenir Telecom** under license from Energizer.

7.3. Customer Support

For further assistance, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official Energizer/Avenir Telecom support website.

© 2024 Energizer. All rights reserved. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Avenir Telecom.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DLKZPBQ3>

More documents and user manuals: **<https://manuals.plus/>**