

## Duronic DW5

# Duronic DW5 BK Compact Tabletop Dishwasher User Manual

Model: DW5 BK

### INTRODUCTION

Thank you for choosing the Duronic DW5 BK Compact Tabletop Dishwasher. This appliance is designed to provide efficient and convenient dishwashing for small kitchens, studios, or mobile homes. Please read this manual thoroughly before operating the dishwasher to ensure safe and optimal performance. Keep this manual for future reference.



Image: The Durotic DW5 BK compact tabletop dishwasher, showcasing its sleek black design and interior capacity with dishes loaded, illuminated by a blue LED light.

## Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact customer support.
- Keep children away from the dishwasher, especially during operation. The child lock feature can be activated for safety.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Unplug the appliance before cleaning or performing any maintenance.

## What's in the Box

Your Duronic DW5 BK dishwasher package includes the following components:

- Duronic DW5 BK Dishwasher Unit
- Power Cord
- User Manual
- Cutlery Basket
- Inlet Hose
- Drain Hose
- Water Pitcher (for manual filling)
- Fruit Basket

## SETUP

### 1. Placement

Place the dishwasher on a stable, level surface. Ensure there is adequate space around the unit for ventilation and access to connections. The compact dimensions are approximately 42.8 cm (width) x 42.5 cm (depth) x 45.8 cm (height).



Image: Diagram showing the compact dimensions of the Duronic DW5 BK dishwasher: 42.8cm width, 42.5cm depth, and 45.8cm height, along with included accessories like a water pitcher, inlet hose, and drain hose.

## 2. Water Connection

The DW5 BK offers two methods for water supply:

- **Manual Fill:** Use the provided water pitcher to pour water directly into the top inlet. Approximately 5 liters of water are required per cycle.
- **Direct Connection:** Connect the inlet hose to a water tap. Ensure the connection is secure to prevent leaks.

Connect the drain hose to a sink or a suitable drainage point. Ensure the drain hose is not kinked and allows for proper water flow.



Image: Illustration demonstrating the two water input methods: manually pouring water into the top reservoir using a pitcher (top) and connecting the dishwasher directly to a water tap via the inlet hose (bottom).

## 3. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance (220 Volts).

## OPERATING INSTRUCTIONS

### 1. Loading Dishes



Arrange dishes, cutlery, and other items in the dishwasher. Ensure items do not block the spray arms. The dishwasher can accommodate plates up to 27 cm in diameter. Utilize the cutlery basket and the fruit basket as needed.



Image: A composite image showing various loading options: a removable glass rack, a cutlery basket, a fruit basket for washing produce, and the smooth-gliding wheels of the dish rack.

## 2. Adding Detergent

Open the detergent dispenser and add the appropriate amount of dishwasher detergent (powder, liquid, or tablet). Close the dispenser securely.



Image: A close-up of the dishwasher's control panel, highlighting the 'Lock' button being pressed, indicating the activation of the child safety lock feature.

### 3. Selecting a Program

The Duronic DW5 BK features 7 wash programs:

- **Normal:** 69 min, 55-68°C
- **Eco:** 68 min, 46-62°C (for energy and water saving)
- **Quick:** 29 min, 50-62°C (for lightly soiled dishes)
- **Intensive:** 89 min, 55-75°C (for heavily soiled items)
- **Glass:** 50 min, 55-68°C (for delicate glassware)
- **Fruit:** 19 min, Cold (for washing fruits and vegetables)
- **Self-Cleaning:** For maintaining the dishwasher's interior.

Use the touch control panel to select your desired program.



Image: A display of the seven wash programs available on the Duronic DW5 BK dishwasher, including Normal, Eco, Quick, Intensive, Glass, Fruit, and their respective durations and temperature ranges.

#### 4. Starting a Cycle

Press the 'Start/Pause' button to begin the selected wash cycle. The LED display will show the remaining time.

#### 5. Special Features

- **Drying Function:** An extra PTC drying function ensures dishes are ready for use after washing. This typically runs for 60 minutes after the wash cycle.





Image: The dishwasher door slightly ajar, with steam rising, indicating the 60-minute drying function is active, ensuring dishes are dry and ready.

- **Delay Start:** You can set a delay for the wash cycle to start at a later time, up to 18 hours.



Image: A close-up of the dishwasher's control panel, showing the 'Delay' button being pressed, indicating the activation of the delay start function, which can be set for up to 18 hours.

- **Child Lock:** Activate the child lock to prevent accidental operation by children.



## 1. Cleaning the Filter

Regularly clean the filter system located at the bottom of the dishwasher tub to ensure optimal cleaning performance and prevent blockages. Twist and lift the filter to remove it, rinse under running water, and brush away any food debris. Reinsert the filter securely.



Image: A hand removing the cylindrical filter from the bottom of the dishwasher, illustrating the process for cleaning to maintain optimal performance.

## 2. General Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, use a dishwasher cleaner or run a self-cleaning cycle periodically.

## TROUBLESHOOTING

- **Dishwasher not starting:** Check if the power cord is securely plugged in and the door is fully closed. Ensure a program is selected.
- **Dishes not clean:** Verify that the spray arms are not blocked, the filter is clean, and sufficient detergent is used. Ensure dishes are loaded correctly.
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the filter.
- **Excessive noise:** Ensure the dishwasher is level and dishes are not rattling against each other or the spray arms.

For persistent issues, please contact Duronic customer support.


## SPECIFICATIONS

Brand	Duronic
Model Name	DW5 BK
Dimensions (L x W x H)	48 x 51 x 45.8 cm
Weight	15.38 kg
Power	950 Watts
Voltage	220 Volts
Water Capacity	5 Liters
Noise Level	52.3 dB

Energy Consumption (100 cycles)	34.8 kWh
Number of Programs	7
Special Features	Compact, Quick Wash, Safety Lock, Space Saver, Touch Screen

For detailed technical parameters and declared values, please refer to the official energy label and product information sheet:

[View EU Energy Label and Product Information Sheet](#)

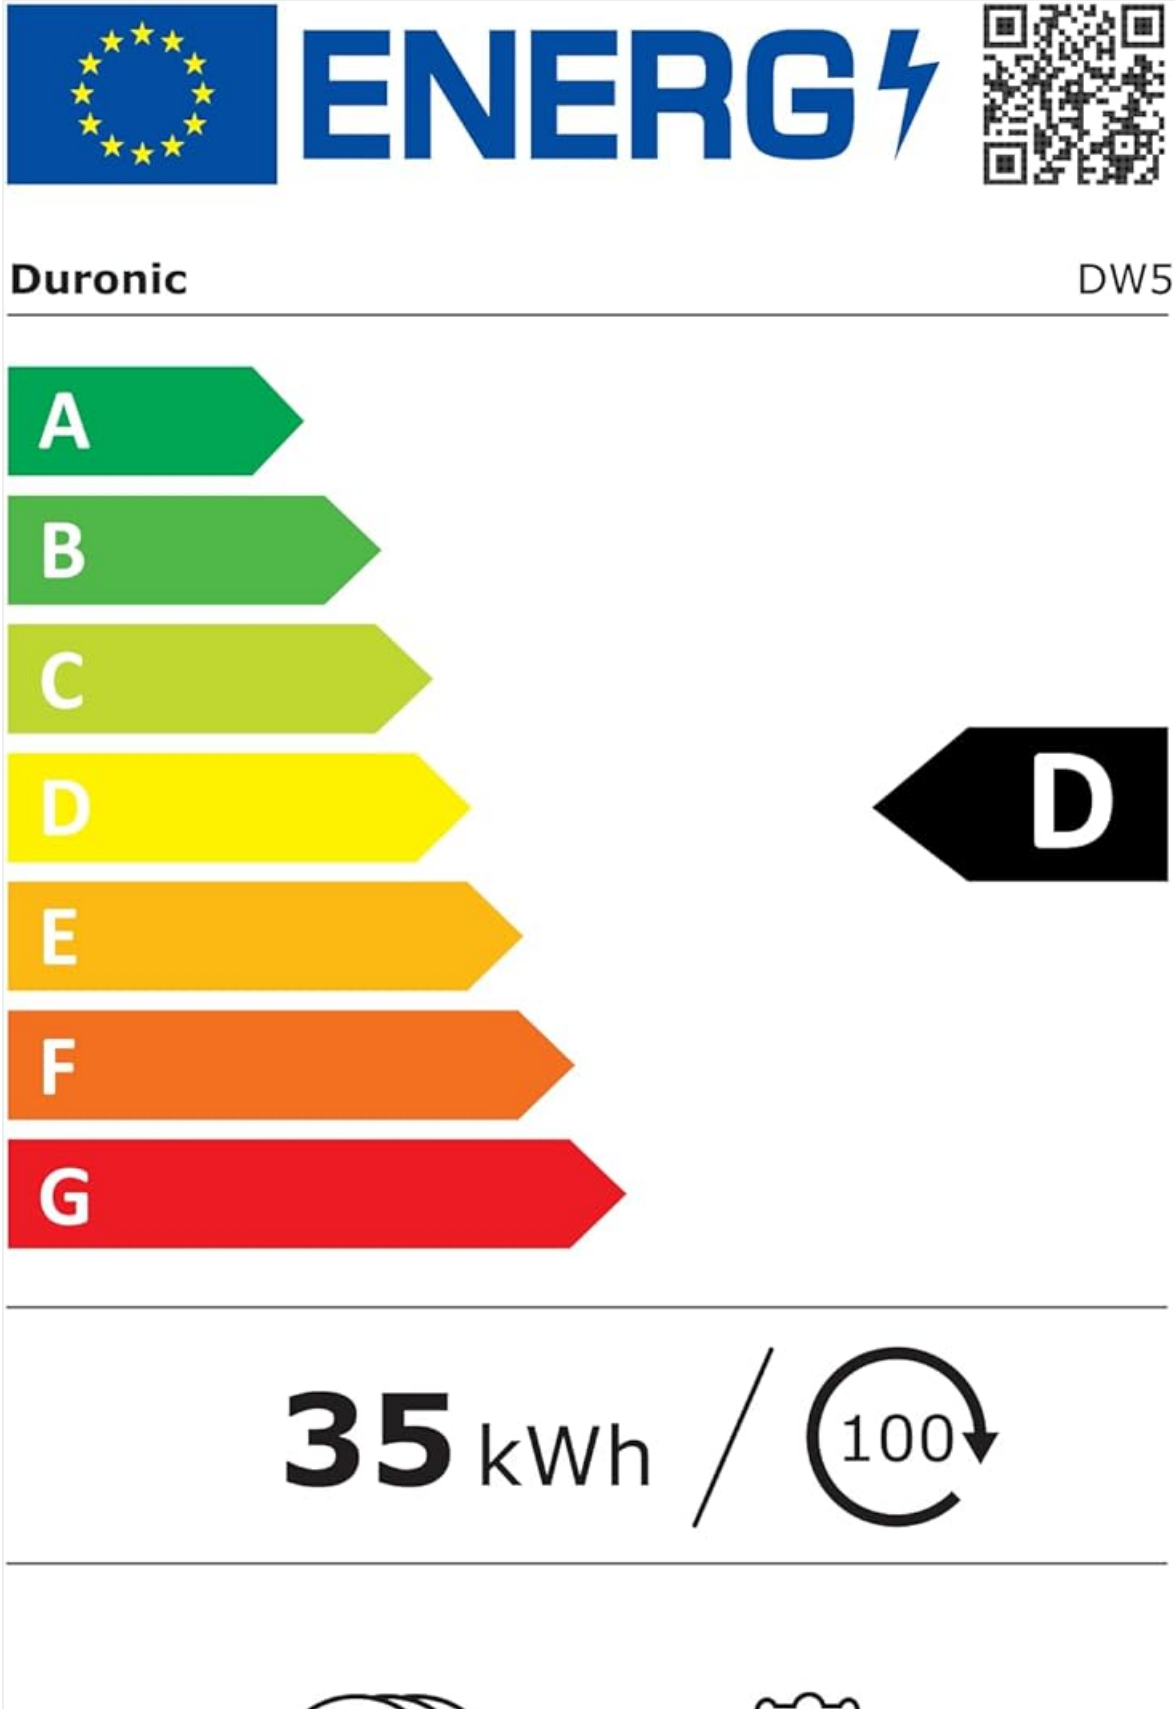




**3 x**



**4,5 L**

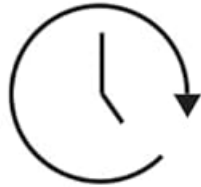

**2:14**



ABC**D**



2019/2017

Image: The EU Energy Label for the Duronic DW5 dishwasher, indicating its energy efficiency class (D), energy consumption (35 kWh/100 cycles), water consumption (4.5 L/cycle), and noise level (60 dB).





























## WARRANTY AND SUPPORT

Your Duronic DW5 BK dishwasher comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, spare parts, or any inquiries, please contact Duronic customer service through their official website or the retailer where the product was purchased.

## Related Documents - DW5

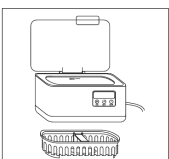	<p><a href="#">Duronic DW5 Dishwasher User Manual</a></p> <p>User manual for the Duronic DW5 Dishwasher, providing comprehensive instructions for installation, operation, safety, and troubleshooting. Learn how to efficiently use your compact countertop dishwasher.</p>
	<p><a href="#">Duronic AD41, AD42 Aroma Air Diffuser User Manual</a></p> <p>User manual for the Duronic AD41 and AD42 Aroma Air Diffusers. This guide provides essential information on features, specifications, safe operation, setup, usage, maintenance, and troubleshooting for optimal performance.</p>



  <b>BL510 / BL520 Sports Blender</b> <small>PLEASE READ ALL THE INSTRUCTIONS BEFORE USE</small>     	<p><a href="#">Duronic BL510 / BL520 Sports Blender User Manual</a></p> <p>Explore the Duronic BL510 and BL520 Sports Blenders, compact personal blenders ideal for preparing daily smoothies and cold drinks. This manual provides essential instructions, safety guidelines, and troubleshooting tips for optimal use and maintenance.</p>
  <b>BPM95 Arm Type Blood Pressure Monitor</b> <small>PLEASE READ ALL THE INSTRUCTIONS BEFORE USE</small>     	<p><a href="#">Duronic BPM95 Arm Type Blood Pressure Monitor User Manual &amp; Guide</a></p> <p>Comprehensive user manual for the Duronic BPM95 Arm Type Blood Pressure Monitor, providing instructions for setup, use, maintenance, and understanding results. Ensure accurate health monitoring with this guide.</p>
  <b>AF24 Air Fryer</b> <small>PLEASE READ ALL THE INSTRUCTIONS BEFORE USE</small>     	<p><a href="#">Duronic AF24 Air Fryer: User Manual &amp; Quick Start Guide</a></p> <p>Explore the Duronic AF24 Dual Zone Air Fryer with this comprehensive user manual. Find instructions, safety guidelines, cooking charts, and troubleshooting tips for your AF24 model.</p>
  <b>UC60 Ultrasonic Cleaner</b> <small>PLEASE READ ALL THE INSTRUCTIONS BEFORE USE</small>     	<p><a href="#">Duronic UC60 Ultrasonic Cleaner User Manual</a></p> <p>Discover how to effectively use and maintain your Duronic UC60 Ultrasonic Cleaner with this comprehensive user manual. Learn about its features, safety guidelines, and cleaning capabilities for various household items.</p>