

[Manuals.plus](#) /

› [Silvergear](#) /

› Silvergear 10.1-inch WiFi Digital Photo Frame User Manual

Silvergear 4752

Silvergear 10.1-inch WiFi Digital Photo Frame User Manual

INTRODUCTION

The Silvergear 10.1-inch WiFi Digital Photo Frame is designed to display your cherished photos and videos in high definition. Featuring a responsive touch screen and WiFi connectivity, it allows for easy sharing of memories from anywhere in the world. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your digital photo frame.

SETUP

1. Unpacking and Components

Carefully remove all components from the packaging. Ensure the following items are present:

- Silvergear 10.1-inch WiFi Digital Photo Frame
- Power Adapter (10W)
- Detachable Stand
- User Manual (this document)

2. Power Connection

Connect the provided power adapter to the DC input port on the back of the photo frame. Plug the adapter into a standard electrical outlet (100-240V).

3. Initial Setup

Upon first power-on, the frame will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language from the list.
2. **WiFi Connection:** Select your WiFi network and enter the password. A stable internet connection is required for remote sharing features.

3. **Time Zone:** Set your local time zone.

4. **Frameo App Download:** The frame will display instructions to download the free Frameo app on your smartphone or tablet. This app is essential for sending photos and videos to your frame.

4. Positioning the Frame

Attach the detachable stand to the back of the frame for desktop placement. The frame can also be wall-mounted using the integrated VESA mounting holes (mounting hardware not included).



Image: The Silvergear 10.1-inch WiFi Digital Photo Frame with its stand, displaying a family photo. This image illustrates the frame's typical setup on a surface.

OPERATING INSTRUCTIONS

1. Touch Screen Navigation

The frame features a responsive touch screen for direct interaction. Swipe left or right to navigate through photos, tap to access settings, and pinch to zoom (if supported by the image).

2. Connecting with the Frameo App

To send photos and videos to your frame, you must connect it to the Frameo app:

1. Download the Frameo app from your device's app store.
2. Create an account or log in.
3. On your photo frame, tap the 'Add Friend' icon to generate a unique code.
4. In the Frameo app on your smartphone, enter this code to pair your device with the frame.



Image: A hand holding a smartphone displaying the Frameo app interface, with photos being transferred to the Silvergear digital photo frame. This illustrates the remote sharing capability.

3. Sending Photos and Videos

Once connected, you can send photos and short videos directly from your smartphone to the frame using the Frameo app. Select the media, choose your frame, and send. The media will appear on the frame shortly.

4. Managing Photos and Videos

On the frame, you can manage your media:

- **Gallery:** View all stored photos and videos.
- **Delete:** Remove unwanted media.
- **Hide:** Temporarily hide photos from the slideshow.
- **Adjust Photo:** Crop or rotate images to fit the frame.

- **Fit to Frame:** Automatically adjust image size to fit the screen.



Image: The Silvergear digital photo frame showcasing a photo collage feature, with on-screen options to select the number of photos for a custom layout.

5. Slideshow Settings

Access the frame's settings to customize your slideshow experience:

- Adjust photo display duration.
- Choose transition effects between photos.
- Enable or disable shuffle mode.

6. Additional Features

- **Weather Display:** Enable weather updates for your location.
- **Timer:** Set a sleep timer for automatic power off.
- **Multi-User Connection:** Invite friends and family to share photos to your frame by providing them with the frame's unique code.
- **Reaction Functionality:** Send reactions (emojis) to photos directly from the frame, which will be visible to the sender in the Frameo app.

**Capturez et partagez les instants de votre vie,
partout et à tout moment.**



Powered by  **frameo**

Image: An illustration showing multiple user icons connected to the Silvergear digital photo frame, emphasizing the multi-user sharing capability.



Image: A hand touching the screen of the Silvergear digital photo frame, selecting an emoji reaction to a displayed photo. This demonstrates the interactive reaction feature.

7. Calendar Function

The frame integrates a calendar function, allowing you to display your daily schedule alongside your photos. This feature can be synchronized with your preferred calendar provider via the Frameo app.



Image: The Silvergear digital photo frame displaying a calendar view on one side and family photos on the other,

MAINTENANCE

1. Cleaning the Frame

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials. Clean the frame body with a dry, soft cloth.

2. Software Updates

The frame may receive periodic software updates to improve performance and add new features. Ensure your frame is connected to WiFi. You can check for updates in the frame's settings menu. Follow on-screen prompts to install any available updates.

3. Storage Management

The frame has 32 GB of internal storage. Regularly review your stored photos and videos and delete any unwanted media to free up space, if necessary.

TROUBLESHOOTING

- **Frame not turning on:** Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Try a different outlet if needed.
- **Cannot connect to WiFi:** Verify your WiFi network is active and within range. Double-check the WiFi password. If issues persist, restart your router and the photo frame.
- **Photos/Videos not appearing:** Confirm your smartphone is connected to the internet and the Frameo app is successfully sending media. Check the frame's internet connection. Ensure the frame has sufficient storage space.
- **Screen unresponsive:** If the touch screen is not responding, try restarting the device by unplugging the power adapter, waiting 10 seconds, and plugging it back in.
- **Images appear distorted or low quality:** Ensure the original images sent are of high resolution. The frame displays content at 720p resolution.

SPECIFICATIONS

Brand	Silvergear
Model Number	4752
Color	Black
Screen Size	10.1 Inches
Resolution	720p
Connectivity Technology	Wi-Fi
Input Interface	Touch Screen

Memory Storage Capacity	32 GB
Power Source	Electric Cable (10W adapter, 100-240V)
Product Dimensions (L x W)	36L x 29W Centimeters
Compatible Devices	Smartphone, Tablet
Manufacturer	Karsten International

WARRANTY AND SUPPORT

Warranty Information

This Silvergear Digital Photo Frame comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external factors.

Customer Support

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Silvergear customer support. Refer to the product packaging or the official Silvergear website for contact details.