

Portable Dryer with Dryer Bag

Generic Portable Dryer with Dryer Bag Instruction Manual

Model: Portable Dryer with Dryer Bag

Brand: Generic

1. INTRODUCTION

Thank you for choosing the Generic Portable Dryer with Dryer Bag. This compact and foldable electric drying machine is designed for convenient use in various settings such as travel, apartments, RVs, and dorms. It provides an efficient and quiet solution for drying clothes, underwear, and socks.

This manual provides essential information for the safe and effective operation, setup, maintenance, and troubleshooting of your portable dryer. Please read it thoroughly before first use and retain it for future reference.

2. PRODUCT COMPONENTS

The package includes the following items:

- 1 x Dryer Machine (Host Unit)
- 1 x Dryer Bag

Quick folding storage Not occupying space

The clothes dryer can be used
by hanging it directly
No installation required

After storage



Image: The main dryer machine unit and the accompanying dryer bag.

3. SETUP INSTRUCTIONS

The portable dryer is designed for quick and easy setup without requiring complex installation.

- 1. Unfold the Dryer Bag:** Carefully unfold the dryer bag from its compact storage state.
- 2. Attach the Dryer Machine:** Insert the dryer machine (host unit) into the designated opening at the top or bottom of the dryer bag, ensuring a secure fit.
- 3. Hang the Dryer Bag:** Use the integrated hanger to suspend the dryer bag in a suitable location. Ensure the hanging point is sturdy enough to support the weight of the dryer bag and wet clothes.
- 4. Connect Power:** Plug the dryer machine into a standard US 110V/50HZ electrical outlet.

Warm and dry Quick drying clothes

Small portable hanging clothes dryer

Easy to install and store

Dry clothes and light tones
do not occupy land

**RAPID
DRYING**

**FOLDABLE, EASY TO
STORE, HANG, AND USE**

Image: The dryer bag suspended and ready for use, demonstrating its hanging capability.

Desktop heater

Soft and comfortable, full of heat

Warm currents pour in, instantly keeping out the cold
New heating experience



Image: The dryer bag in its folded state, illustrating its compact storage design.

4. OPERATING INSTRUCTIONS

Follow these steps to operate your portable dryer:

1. **Load Clothes:** Place up to 6-8 pieces of clothing (approximately 90L capacity) into the dryer bag. Ensure clothes are not dripping wet and are evenly distributed to allow for optimal airflow. Do not overload the dryer bag.
2. **Close the Bag:** Securely close the dryer bag to contain the heat and airflow.
3. **Start Drying:** Press the power button on the dryer machine to begin the drying cycle. The dryer operates with continuous constant temperature between 55-60 °C.
4. **Drying Time:** Drying times will vary based on fabric type, load size, and moisture content. Light items may dry in as little as 20 minutes. Monitor your clothes and remove them once dry.
5. **Stop Drying:** Press the power button again to turn off the dryer machine.

90L capacity

Disposable drying of family clothes
No need for separate operations and effort

Can dry 6-8 pieces of clothing



Image: Illustration of the 90L capacity, capable of drying 6-8 pieces of clothing.

Rapid heating and rapid drying

Persistence in efficient dry clothing, heat flow cycle

Quick release of hot air, instant drying

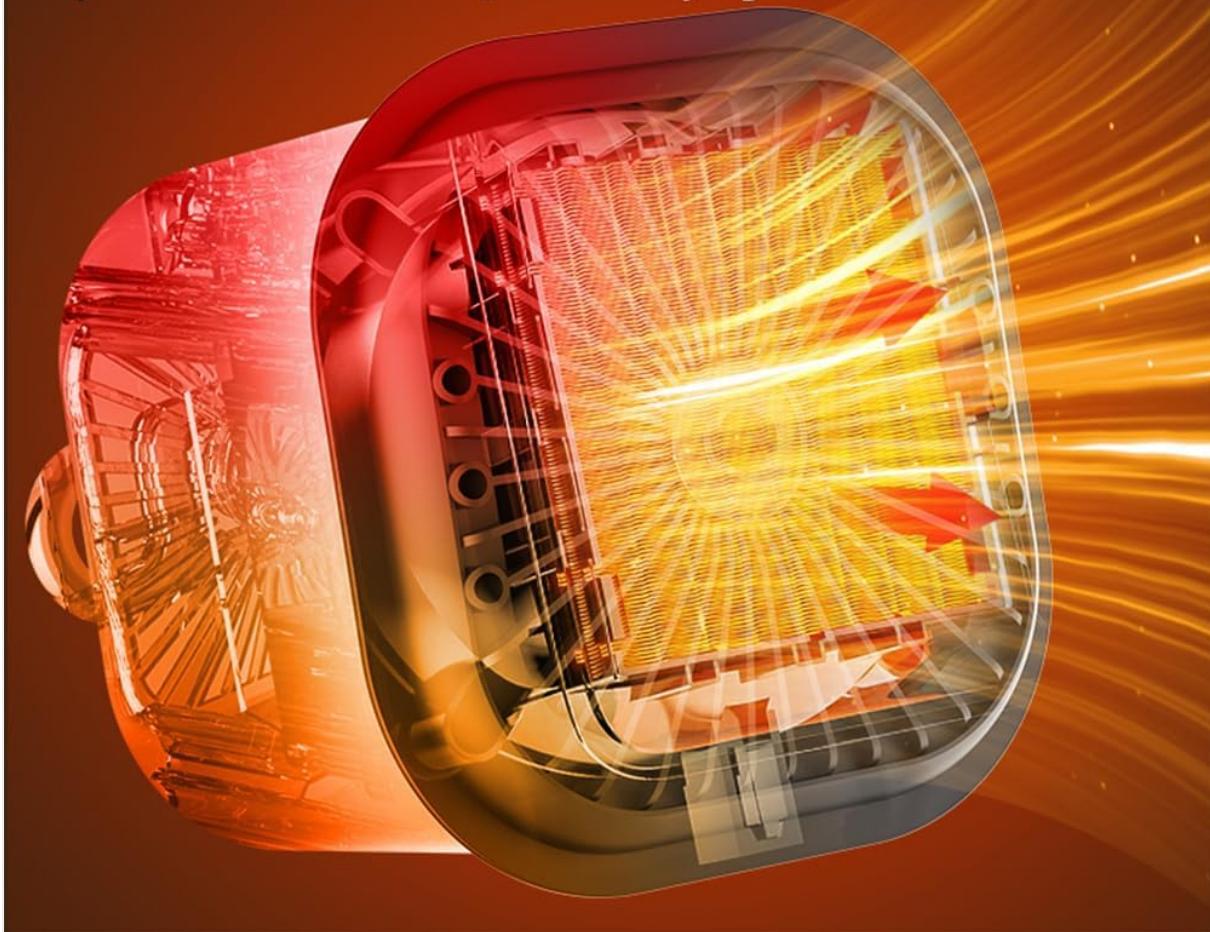


Image: A visual representation of the rapid heating and airflow system within the dryer machine.

5. MAINTENANCE

Proper maintenance ensures the longevity and efficient operation of your portable dryer.

- **Cleaning:** Disconnect the dryer from the power outlet before cleaning. Wipe the exterior of the dryer machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water. The dryer bag can be wiped clean or hand-washed if necessary.
- **Storage:** When not in use, ensure the dryer machine and bag are completely dry. Fold the dryer bag compactly for storage in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your portable dryer, refer to the following common problems and solutions:

- **Dryer Not Turning On:**
 - Ensure the power cord is securely plugged into a functional electrical outlet.
 - Check if the power button on the dryer machine has been pressed.

- **Clothes Not Drying Effectively:**

- Verify that the dryer bag is securely closed.
- Reduce the load size if the dryer bag is overloaded.
- Ensure clothes are not excessively wet before placing them in the dryer.
- Check for proper airflow around the dryer bag.

- **Unusual Noise:**

- Ensure the dryer machine is properly seated in the dryer bag.
- Check for any foreign objects inside the dryer bag or near the machine's air intake/outlet.

7. SPECIFICATIONS

Layers	Single layer
Host Power	300W
Rated Voltage	US 110V/50HZ
Operation	Button operation
Capacity	90L (approximately 6-8 pieces of clothing)
Temperature	55-60 °C Continuous constant temperature
Dry Machine Size	14 x 20 cm / 5.5 x 7.9 inches
Dry Bag Size	50 x 120 cm / 19.7 x 47.2 inches
Product Dimensions	10.63 x 8.66 x 5.51 inches
Item Weight	3.67 pounds

8. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Always unplug the dryer from the power outlet when not in use or before cleaning.
- Do not operate the dryer with a damaged cord or plug.
- Keep the dryer away from water or other liquids. Do not use in excessively humid environments.
- Ensure adequate ventilation around the dryer during operation.
- Do not block the air intake or outlet vents of the dryer machine.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not dry items that have been soiled with flammable substances (e.g., cooking oil, gasoline).

