

N808

# Generic MP4 Player (Compatible iPod Nano 6th Gen) 8GB Silver Instruction Manual

Model: N808 | Brand: Generic

## INTRODUCTION

This manual provides essential information for the safe and efficient use of your Generic MP4 Player, model N808. This compact and lightweight device is designed for portable music enjoyment, featuring a vibrant display and touch screen navigation. It offers crystal-clear audio quality and a long-lasting battery, making it suitable for various activities.

## What's in the Box

- MP4 Player
- Earphones
- Charging Cable



Image: The Generic MP4 Player, model N808, in silver finish.

## SETUP

---

### 1. Charging the Device

Before initial use, fully charge your MP4 player. Connect the included charging cable to the device's port and plug the other end into a compatible USB power source (e.g., computer USB port or USB wall adapter). The device's screen will indicate charging status. A full charge provides up to 8 hours of continuous playback.

### 2. Transferring Music Files

1. Connect the MP4 player to your computer using the provided charging cable.
2. Your computer should recognize the device as a removable storage drive.
3. Drag and drop your desired MP3 or MP4 audio files from your computer's music library (e.g., iTunes library) into the player's music folder.
4. Once files are transferred, safely eject the device from your computer before disconnecting the cable.

### 3. Connecting Earphones

Insert the 3.5mm jack of the included earphones into the earphone port on the MP4 player. Ensure the connection is secure for optimal audio output.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

- To power on: Press and hold the power button (location may vary, typically on the side or top edge) until the screen illuminates.
- To power off: Press and hold the power button until a power-off prompt appears, then confirm your selection on the touch screen.

### 2. Navigation

The MP4 player features a touch screen for navigation. Swipe left, right, up, or down to browse menus and lists. Tap on icons or options to select them. Use the back button (if present, or swipe gestures) to return to previous screens.

### 3. Playing Music

1. From the main menu, tap on the 'Music' or 'Player' icon.
2. Browse your music library by artist, album, song, or playlist.
3. Tap on a song to begin playback.
4. During playback, controls for play/pause, skip track, and repeat are typically available on the screen.

### 4. Volume Control

Adjust the volume using the dedicated volume buttons on the side of the device, or via on-screen controls if available during playback.

## MAINTENANCE

---

### Cleaning

To clean the device, gently wipe the screen and body with a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the device's finish or internal components.

## Storage

When not in use for extended periods, store the MP4 player in a cool, dry place away from direct sunlight and extreme temperatures. For optimal battery health, avoid storing the device with a completely depleted or fully charged battery for long durations.

## TROUBLESHOOTING

### Device Not Turning On

- Ensure the battery is charged. Connect the device to a power source and allow it to charge for at least 30 minutes before attempting to power it on again.
- Perform a soft reset by pressing and holding the power button for 10-15 seconds.

### No Sound from Earphones

- Check that the earphones are fully plugged into the earphone jack.
- Increase the volume using the device's volume controls.
- Test with another pair of earphones to rule out a faulty earphone issue.

### Music Files Not Transferring

- Ensure the USB cable is securely connected to both the player and the computer.
- Try connecting to a different USB port on your computer.
- Verify that the music files are in a supported format (MP3, MP4).
- Restart your computer and the MP4 player, then attempt the transfer again.

## SPECIFICATIONS

<b>Brand</b>	Generic
<b>Model Name</b>	nano 6th generation compatible
<b>Model Number</b>	N808
<b>Memory Storage Capacity</b>	8 GB
<b>Color</b>	Silver/Black
<b>Screen Size</b>	1.54 Inches
<b>Display Technology</b>	LCD
<b>Special Features</b>	Lightweight, Touch Screen
<b>Connectivity Technology</b>	Wired
<b>Supported Media Types</b>	Digital (MP3, MP4)
<b>Battery Average Life</b>	8 Hours
<b>Item Weight</b>	4 Ounces
<b>Item Dimensions (D x W x H)</b>	1.5"D x 0.3"W x 1.5"H

## WARRANTY AND SUPPORT

## Warranty Information

This Generic MP4 Player comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

## Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details.