

Cecotec A01_EU01_100520

Cecotec Proclean 5010 Flatbed Digital Microwave Oven

Model: A01_EU01_100520

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, burns, or injury to persons.

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not attempt to service or repair the oven yourself. Contact qualified service personnel for examination, repair, or adjustment.
- Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Ensure proper ventilation around the appliance. Do not block any ventilation openings.
- Always supervise children when the microwave is in use.
- Do not place metal objects, foil, or metal-edged dishes inside the microwave, as this can cause arcing and damage the appliance.

2. PRODUCT OVERVIEW

The Cecotec Proclean 5010 Flatbed Digital Microwave Oven offers a 20-liter capacity with a flatbed design, eliminating the need for a turntable. This design maximizes usable space and simplifies cleaning. It features 700W microwave power, an 800W halogen grill, an LED display, and 8 automatic programs, incorporating 3DWave technology for even cooking.



Front view of the Cecotec Proclean 5010 Flatbed Digital Microwave Oven, showcasing its sleek stainless steel finish and digital display.



Angled view of the microwave, highlighting its compact design and integrated control panel.



Detailed view of the digital control panel, featuring the LED display, program buttons, and rotary knob for settings adjustment.

3. SETUP

3.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged. Contact your retailer or authorized service center.

3.2 Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven.
- Ensure there is adequate ventilation space: at least 20 cm of space above the oven, 10 cm at the rear, and 5 cm on both sides. This is crucial for proper operation and to prevent overheating.
- Keep the oven away from heat and steam sources.
- Do not place the oven near a radio or TV, as microwave operation may cause interference.

3.3 Electrical Connection

Plug the power cord into a standard grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance rating label.

4. OPERATING INSTRUCTIONS

The Cecotec Proclean 5010 features a user-friendly digital interface for various cooking needs.

4.1 Basic Microwave Cooking

- Place food in a microwave-safe dish directly onto the flatbed surface.
- Close the oven door securely.
- Use the rotary knob to set the desired cooking time.
- Press the power level button to select one of the 5 adjustable power levels.
- Press the Start button to begin cooking. The LED display will show the remaining time.

4.2 Grill Function

The 800W halogen grill allows for browning and crisping food, providing a golden finish.

- Place food on a heat-resistant dish suitable for grilling.
- Select the grill function using the dedicated button.
- Set the desired grilling time using the rotary knob.
- Press Start.



The microwave interior showing a roasted chicken and potatoes, demonstrating the grill function's capability.

4.3 Automatic Programs

The oven includes 8 pre-set automatic programs for common dishes, simplifying cooking. Refer to the specific program list in your detailed manual for usage.

4.4 Defrost Mode

The quick defrost mode helps preserve the texture and flavor of food. This function allows you to defrost food by weight or time.

- Place the frozen food in a microwave-safe dish.
- Select the defrost function.
- Choose defrost by weight or time, and adjust accordingly.
- Press Start.



An image depicting salmon on ice next to the microwave, symbolizing the efficient defrosting capability.

4.5 Timer and Clock

The 60-minute timer and LED display ensure precise cooking control and time monitoring. An audible alert will sound when cooking is complete.

5. MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and optimal performance. The flatbed design makes cleaning particularly easy.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Door Seal:** Regularly clean the door seal and adjacent parts to remove any food spills.



A hand wiping the flatbed interior of the microwave, demonstrating the ease of cleaning due to the absence of a turntable.

6. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Food not heating	Cooking time/power level set too low; Improper dish used.	Increase cooking time/power; Use microwave-safe cookware.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

Problem	Possible Cause	Solution
Condensation inside oven	High moisture content in food.	This is normal, wipe with a dry cloth after use.

If the problem persists after attempting these solutions, please contact Cecotec customer support.






7. SPECIFICATIONS

- **Brand:** Cecotec
- **Model Number:** A01_EU01_100520
- **Color:** Steel
- **Capacity:** 20 Liters
- **Microwave Power:** 700 Watts
- **Grill Power:** 800 Watts
- **Total Power:** 1150 Watts
- **Voltage:** 230 Volts
- **Material:** Stainless Steel
- **Product Dimensions (L x W x H):** 45 x 36 x 26 cm
- **Item Weight:** 11.81 Kilograms
- **Special Features:** Lightweight, Programmable, Flatbed Design, 3DWave Technology

8. WARRANTY AND SUPPORT

Cecotec is committed to providing quality products. Spare parts for this model are available for up to 10 years from the date of purchase.

For any technical assistance, warranty claims, or further inquiries, please contact Cecotec customer support through their official website or the contact information provided in your purchase documentation. Please have your model number (A01_EU01_100520) and proof of purchase ready when contacting support.

	<p>Manual de Usuario Cecotec ProClean 5110 Inox</p> <p>Manual detallado de usuario para el microondas Cecotec ProClean 5110 Inox, cubriendo instrucciones de seguridad, funcionamiento, limpieza y especificaciones técnicas.</p>
	<p>Cecotec Proclean 5110 Retro Digital Microwave with Grill - User Manual</p> <p>User manual for the Cecotec Proclean 5110 Retro digital microwave with grill, covering parts identification, operation modes, cooking functions, cleaning, maintenance, technical specifications, and disposal information.</p>
	<p>Cecotec GrandHeat 2500 Flatbed Touch White Microwave Oven User Manual</p> <p>Comprehensive user manual for the Cecotec GrandHeat 2500 Flatbed Touch White microwave oven, covering installation, operation, features, maintenance, troubleshooting, and warranty.</p>
	<p>Cecotec Proclean 5110 Retro Microwave User Manual</p> <p>Comprehensive user manual for the Cecotec Proclean 5110 Retro microwave, covering safety instructions, operation, cleaning, maintenance, and technical specifications in multiple languages.</p>
	<p>Manual de Instrucciones Cecotec ProClean 4010 Microondas</p> <p>Manual de instrucciones completo para el microondas Cecotec ProClean 4010, cubriendo seguridad, funcionamiento, limpieza, especificaciones técnicas y garantía.</p>



[Cecotec PROCLEAN 2110 Microwave User Manual](#)

Comprehensive user manual for the Cecotec PROCLEAN 2110 microwave, covering safety instructions, operation, cleaning, maintenance, and technical specifications in multiple languages.