



Manuals.plus /

› KAER /

› KAER 6 Gun Safe Instruction Manual

KAER Gun Safe (1430)

KAER 6 Gun Safe Instruction Manual

Model: Gun Safe (1430)

Brand: KAER

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your KAER 6 Gun Safe. Please read this manual thoroughly before operating the safe to ensure proper functionality and security.

IMPORTANT SAFETY INFORMATION

WARNING:

- Always securely mount the safe to the floor or wall to prevent tipping.
- Keep the safe away from heat sources.
- Do not place heavy objects on top of the safe.
- Always follow the manufacturer's instructions for safe use and maintenance.
- Store keys and digital codes in a secure location, separate from the safe.
- Ensure firearms are unloaded before storing them in the safe.

PRODUCT FEATURES

The KAER 6 Gun Safe is designed for secure storage of rifles and pistols, offering robust construction and multiple access methods.

Capacity and Interior

This gun safe is designed to hold up to 6 rifles, with or without scopes. It features 2 removable shelves and 2 gun racks, allowing for flexible organization of firearms and ammunition. The interior is lined with felt to protect firearms from scratches.



Image: Interior view of the KAER 6 Gun Safe, highlighting its capacity for 6 rifles, two adjustable shelves, and integrated pistol pouches on the inside of the door. Dimensions are also shown, indicating a height of 56.3 inches and a rifle storage height of 41.7 inches.

Construction and Security

Constructed from heavy-duty steel, the safe features a 4mm thick door and 3x20mm robust locking bolts for enhanced security. Its anti-tampering and anti-prying design provides reliable strength against unauthorized access.

Anti-Theft & Anti-Pry Design



All Alloy Steel



Heavy-Duty




Solid & Secure



Anti-Prying



4mm Thick Door

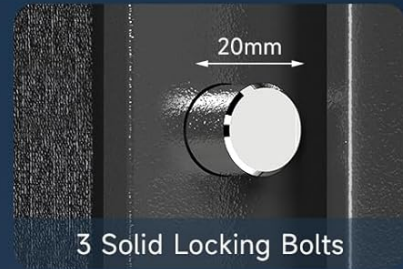

3 Solid Locking Bolts



All Alloy Steel Construction
Anti-prying



4 Expansion Bolts

Image: A visual breakdown of the KAER 6 Gun Safe's security features, including its all-alloy steel construction, 4mm thick door, three solid 20mm locking bolts, and overall anti-prying design. Four expansion bolts for mounting are also shown.

Unlocking Methods

The safe offers three primary unlocking methods:

1. **Digital Keypad:** A programmable 3-8 digit PIN for quick access.
2. **Traditional Key:** Two emergency keys are provided for manual access.
3. **Emergency Power Box:** Used when the internal battery is depleted or keys are lost, providing external power to the digital keypad.


Three Unlocking Methods

You can refer to the video on how to set the password

1 Digital Password(3-12 digits)



2 Emergency Key(2 Keys)

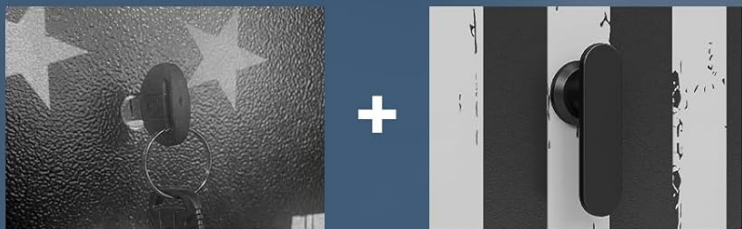

3 Emergency Power Box



When the internal battery is low, you can use the external battery compartment to access the gun cabinet



Image: This graphic details the three ways to unlock the KAER 6 Gun Safe: using a digital password (3-12 digits), an emergency key (two keys included), and an emergency power box for situations where the internal battery is low.

Alarm and Silent Modes

The safe is equipped with an alarm system that activates if an incorrect password is entered three times. It also features a silent mode, which can be toggled by pressing "11#" on the keypad, to silence beeps for discreet operation.

Alarm and Silent Modes

Silent Mode and Password Error Prompt
Press "11#" to switch between silent and non-quiet modes



When an incorrect PIN is entered, the keypad emits 4 beeps, which can only be canceled when the correct PIN is entered

Image: This image illustrates the alarm and silent modes of the KAER 6 Gun Safe. It shows the alarm activating after incorrect password entries and the option to switch to silent mode by pressing "11#" on the keypad.

SETUP

Unpacking

The KAER 6 Gun Safe comes pre-assembled. Carefully remove all packaging materials. Inspect the safe for any signs of damage during transit. Report any damage to the retailer immediately.


Battery Installation

Locate the battery compartment on the inside of the safe door. Install 4 AA alkaline batteries (not included) according to the polarity indicators. Close the battery compartment cover securely.

Mounting the Safe


For optimal security, it is highly recommended to mount the safe to a wall or floor using the provided expansion bolts. Pre-drilled holes are available on the back and bottom of the safe.

1. Choose a suitable location, ensuring the surface is sturdy enough to support the safe's weight.
2. Mark the drilling points through the pre-drilled holes on the safe.
3. Drill pilot holes into the wall or floor.
4. Align the safe with the drilled holes and secure it using the 4 expansion bolts.



4 Expansion Bolts
You can install it to the floor or wall

Installation Diagram:

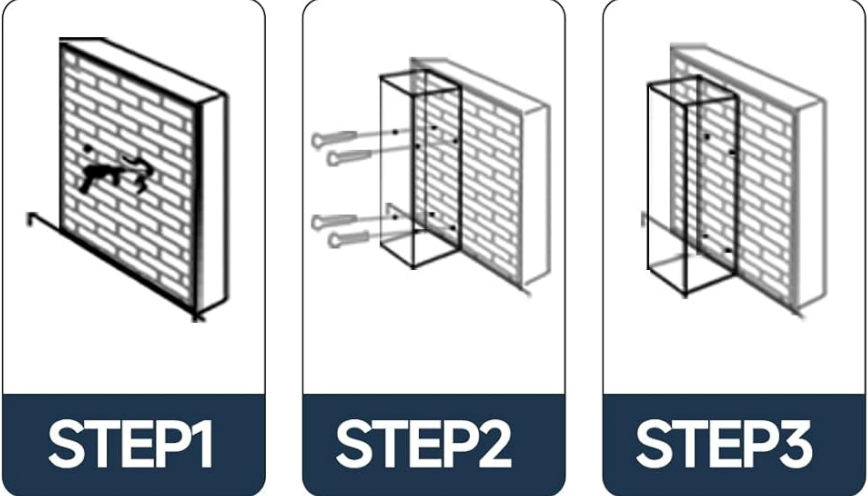

STEP 1 **STEP 2** **STEP 3**


 **Tip:** Before use the gun safe, please use the 4 mounting bolts provided to fix it to the wall or floor

Image: A three-step diagram illustrating how to install the KAER 6 Gun Safe to a wall or floor using the provided 4 expansion bolts. Step 1 shows marking the wall, Step 2 shows drilling, and Step 3 shows securing the safe.

OPERATING INSTRUCTIONS

Setting Your Digital Password

To set or change your digital password (3-8 digits):

1. With the safe door open, press the red reset button located on the inside of the door (usually near the battery compartment).
2. Enter your desired 3-8 digit code on the keypad.
3. Press the "#" key to confirm. The safe will beep to confirm the new code.

Unlocking with Digital Password

Enter your 3-8 digit password on the keypad, then press "#". Turn the handle clockwise to open the door.

Unlocking with Emergency Key

Insert the emergency key into the keyhole located on the front of the safe. Turn the key and simultaneously turn the handle to open the door.

Using the Emergency Power Box

If the internal batteries are dead, connect the emergency power box (requires 4 AA batteries, not included) to the external power port on the keypad. This will temporarily power the keypad, allowing you to enter your digital password and open the safe.

Activating Silent Mode

To switch between silent and non-silent modes, press "11#" on the digital keypad.

MAINTENANCE

- **Battery Replacement:** Replace batteries annually or when the low battery indicator appears. Use only AA alkaline batteries.
- **Cleaning:** Wipe the safe exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Lubrication:** Periodically lubricate the locking bolts and hinges with a light lubricant to ensure smooth operation.
- **Key Storage:** Store emergency keys in a secure location away from the safe and out of reach of unauthorized individuals.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with digital code.	Incorrect code entered; low batteries.	Re-enter correct code. Replace batteries or use emergency power box.
Alarm sounds frequently.	Incorrect code attempts; tampering.	Ensure correct code is used. Check for tampering.
Door is stiff or difficult to open/close.	Lack of lubrication; obstruction.	Lubricate hinges and locking bolts. Check for any obstructions.

SPECIFICATIONS

Brand: KAER

Model Name: Gun Safe

Product Dimensions: 12.6"D x 14.09"W x 56.3"H

Item Weight: 70.6 Pounds

Material: Alloy Steel

Lock Type: Electronic Combination Lock, Key

Number of Shelves: 3 (2 removable)

Capacity: 6 Rifles

Special Features: Alarm System, Sensor Light, Combination Lock, Anti-Theft, Removable Shelf

Mounting Type: Wall Mount / Floor Mount

Assembly Required: No

Included Components: Gun Safe*1, Emergency Power Box, Key*2, Expansion Bolt*4

WARRANTY & SUPPORT

For any questions or assistance with your KAER Gun Safe, please contact our professional after-sales team. Refer to your purchase documentation for specific warranty details.

Customer Support: Please refer to the contact information provided by your retailer or visit the official KAER website for support.

Important Note for Delivery: A valid phone number is required for delivery. The freight carrier will contact you to schedule delivery. Please be present to sign for and inspect your safe upon arrival.