

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Deerma](#) /

› [Deerma DX810 2-In-1 Handheld Vacuum Cleaner User Manual](#)

Deerma DX810-AA

Deerma DX810 2-In-1 Handheld Vacuum Cleaner User Manual

Model: DX810-AA

1. INTRODUCTION

Thank you for choosing the Deerma DX810 2-In-1 Handheld Vacuum Cleaner. This versatile appliance is engineered for powerful and convenient cleaning across various surfaces in your home. With its strong suction, advanced filtration, and adaptable design, maintaining a clean environment has never been easier. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image: The Deerma DX810 vacuum cleaner shown in both its full stick configuration and as a compact handheld unit, highlighting its dual functionality.

2. PRODUCT COMPONENTS

The Deerma DX810 vacuum cleaner comes with several components designed for various cleaning tasks. Familiarize yourself with each part before assembly and operation.

You will Get

- ① Crevice Nozzle
- ② 2 in 1 Brush
- ③ Self-Stand Powerful Brush
- ④ Body receiving buckle
- ⑤ Fuselage receiving tube
- ⑥ Main Engine
- ⑦ Operation guide

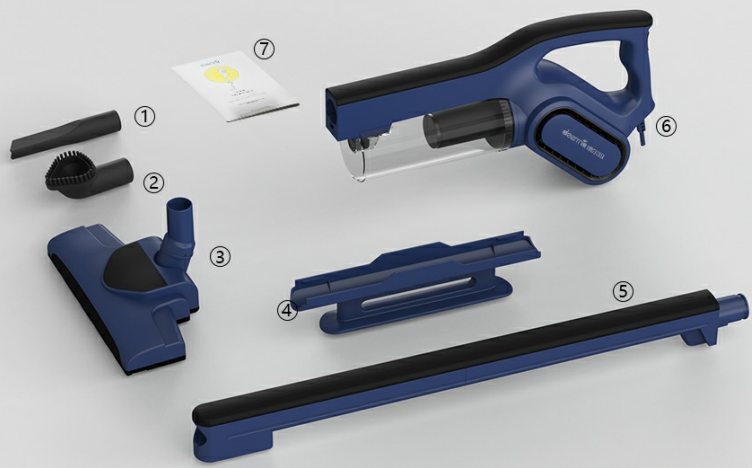


Image: An exploded view diagram showing all the individual components included with the Deerma DX810 vacuum cleaner, such as the main engine, dust cup, various nozzles, and extension tubes.

1. **Crevice Nozzle:** Ideal for narrow gaps and corners.
2. **2-in-1 Brush:** Combines a brush and wide nozzle for versatile cleaning.
3. **Self-Stand Powerful Brush:** Main floor brush for general cleaning.
4. **Body Receiving Buckle:** Connects the main engine to the fuselage tube.
5. **Fuselage Receiving Tube:** The extension tube for stick vacuum mode.
6. **Main Engine:** Contains the motor, dust cup, and filter system.
7. **Operation Guide:** This instruction manual.

3. ASSEMBLY

The Deerma DX810 can be easily assembled into a stick vacuum or used as a handheld unit.

3.1. Assembling the Stick Vacuum

1. Insert the Fuselage Receiving Tube (5) into the Main Engine (6) until it clicks securely.
2. Attach the Self-Stand Powerful Brush (3) to the bottom end of the Fuselage Receiving Tube (5). Ensure it is firmly connected.
3. The Body Receiving Buckle (4) can be attached to the Fuselage Receiving Tube for convenient storage of accessories.

3.2. Using as a Handheld Vacuum

For handheld use, detach the Fuselage Receiving Tube (5) and Self-Stand Powerful Brush (3) from the Main Engine (6). You can then directly attach the Crevice Nozzle (1) or the 2-in-1 Brush (2) to the Main Engine for targeted cleaning.

4. OPERATION

The Deerma DX810 is designed for efficient cleaning on various surfaces. Always ensure the dust cup and filter are properly installed before operation.

4.1. Powering On/Off

Plug the power cord into a suitable electrical outlet. Press the power button located on the handle of the Main

Engine to turn the vacuum cleaner on. Press it again to turn it off.

4.2. Cleaning Different Surfaces

- **Hard Floors and Carpets:** Use the Self-Stand Powerful Brush (3) in stick vacuum mode for effective cleaning of marble, tile, wooden floors, and carpets. The strong 16KPa suction power is ideal for collecting surface debris and deeply embedded dirt.



Image: A person operating the Deerma DX810 in stick vacuum mode on a hard floor, demonstrating its ease of use for general floor cleaning.

- **Furniture and Upholstery:** Switch to handheld mode and attach the 2-in-1 Brush (2) to clean sofas, chairs, and other furniture surfaces.



Image: A close-up of the Deerma DX810 being used in handheld mode with the crevice nozzle to clean between sofa cushions, illustrating its utility for tight spaces.

- **Tight Spaces and Corners:** The Crevice Nozzle (1) is perfect for reaching narrow gaps, corners, and edges where dirt accumulates.

The ergonomic handle design allows for comfortable use at multiple angles, making it easy to clean your entire home.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Deerma DX810 vacuum cleaner. Always unplug the appliance before performing any maintenance.

5.1. Emptying the Dust Cup

The dust cup has a capacity of 0.8 liters. It should be emptied regularly, especially when the dust level reaches the MAX line. To empty:

1. Press the release button to detach the dust cup from the Main Engine.

2. Hold the dust cup over a trash bin and open the bottom lid to release the collected dust and debris.



Image: A hand holding the transparent dust cup of the Deerma DX810 vacuum cleaner, demonstrating the process of emptying collected dust and debris into a waste bin.

3. Close the lid securely and reattach the dust cup to the Main Engine until it clicks into place.

5.2. Cleaning the HEPA Filter

The HEPA filter is crucial for the vacuum's three-layer filtration system. It should be cleaned periodically to maintain suction power.

1. Remove the dust cup as described above.
2. Carefully remove the HEPA filter and its components from inside the dust cup.
3. Tap the filter gently over a trash bin to dislodge dust. For a more thorough clean, rinse the filter under running water.
4. **Important:** Ensure the HEPA filter is completely dry before reinserting it into the dust cup. Air dry for at least 24 hours. Do not use a dryer or direct heat.
5. Reassemble the filter components and place them back into the dust cup, then reattach the dust cup to the Main Engine.

5.3. Cleaning the Brush Head

Periodically check the Self-Stand Powerful Brush for tangled hair or debris. Use scissors to cut away any tangled hair and remove it. Wipe the brush head with a damp cloth if necessary.

6. TROUBLESHOOTING

If you encounter issues with your Deerma DX810, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet issue; Damaged power cord	Ensure plug is fully inserted; Test outlet with another device; Inspect cord for damage (do not use if damaged, contact support)
Reduced suction power	Full dust cup; Clogged filter; Blockage in nozzle/tube	Empty dust cup; Clean HEPA filter; Check and clear any blockages
Unusual noise	Blockage in brush head/tube; Loose component	Check for and remove blockages; Ensure all components are securely assembled
Overheating	Clogged filter; Prolonged use; Blockage	Clean filter; Allow vacuum to cool down; Check for blockages

7. SPECIFICATIONS

- **Brand:** Deerma
- **Model Number:** DX810-AA
- **Color:** Blue
- **Power / Wattage:** 600W
- **Suction Power:** Up to 16KPa
- **Dust Capacity:** 0.8 Liters
- **Filter Type:** HEPA Filter
- **Special Features:** Portable, 2-in-1 Handheld and Stick
- **Item Weight:** 1 Kilogram
- **Power Source:** Corded Electric
- **Surface Recommendation:** All floors

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Deerma customer service through their official website or authorized retailers. Keep your purchase receipt as proof of purchase for warranty claims.

