

Jazmm 213

Jazmm Model 213 Portable Multi-Band Radio

User Manual

1. INTRODUCTION

Thank you for purchasing the Jazmm Model 213 Portable Multi-Band Radio. This device is designed to provide versatile audio entertainment and essential weather information. It features AM, FM, Shortwave (SW), and NOAA Weather Band (WB) reception, Bluetooth 5.4 connectivity, TF card playback, a powerful 5W speaker, and a built-in rechargeable battery with flashlight functionality. This manual provides detailed instructions for the proper use and maintenance of your radio.

Portable AM FM SW WB Radio



Image 1.1: The Jazmm Model 213 Portable Multi-Band Radio highlighting its key features including AM/FM/SW/WB radio, TF card support, Bluetooth 5.4, 5W speaker, rechargeable battery, flashlight, sleep timer, and 6 EQ sound effects.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Keep these instructions for future reference.

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.

- Keep the device away from water and other liquids.
- Use only the provided charging cable or a certified Type-C cable for charging.
- Dispose of the battery according to local regulations. Do not incinerate.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a moderate level.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Jazmm Model 213 AM FM SW WB Radio
- Owner's Manual (this document)
- USB Type-C Power Cord

4. PRODUCT OVERVIEW

Familiarize yourself with the radio's components and controls.



Image 4.1: Front and side view of the Jazmm Model 213 radio. The front features a large digital display, speaker, and control buttons (MODE/SLEEP, BAND, Power, MEM/EQ, SCAN/PLAY). The side shows the LOCK/LIGHT switch, TF card slot, DC 5V Type-C charging port, and a 1250mAh battery indicator.

Controls and Ports:

- **Digital Display:** Shows frequency, band, volume, battery level, and other indicators.
- **Speaker:** 5W output for clear audio.
- **MODE/SLEEP Button:** Switches between modes (Radio, Bluetooth, TF Card) and activates sleep timer.
- **BAND Button:** Selects radio bands (FM, AM, SW, WB).
- **Power Button:** Turns the radio on/off.
- **MEM/EQ Button:** Accesses memory functions and cycles through EQ sound effects.
- **SCAN/PLAY Button:** Initiates auto-scan for radio stations or plays/pauses in Bluetooth/TF card mode.
- **Tuning Knob:** Adjusts frequency.

- **Volume +/- Buttons:** Adjusts audio volume.
- **LOCK/LIGHT Switch:** Locks buttons or activates the flashlight.
- **TF Card Slot:** For Micro SD card playback (up to 128GB).
- **DC 5V Type-C Charging Port:** For charging the internal battery.
- **3.5mm Headphone Jack:** For private listening.
- **Telescopic Antenna:** For improved radio reception.
- **Back Clip & Wrist Strap:** For portability and secure carrying.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the radio's internal 1250mAh lithium polymer battery. Connect the provided USB Type-C power cord to the DC 5V charging port on the side of the radio and plug the other end into a compatible USB power adapter (not included) or a computer USB port. The charging indicator on the display will show charging status. A full charge typically takes approximately 1.5 hours and provides 10-12 hours of usage.

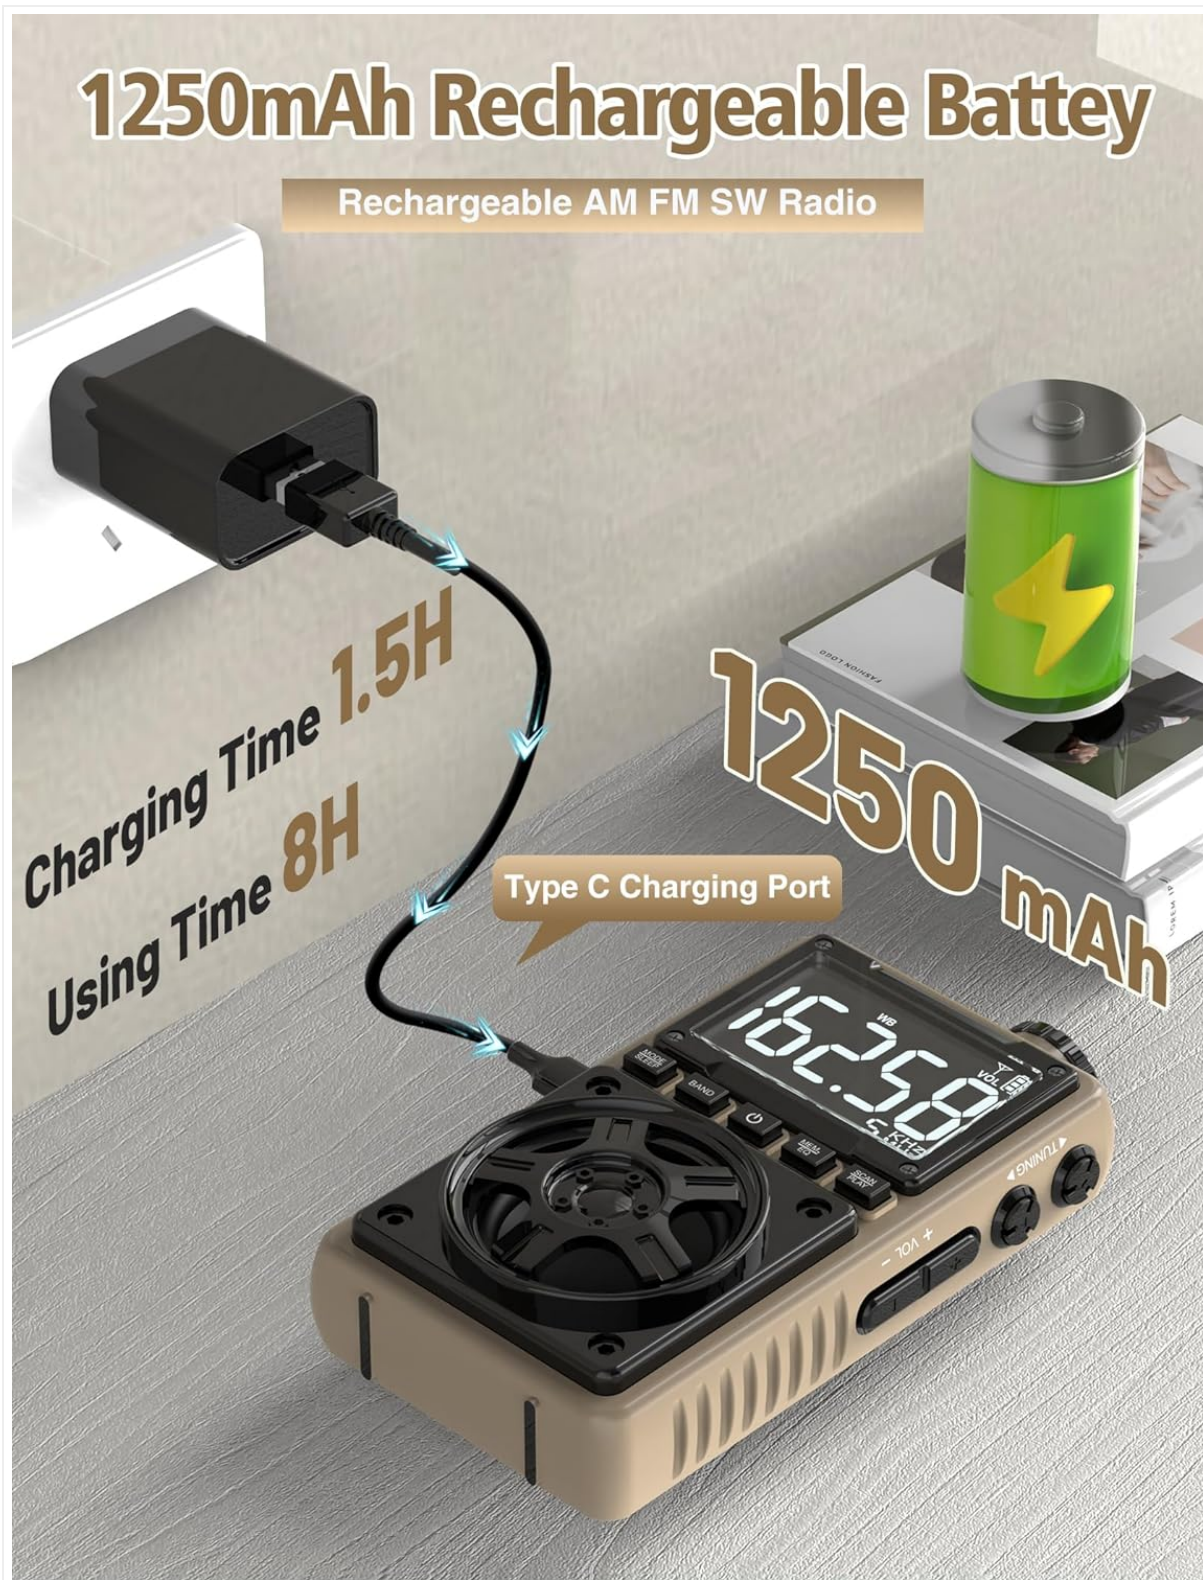


Image 5.1: The Jazmm Model 213 radio connected to a power adapter via its Type-C charging port, illustrating the charging process for its 1250mAh rechargeable battery.

5.2 Antenna Adjustment

For optimal radio reception, extend the telescopic antenna fully when listening to FM, SW, or WB bands. For AM reception, the internal antenna is generally sufficient, but adjusting the radio's orientation may improve signal strength.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press and hold the **Power Button** (**Jazmm**) for approximately 2 seconds to turn the radio on or off.

6.2 Mode Selection

Press the **MODE/SLEEP Button** to cycle through available modes: Radio (FM/AM/SW/WB), Bluetooth, and TF Card (if a card is inserted).

6.3 Radio Band Selection and Tuning

In Radio mode, press the **BAND Button** to switch between FM, AM, Shortwave (SW), and NOAA Weather Band (WB).

- **FM:** 87-108 MHz
- **AM:** 520-1710 KHz
- **SW:** 4.75-21.85 MHz
- **WB:** 162.400-162.550 MHz



Image 6.1: The radio displaying different frequencies across FM, AM, SW, and WB bands, illustrating its multi-band reception capability with an extended antenna.

Manual Tuning:

Rotate the **Tuning Knob** on the side of the radio to manually adjust the frequency.

Automatic Scan:

Press the **SCAN/PLAY Button** to automatically scan for and save available stations. The radio can store up to 100 preset stations.

6.4 Preset Stations

After an automatic scan, use the **Tuning Knob** or the **MEM/EQ Button** to navigate through saved preset

stations. Refer to the display for preset numbers (e.g., P01, P02).



Image 6.2: The radio positioned on a nightstand, illustrating the sleep timer function and the display of preset station numbers (P01, P05, P19, etc.).

6.5 Volume Control

Use the **Volume +/- Buttons** on the side of the radio to increase or decrease the audio output.

6.6 Bluetooth Mode

Switch to Bluetooth mode using the **MODE/SLEEP Button**. The radio will enter pairing mode, indicated by a blinking Bluetooth icon on the display. On your smartphone, tablet, or laptop, search for Bluetooth devices and select "Jazmm 213" to connect. The radio acts as a Bluetooth speaker. Note: This radio does

not support connection to Bluetooth earphones.



Image 6.3: A visual representation of the Jazmm Model 213 radio establishing a Bluetooth connection with various devices like smartphones, tablets, and laptops, functioning as a Bluetooth speaker.

6.7 TF Card Playback (MP3 Player)

Insert a Micro SD card (up to 128GB) with MP3 audio files into the **TF Card Slot**. Switch to TF Card mode using the **MODE/SLEEP Button**. The radio will automatically begin playing music from the card. Use the **SCAN/PLAY Button** to play/pause and the **Tuning Knob** to skip tracks.

MP3 Music Player & 3.5mm Earphone Jack

Insert TF Card to play your favorite songs



Support Micro SD Card (MAX 128G)



Support 3.5mm Earphone



Image 6.4: A user enjoying music through headphones connected to the Jazmm Model 213 radio, with an inset showing the TF card slot for Micro SD card insertion.

6.8 Headphone Use

Plug standard 3.5mm headphones into the **3.5mm Headphone Jack** for private listening. The radio's speaker will automatically mute when headphones are connected.

6.9 NOAA Weather Alert

In WB (Weather Band) mode, the radio is capable of receiving real-time weather alerts and updates from the National Oceanic and Atmospheric Administration. This feature helps you prepare for potential weather hazards. Ensure the antenna is extended for best reception.

7 NOAA Weather Bands Weather Alert & SOS Flashlight



Image 6.5: The radio displaying a NOAA weather alert, with a flashlight beam illuminating the foreground and a stormy sky in the background, emphasizing its emergency preparedness features.

6.10 Flashlight Function

Slide the **LOCK/LIGHT Switch** to activate the built-in LED flashlight. This can be useful in low-light conditions or emergencies.

6.11 Sleep Timer

Press and hold the **MODE/SLEEP Button** to activate the sleep timer. Repeated presses will cycle through available durations (e.g., 10, 60, 90, 120 minutes). The radio will automatically turn off after the selected time.

6.12 Lock Key

Slide the **LOCK/LIGHT Switch** to the 'LOCK' position to prevent accidental button presses. This is useful when carrying the radio in a pocket or bag.

6.13 EQ Sound Effects

Press the **MEM/EQ Button** (short press) to cycle through 6 preset EQ sound effects: Normal, Rock, Pop, Jazz, Class, and Village. Select the effect that best suits your audio preference.



Image 6.6: The radio's 5W speaker is highlighted, surrounded by icons representing the six available EQ stereo sound effects: Normal, Rock, Pop, Jazz, Class, and Village.

7. SPECIFICATIONS

Feature	Detail
Model Number	213
Product Dimensions	2.3 x 4 x 1.3 inches (5.84 x 10.16 x 3.3 cm)
Item Weight	4.6 ounces (130 grams)
Radio Bands Supported	FM (87-108MHz), AM (520-1710KHz), SW (4.75-21.85MHz), WB (162.400-162.550MHz)
Connectivity Technology	Bluetooth 5.4
Speaker Output	5W
Battery	1250mAh Lithium Polymer (Rechargeable, included)
Charging Port	USB Type-C (DC 5V)
Charging Time	Approx. 1.5 hours
Usage Time	Approx. 10-12 hours (depending on usage)
Memory Card Support	Micro SD (TF Card) up to 128GB
Special Features	NOAA Weather Alert, Built-In Flashlight, SOS Alarm, Sleep Timer, 100 Preset Stations, Digital Backlight Screen, Back Clip, Wrist Strap

8. TROUBLESHOOTING

Problem	Possible Cause / Solution
Radio does not turn on.	<ul style="list-style-type: none">◦ Battery is depleted. Charge the radio fully.◦ Power button not held long enough. Press and hold for 2 seconds.
Poor radio reception.	<ul style="list-style-type: none">◦ Antenna not extended. Fully extend the telescopic antenna.◦ Interference from electronic devices. Move away from other electronics.◦ Weak signal in your location. Try repositioning the radio or adjusting its orientation (especially for AM).
Bluetooth not connecting.	<ul style="list-style-type: none">◦ Radio not in Bluetooth mode. Press MODE/SLEEP button to select Bluetooth.◦ Device too far. Ensure your device is within 10 meters of the radio.◦ Bluetooth on your device is off. Enable Bluetooth on your smartphone/tablet.◦ Radio is connected to another device. Disconnect from other devices.

TF card not playing.	<ul style="list-style-type: none"> ◦ TF card not inserted correctly. Reinsert the card firmly. ◦ Radio not in TF Card mode. Press MODE/SLEEP button to select TF Card mode. ◦ Unsupported file format. Ensure files are in MP3 format. ◦ Corrupted TF card or files. Try a different TF card or reformat the current one.
No sound from speaker/headphones.	<ul style="list-style-type: none"> ◦ Volume is too low. Increase volume using Volume +/- buttons. ◦ Headphones are plugged in. Unplug headphones if you want sound from the speaker. ◦ Radio is muted. Check if any mute function is active.

9. MAINTENANCE





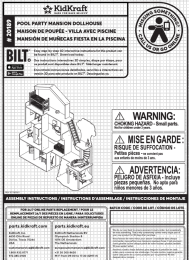
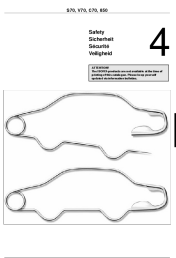
- **Cleaning:** Use a soft, dry cloth to clean the radio's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the radio in a cool, dry place.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the radio periodically even if not in use.
- **Antenna:** Handle the telescopic antenna gently to prevent bending or breaking. Retract it when not in use.

10. WARRANTY AND SUPPORT

Jazmm products are designed for reliability and performance. For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you encounter any issues or require technical assistance, please contact Jazmm customer support through the retailer's platform or the official Jazmm website.

Please have your product model number (213) and purchase details ready when contacting support.

© 2025 Jazmm. All rights reserved. Specifications are subject to change without notice.

	<p>Jazmm 213 Portable Radio User Manual</p> <p>Comprehensive user manual for the Jazmm 213 portable radio, covering setup, operation, features, precautions, and specifications. Learn how to use its radio, Bluetooth, TF card, and flashlight functions.</p>
	<p>ÅRSTID Table Lamp Assembly Instructions - IKEA</p> <p>Detailed assembly guide for the IKEA ÅRSTID table lamp. Learn how to safely assemble and set up your lamp with step-by-step instructions and important safety information.</p>
	<p>ÅRSTID Floor Lamp Assembly Instructions</p> <p>Step-by-step assembly guide for the IKEA ÅRSTID floor lamp, including important safety information for indoor use.</p>
	<p>Evenflo Revolve360 Extend Rotational All-in-One Car Seat Owner's Manual</p> <p>Comprehensive owner's manual for the Evenflo Revolve360 Extend Rotational All-in-One Car Seat. Includes installation instructions, safety guidelines, and usage information for rear-facing, forward-facing, and booster modes.</p>
	<p>KidKraft Pool Party Mansion Dollhouse Assembly Instructions</p> <p>Detailed assembly instructions for the KidKraft Pool Party Mansion Dollhouse, including a comprehensive parts and hardware list, step-by-step visual guides, safety warnings, and customer support contact information.</p>
	<p>Volvo S70, V70, C70, 850 Child Safety Seats and Accessories Guide</p> <p>Explore Volvo's range of child safety seats and accessories for the S70, V70, C70, and 850 models. This guide details product features, safety standards, and installation information for various child and baby seats.</p>



[Jazmm 213 Portable Radio User Manual](#)

Comprehensive user manual for the Jazmm 213 portable radio, covering setup, operation, features, precautions, and specifications. Learn how to use its radio, Bluetooth, TF card, and flashlight functions.

lang: **score:22** filesize: 2.93 M page_count: 12 document date: 2025-06-16