



[Manuals.plus](#) /

> [Patikuin](#) /

> Patikuin Pink Dresser with LED Light and Power Outlet (Model r4780V1NGUJyNEzRaE2gsQGqIUTcc) User Manual

Patikuin r4780V1NGUJyNEzRaE2gsQGqIUTcc

Patikuin Pink Dresser User Manual

Model: r4780V1NGUJyNEzRaE2gsQGqIUTcc

1. INTRODUCTION

Thank you for choosing the Patikuin Pink Dresser with LED Light and Power Outlet. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

Important Safety Information

- **Tip-Over Hazard:** Furniture tip-overs can cause serious or fatal injuries. Always use the provided tip-over restraint device. Never allow children to climb or hang on drawers, doors, or shelves.
- **Electrical Safety:** The integrated power outlet and LED lighting system require a standard electrical connection. Ensure the power cord is not pinched or damaged. Do not overload the electrical outlets.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all parts are securely fastened before use. Two people are recommended for assembly.
- **Weight Capacity:** Do not exceed the recommended weight capacity for drawers and the top surface.

2. PACKAGE CONTENTS

Your package should contain all necessary parts and hardware for assembly, along with a detailed instruction booklet. Please verify all components are present and undamaged before proceeding. If any parts are missing or damaged, contact customer support immediately.

PRODUCT DIMENSIONS

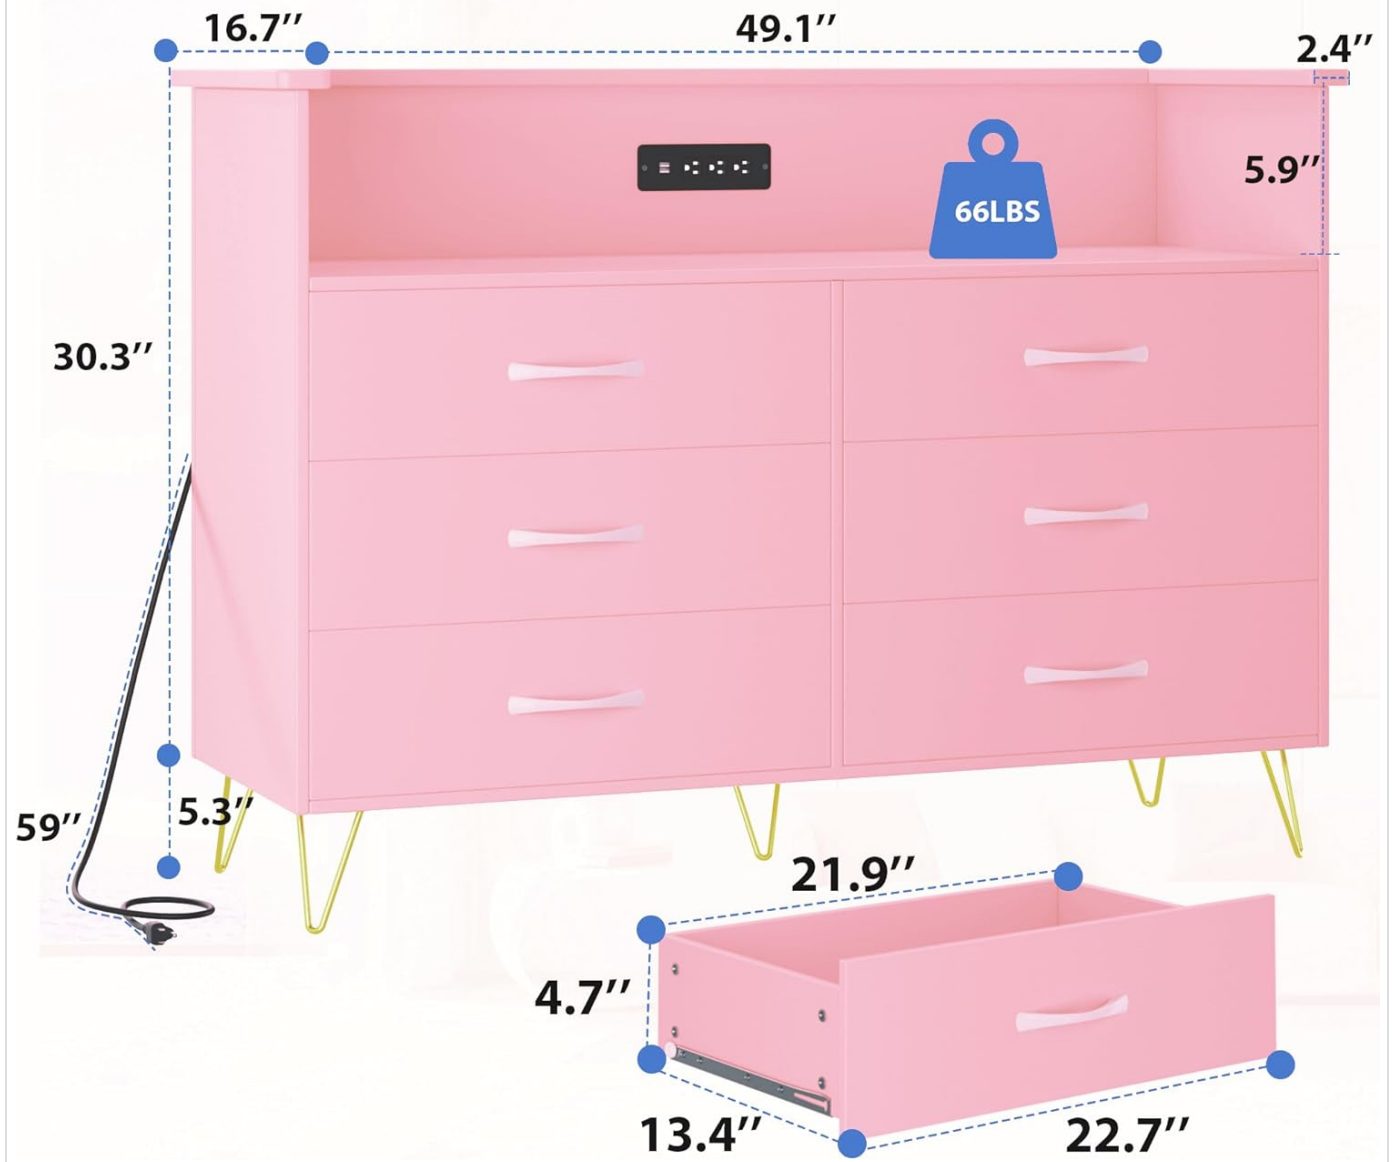


Figure 2.1: Product Dimensions Overview. This image displays the dresser's overall dimensions and individual drawer measurements for reference.

3. SETUP AND ASSEMBLY

Assembly of the Patikuin Pink Dresser is designed to be straightforward. Please follow the numbered steps provided in the separate assembly instruction booklet included in your package. Ensure you have adequate space and the necessary tools before starting.

Pre-Assembly Checklist:

- Unpack all components and lay them out on a soft, clean surface.
- Verify all parts and hardware against the parts list in your instruction booklet.
- Gather necessary tools (e.g., screwdriver, hammer, if required).

Assembly Steps (General Guidance):

1. Attach the dresser legs to the base panel.
2. Assemble the main frame of the dresser.
3. Install the drawer slides onto the dresser frame.

4. Assemble each drawer individually.
5. Insert the assembled drawers into the dresser frame.
6. Install the LED light strip and connect the power outlet unit.
7. Secure the dresser to the wall using the provided anti-tip kit.



Figure 3.1: Fully assembled Patikuin Pink Dresser. This image shows the dresser in a typical bedroom environment.

4. OPERATING INSTRUCTIONS

4.1 LED Light Operation

The dresser features a multifunctional RGB LED light strip. Once connected to power, the LED lights can be controlled via manual controls, a remote control (if included), or a dedicated smartphone application.

- **Power On/Off:** Use the designated button on the manual control or remote to turn the lights on or off.
- **Color Selection:** Choose from over 60,000 colors using the remote or app.
- **Brightness Adjustment:** Adjust the light intensity to your preference.

- **Mode Selection:** Cycle through various lighting modes (e.g., static, flashing, fading).
- **Timing Function:** Set a timer for the lights to automatically turn off.



Figure 4.1: LED lighting in operation. This image shows the dresser's open shelf illuminated by the integrated LED strip.

4.2 Integrated Charging Station

The dresser includes a built-in charging station with two AC outlets and two USB ports. This allows convenient charging of electronic devices.

- **AC Outlets:** Plug in standard electronic devices. Ensure devices do not exceed the station's maximum power rating.
- **USB Ports:** Connect USB-powered devices for charging.
- **Power Cord:** The charging station is powered by a 4.92-foot power cord that connects to a standard wall outlet.



Figure 4.2: Detail of the charging station. This image highlights the AC outlets and USB ports available for device charging.

4.3 Drawer Usage

The dresser features six spacious drawers for organized storage. To ensure smooth operation and longevity:

- Open and close drawers gently.
- Avoid overloading drawers, as this can strain the slides and cause damage.
- Distribute weight evenly within drawers.



Figure 4.3: Open drawers showcasing storage capacity. This image illustrates the interior space of the dresser's drawers.

5. MAINTENANCE AND CARE

Proper care will help maintain the appearance and functionality of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust the dresser with a dry, soft cloth.
- **Spills:** Clean spills immediately to prevent staining.
- **Drawer Slides:** If drawers become stiff, a small amount of silicone lubricant can be applied to the drawer slides.
- **Electrical Components:** Ensure the charging station and LED lights are unplugged before cleaning. Do not use liquid cleaners directly on electrical components.

6. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
LED lights do not turn on.	Power cord not plugged in; loose connection; LED strip damage.	Ensure power cord is securely plugged into a working outlet. Check all connections to the LED strip. If issue persists, contact support.
Charging station (outlets/USB) not working.	Power cord not plugged in; circuit breaker tripped; device not compatible.	Verify the dresser's power cord is plugged in. Check your home's circuit breaker. Test with a different device. Avoid overloading the station.

Problem	Possible Cause	Solution
Drawers are difficult to open/close or stick.	Overloaded drawer; misaligned drawer slides; loose hardware.	Reduce contents in the drawer. Re-check assembly of drawer slides. Tighten any loose screws on drawer hardware. Apply silicone lubricant to slides if needed.
Dresser feels unstable.	Uneven floor; loose assembly hardware; anti-tip kit not installed.	Ensure the dresser is on a level surface. Re-tighten all assembly hardware. Install the anti-tip kit securely to a wall stud.

7. SPECIFICATIONS

Brand: Patikuin

Model: r4780V1NGUJyNEzRaE2gsQGqIUTcc

Color: Pink

Material: Wooden

Product Dimensions (D x W x H): 16.7" x 49.1" x 30.3"

Item Weight: Approximately 90 pounds

Number of Drawers: 6

LED Light: Multi-colour RGB, over 60,000 colors, adjustable brightness, various modes, timing function.

Power Outlet: 2 AC Outlets (125V/12A), 2 USB Ports (5V/2A)

Power Cord Length: 4.92 feet

Assembly Required: Yes

8. WARRANTY INFORMATION

Specific warranty details for your Patikuin dresser may vary. Please refer to the warranty card included with your purchase or contact Patikuin customer support for information regarding warranty coverage and terms.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your Patikuin Pink Dresser, please do not hesitate to contact our customer support team. We are committed to providing a hassle-free experience.

Online Support: Visit the official Patikuin website for FAQs and support resources.

Email Support: Refer to your purchase documentation for the customer service email address.

Response Time: Our dedicated customer support team aims to assist within 24 hours.