

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSYLAND](#) /

› [COSYLAND Kids Bookshelf User Manual](#)

COSYLAND CS000136-3-EU

COSYLAND Kids Bookshelf User Manual

Model: CS000136-3-EU

Brand: COSYLAND

1. INTRODUCTION

Thank you for choosing the COSYLAND Kids Bookshelf. This manual provides important information for the safe assembly, operation, and maintenance of your new bookshelf. Please read it thoroughly before use and keep it for future reference.

This 6-level bookshelf is designed to help children organize their favorite books, magazines, and picture books. Its natural wood frame and Oxford fabric compartments offer a practical and attractive storage solution for various rooms.

2. SAFETY INSTRUCTIONS

- Always supervise children when they are near or interacting with the bookshelf.
- Ensure all parts are securely fastened during assembly to prevent instability.
- Do not allow children to climb on the bookshelf.
- The bookshelf features rounded edges for safety, but caution should still be exercised during handling.
- Keep small hardware components away from young children to avoid choking hazards.
- Place the bookshelf on a flat, stable surface to prevent tipping.

3. PACKAGE CONTENTS

Please check that all components are present before beginning assembly:

- Wooden frame pieces (sides, crossbars)
- Oxford fabric sling compartments (6 pieces)
- Assembly hardware (screws, bolts, nuts, etc.)
- Assembly tool (e.g., Allen key)
- Instruction manual (this document)

If any parts are missing or damaged, please contact customer service immediately.

4. SETUP AND ASSEMBLY

The COSYLAND Kids Bookshelf requires assembly. All necessary accessories and instructions are included to ensure a simple setup process.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify each wooden frame piece and fabric sling according to the included diagram.
3. Attach the side frames to the crossbars using the provided hardware. Ensure all connections are firm.
4. Slide the fabric slings onto the designated slots on the frame. Ensure they are taut and evenly spaced.
5. Tighten all screws and bolts securely, but do not overtighten.
6. Once assembled, gently shake the bookshelf to ensure stability.

For visual guidance, refer to the product image:



Image: Assembled COSYLAND Kids Bookshelf, showcasing its natural wood frame and six white fabric compartments.

5. OPERATING INSTRUCTIONS

The COSYLAND Kids Bookshelf is designed for easy use and versatile placement.

- **Placing Books:** Gently slide books into the fabric slings. The slanted design allows for easy viewing and access to book covers.
- **Organization:** Utilize the six levels to categorize books by size, genre, or reading level, helping children develop organizational skills.
- **Versatile Placement:** This bookshelf is perfect for children's bedrooms, playrooms, classrooms, kindergartens, living rooms, or reading areas. Its compact design helps keep spaces tidy.
- **Capacity:** The durable nylon/Oxford fabric compartments are strong enough to hold books of various sizes and thicknesses. Avoid overloading the compartments to maintain stability and prolong product life.

6. MAINTENANCE

Regular maintenance will help keep your COSYLAND Kids Bookshelf in excellent condition.

- **Cleaning the Frame:** Wipe the wooden frame with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as they may damage the wood finish.
- **Cleaning the Fabric Slings:** The high-quality fabric is resistant to stains and easy to clean. For minor spills, wipe with a damp cloth. For more stubborn stains, a mild soap solution can be used, followed by wiping with a clean, damp cloth. Allow to air dry completely.
- **Periodic Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause the wood to fade or the fabric to degrade over time.

7. TROUBLESHOOTING

If you encounter any issues with your bookshelf, please refer to the following common solutions:

- **Bookshelf is Wobbly:**
 - Ensure all screws and bolts are fully tightened. Refer to the assembly instructions to confirm correct installation of all parts.
 - Check that the bookshelf is placed on a flat, even surface.
- **Fabric Slings Seem Loose or Sagging:**
 - Verify that the fabric slings are correctly inserted into their designated slots on the wooden frame.
 - Ensure the frame itself is assembled tightly, as a loose frame can affect sling tension.
- **Difficulty Inserting Books:**
 - Ensure books are not excessively large or heavy for the compartment. While durable, overloading can cause issues.
 - Check that the fabric slings are not twisted or misaligned.

If the problem persists after attempting these solutions, please contact COSYLAND customer service for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	COSYLAND
Model Number	CS000136-3-EU
Color	Natural Wood Color
Dimensions (L x W x H)	63 x 30 x 76 cm (24.8 x 11.8 x 29.9 inches)
Product Weight	2.3 Kilograms (5.07 lbs)
Materials	Natural Solid Pine Wood, Oxford Fabric (Nylon)
Shelf Type	Slanted Shelf
Assembly Required	Yes
Number of Items	1
Components Included	Hardware

9. WARRANTY AND SUPPORT

COSYLAND is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, our customer service team is always available to assist you with any questions, concerns, or issues you may encounter with your COSYLAND Kids Bookshelf.

Please do not hesitate to contact us if you require support or have any feedback. We are dedicated to offering a satisfactory solution.