

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VILCORN](#) /

› [VILCORN R36S Retro Handheld Gaming Console User Manual](#)

## VILCORN R36S

# VILCORN R36S Retro Handheld Gaming Console User Manual

Model: R36S

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the VILCORN R36S Retro Handheld Gaming Console. It covers device setup, operation, maintenance, and troubleshooting to ensure optimal use of your gaming device. Please read this manual thoroughly before using the console.

## 2. PRODUCT OVERVIEW

---

The VILCORN R36S is a portable gaming console designed for retro gaming enthusiasts. It features a 3.5-inch IPS screen and supports multiple emulators.

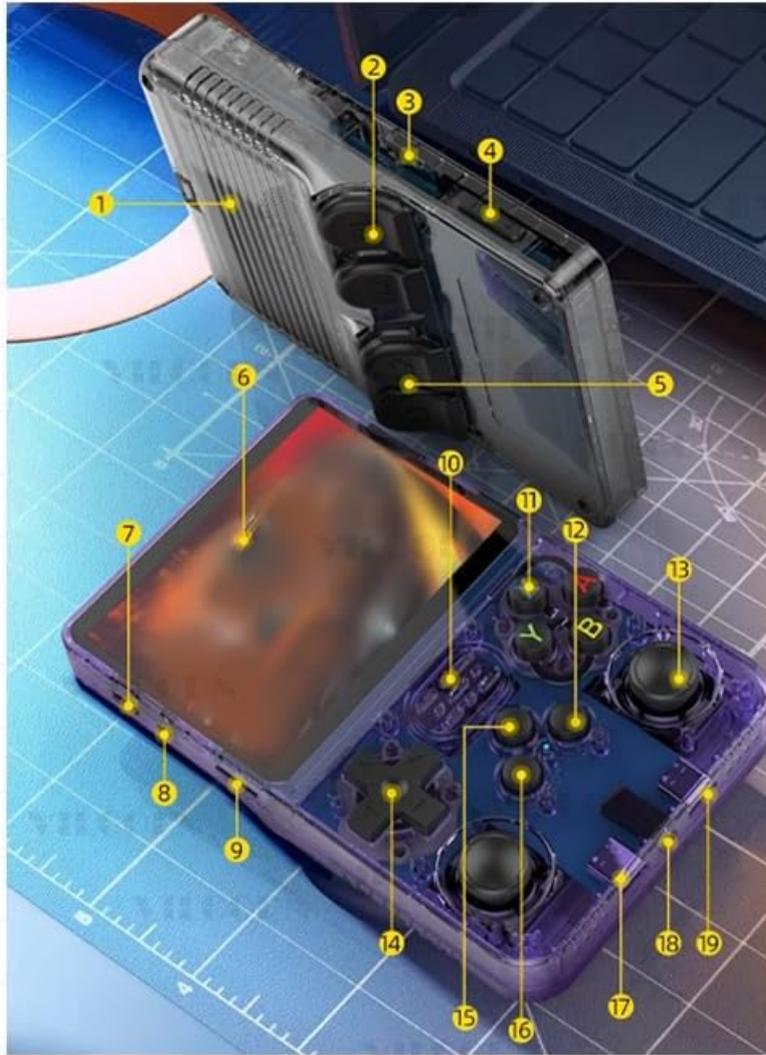


Image: Front and side view of the VILCORN R36S console, highlighting its compact design and the included 128GB TF card with pre-loaded games.

## 2.1. Console Components and Controls

Familiarize yourself with the console's layout and controls:

# Keystroke Analysis



1. Polymer lithium ion battery
2. Back R1/R2 key function keys
3. TF card memory card 1-OS
4. Volume up/down button
5. Back L1/L2 key function key
6. High resolution HD colour screen
7. Power on/off button
8. Reset button
9. TF card memory card 2-GAME
10. Speaker hole
11. Game function keys
12. Start/Pause button
13. Operation lever (right)
14. Cross direction keys
15. FN
16. Selection key
17. Charging port
18. Audio hole
19. OTG to connector

Image: Detailed diagram illustrating the various components and controls of the R36S console, including buttons, joysticks, ports, and card slots.

- **1. Polymer Lithium-Ion Battery:** Internal power source.
- **2. Back R1/R2 Function Keys:** Right shoulder buttons.
- **3. TF Card Memory Card 1 (OS):** Slot for the operating system card.
- **4. Volume Up/Down Button:** Adjusts audio output.
- **5. Back L1/L2 Function Keys:** Left shoulder buttons.
- **6. High Resolution HD Colour Screen:** 3.5-inch display.
- **7. Power On/Off Button:** Controls device power.
- **8. Reset Button:** For system reset.
- **9. TF Card Memory Card 2 (GAME):** Slot for game storage card.
- **10. Speaker Hole:** Audio output.
- **11. Game Function Keys (A, B, X, Y):** Primary action buttons.
- **12. Start/Pause Button:** Initiates or pauses games.
- **13. Operation Lever (Right):** Right analog joystick.
- **14. Cross Direction Keys:** D-pad for directional input.
- **15. FN Button:** Function button.
- **16. Selection Key:** Select button.

- **17. Charging Port:** USB Type-C for power input.
- **18. Audio Hole:** 3.5mm headphone jack.
- **19. OTG to Connector:** USB On-The-Go port.

## Dual 3D joysticks

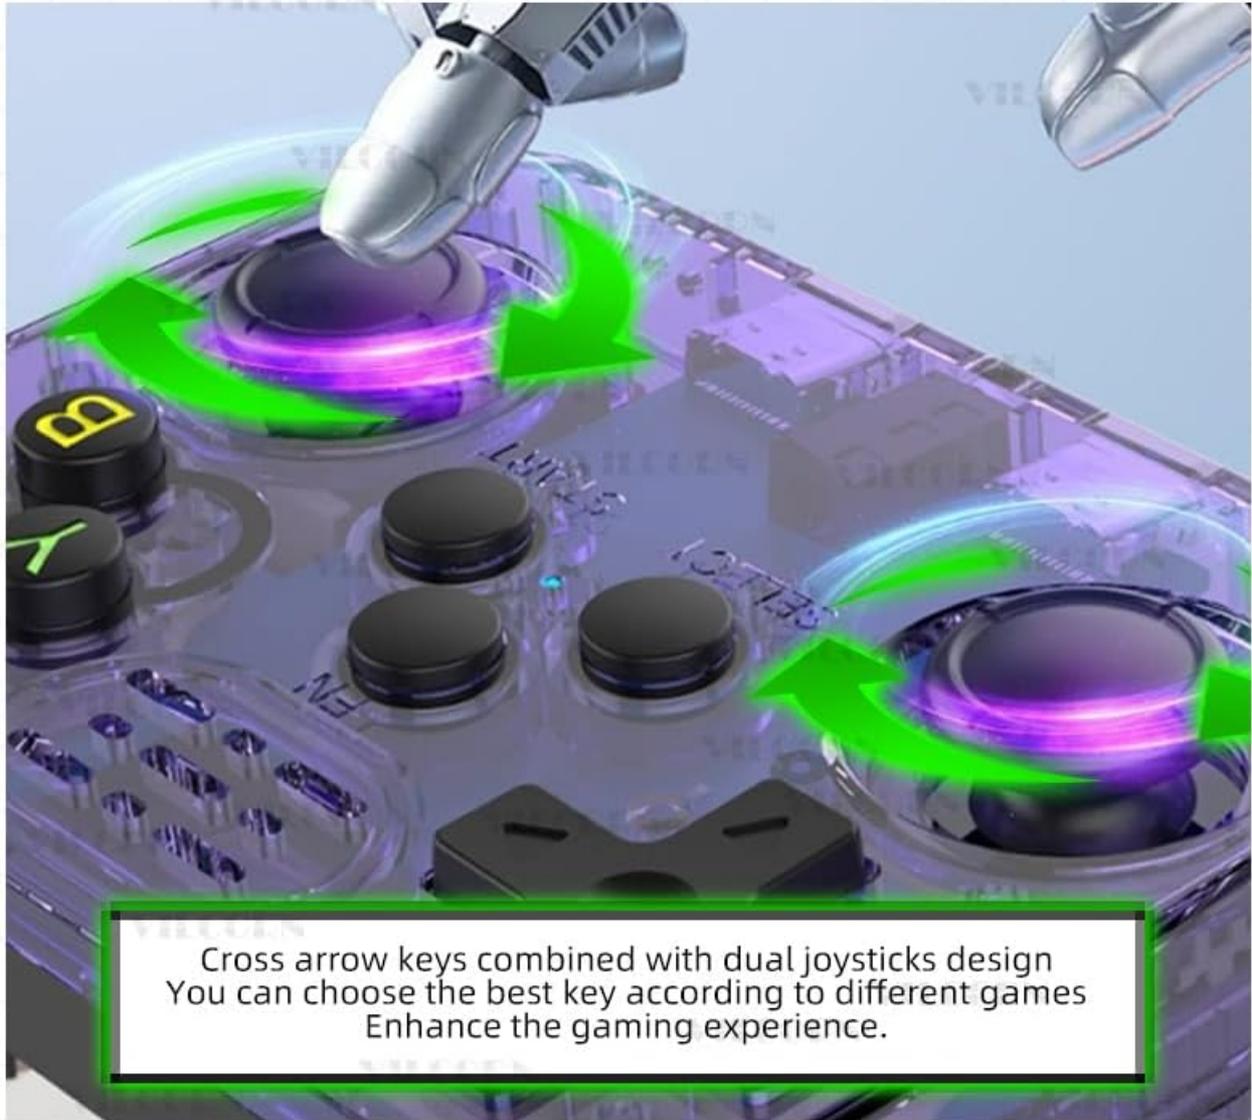


Image: The console features dual 3D joysticks and a D-pad, allowing for versatile control options depending on the game.

# Upgrade L/R button

# L/R



Real spring-loaded four-plate L/R keys on the back.  
Combination of delicate curvature and grip craftsmanship design  
Better finger release for better gaming performance

Image: The rear of the console features four spring-loaded L/R buttons (L1, L2, R1, R2) for enhanced gameplay.

## 3. SETUP

---

### 3.1. Initial Charging

Before first use, fully charge the console. Connect the provided USB Type-C charging cable to the console's charging port (17) and a compatible USB power adapter. The built-in 3500 mAh battery supports up to 8 hours of gameplay on a full charge. Charging time is approximately 2 hours.

### 3.2. TF Card Installation

The console comes with two TF card slots. One card (OS) contains the operating system, and the other (GAME) contains pre-loaded games. Ensure both cards are properly inserted into their respective slots (3 and 9) before powering on the device. The 128GB GAME card includes over 22,000 games.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Power On/Off

- To power on: Press and hold the Power On/Off button (7) until the screen illuminates.
- To power off: Press and hold the Power On/Off button (7) and follow the on-screen prompts to shut down the system safely.

## 4.2. Navigating Menus

Use the Cross Direction Keys (14) or the Operation Levers (13) to navigate through menus. Press the A button (part of 11) to select an option and the B button (part of 11) to go back.

## 4.3. Playing Games

The console supports over 26 emulators and comes with 22,000+ pre-loaded games on the 128GB TF card. To play a game:

1. Navigate to the desired emulator or game list.
2. Select a game using the A button.
3. Press the Start/Pause button (12) to begin gameplay.

**Support 26 emulators on the market 22000 games to play**

**FOR**

MAME GBA N64 SFC NDS NES MD PSP

CPS PS1 GB

**22000**

64G 128G

64G - 15000 games  
128G - 22000 games

Image: The console supports a wide range of emulators, providing access to a vast library of classic games.

## 4.4. Wi-Fi Connectivity and Online Play

The R36S supports Wi-Fi connectivity via a Type-C interface Wi-Fi receiver (not included). This enables online battles for two players on the same local area network (LAN). For optimal performance, it is recommended that both consoles are from the same series and the core name and ROM used for the game are identical.



Image: The console supports Wi-Fi for local multiplayer gaming, requiring a separate Wi-Fi receiver.

## 4.5. External Display Connection

Using a Type-C OTG HD interface adapter (not included), the console can be connected to a larger screen, such as a TV or projector, for an enhanced gaming experience.

## 5. MAINTENANCE

---

### 5.1. Cleaning

Wipe the console with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the screen or casing.

### 5.2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the console regularly, even if not in use for

extended periods. Store the device in a cool, dry place.

## 6. TROUBLESHOOTING

---

If you encounter issues with your VILCORN R36S console, refer to the following common problems and solutions:

- **Device does not power on:**
  - Ensure the battery is sufficiently charged. Connect the console to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
  - Verify that the OS TF card is correctly inserted in slot 1.
- **Screen remains black after powering on:**
  - This may indicate a system startup issue. Try pressing the Reset button (8) with a thin object (e.g., a paperclip) and then attempt to power on again.
  - Ensure the OS TF card is not corrupted or improperly seated.
- **Games are not loading or missing:**
  - Verify that the GAME TF card is correctly inserted in slot 2.
  - Ensure the game files on the TF card are intact and not corrupted.
- **Controls are unresponsive:**
  - Restart the console.
  - Ensure no debris is obstructing the buttons or joysticks.

## 7. SPECIFICATIONS

---

Key technical specifications for the VILCORN R36S Retro Handheld Gaming Console:

Feature	Detail
Model	R36S
Display	3.5-inch IPS Screen, 640x480 pixels
Battery	3500 mAh Li-polymer (approx. 8 hours battery life, 2 hours charging)
Storage	128GB TF card (pre-loaded with 22,000+ games)
Emulators Supported	26+ (e.g., GBA, GB, MAME, NDS, NES, MD, PSP, PS1)
Connectivity	Type-C interface Wi-Fi (receiver not included), Type-C OTG HD (adapter not included)
Dimensions	6.5 x 1.8 x 4.2 inches
Weight	12.6 ounces (0.79 Pounds)
Material	Plastic
UPC	794697940786

# 3.5 inch High Definition Colour Screen



High resolution 640\*480 pixels  
Clear picture quality, delicate and soft colours  
Reduce eye fatigue for long time gaming

Image: The console features a 3.5-inch high-definition IPS screen with 640x480 pixel resolution for clear visuals.

# Ultra-long battery life



**3000 mAh**  
High capacity battery

**≈ 2 H**  
Charging time

**≈ 5 H**  
Battery life

Built-in 3000MAH polymer battery  
Removable to see the battery status more intuitively.  
Battery adopts bi-directional protection, safer charging/discharging.  
A full charge can be played for 5 hours.

Image: Battery specifications, indicating a 3000mAh capacity, approximately 2 hours charging time, and up to 5 hours of gameplay.

*Note: Product feature bullets state a 3500mAh battery with up to 8 hours of battery life, while the image indicates 3000mAh and 5 hours. Please refer to the latest product specifications for the most accurate battery information.*

## 8. SAFETY INFORMATION

- **Water Exposure:** This device is not waterproof. Avoid contact with water or other liquids to prevent damage.
- **Age Recommendation:** Recommended for ages 3 years and up.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the VILCORN official website. Keep your proof of purchase for warranty claims.