

WHITE WESTINGHOUSE INTERNATIONAL COMPANY WWCMV14042WES

White Westinghouse 1.5 Cu. Ft. Microwave Oven WWCMV14042WES User Manual

Model: WWCMV14042WES

1. INTRODUCTION

Thank you for choosing the White Westinghouse 1.5 Cu. Ft. Microwave Oven, Model WWCMV14042WES. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and keep it for future reference. This microwave oven is designed to simplify your cooking tasks with its powerful 1000 watts and 1.5 cubic feet capacity, offering ample space for various dishes. Its intuitive digital controls and pre-set options ensure convenient and consistent results.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT FEATURES AND COMPONENTS

Your White Westinghouse microwave oven features a spacious 1.5 cubic feet interior, 1000 watts of cooking power, and a user-friendly digital control panel for precise cooking.

3.1. Microwave Oven Overview



Image 1: Front view of the White Westinghouse 1.5 Cu. Ft. Microwave Oven. This image displays the sleek grey exterior, the large viewing window, and the integrated control panel on the right side.



Image 2: Angled view of the White Westinghouse 1.5 Cu. Ft. Microwave Oven. This perspective highlights the overall design and the handle for opening the door.

3.2. Control Panel

The control panel is located on the right side of the microwave and features a digital display and various buttons for operation:

- **Display:** Shows cooking time, power level, and other indicators.
- **Pre-set Cooking Buttons:** Dedicated buttons for common foods like Papas (Potatoes), Pasta, Pizza, Palomitas (Popcorn), Vegetal (Vegetable), Bebidas (Beverages), Carne (Meat), Pescado (Fish).
- **Micro (Microwave):** Used to set microwave power levels.
- **Tiempo (Time):** Used to set cooking time manually.
- **Number Pad (0-9):** For entering cooking times, weights, or quantities.
- **Pause/Reinicio (Pause/Reset):** Stops the cooking cycle temporarily or clears settings.
- **Comenzar/+30sec (Start/+30 seconds):** Starts the cooking cycle or adds 30 seconds to the cooking time with each press.

4. SETUP AND INSTALLATION

4.1. Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape from the oven surfaces and accessories. Check the oven for any damage, such as a misaligned or bent door, damaged door seals, or dents in the cavity. If any damage is found, do not operate the oven and contact customer support.

4.2. Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in the oven.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4

inches) at the rear, and 5 cm (2 inches) on each side for proper airflow.

- Do not block air vents.
- Do not place the oven near heat sources or in a damp area.

4.3. Electrical Requirements

Ensure that the electrical outlet is properly grounded and matches the voltage and frequency specified on the rating label of the microwave oven. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1. Basic Microwave Cooking

1. Place food in a microwave-safe container and place it on the turntable. Close the door securely.
2. Press the 'Tiempo' (Time) button.
3. Use the number pad to enter the desired cooking time.
4. Press the 'Micro' (Microwave) button repeatedly to select the desired power level (e.g., P100 for 100% power, P80 for 80% power).
5. Press 'Comenzar/+30sec' to start cooking.

5.2. Quick Start (Comenzar/+30sec)

For quick heating at 100% power, simply press the 'Comenzar/+30sec' button. Each press will add 30 seconds to the cooking time. You can press it multiple times for longer durations.

5.3. Pre-set Cooking Functions

Your microwave oven includes convenient pre-set programs for various food types:

- **Papas (Potatoes):** For cooking potatoes.
- **Pasta:** For cooking pasta.
- **Pizza:** For reheating or cooking pizza.
- **Palomitas (Popcorn):** For popping popcorn.
- **Vegetal (Vegetable):** For cooking vegetables.
- **Bebidas (Beverages):** For heating beverages.
- **Carne (Meat):** For cooking or reheating meat.
- **Pescado (Fish):** For cooking or reheating fish.

To use a pre-set function, simply place the food in the oven, close the door, and press the corresponding food button. The oven will automatically set the cooking time and power level. Press 'Comenzar/+30sec' to start.

5.4. Defrosting

The microwave oven can be used for defrosting. For best results, use a lower power level (e.g., P30 or P50) and turn the food periodically to ensure even defrosting. Refer to the 'Micro' button for power level selection.

5.5. Pausing and Canceling

To pause cooking, open the door or press the 'Pause/Reinicio' button once. To resume, close the door and press 'Comenzar/+30sec'. To cancel a program or clear settings, press 'Pause/Reinicio' twice.

6. CARE AND MAINTENANCE

6.1. Cleaning the Exterior

Wipe the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or solvents that could damage the finish.

6.2. Cleaning the Interior

Clean the oven cavity regularly. Wipe spills immediately with a damp cloth. For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen the residue, then wipe clean.

6.3. Cleaning the Turntable

The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven will not start	Door not closed properly Power cord not plugged in Fuse blown or circuit breaker tripped	Ensure door is firmly closed Plug into a grounded outlet Check household fuse/circuit breaker
Food not cooking/heating	Incorrect cooking time/power level Door not closed properly Ventilation blocked	Adjust time/power Ensure door is firmly closed Check and clear ventilation openings
Light not working	Bulb needs replacement	Contact qualified service personnel for bulb replacement
Turntable not rotating	Turntable not correctly placed Debris under turntable	Ensure turntable and roller ring are correctly positioned Clean under the turntable

8. SPECIFICATIONS

Feature	Detail
Brand	WHITE WESTINGHOUSE INTERNATIONAL COMPANY
Model Number	WWCMV14042WES
Color	Silver
Product Dimensions (D x W x H)	48 x 60 x 39 cm (18.9 x 23.6 x 15.4 inches)
Capacity	1.5 Cubic Feet
Power Output (Wattage)	1000 Watts
Special Feature	Digital Control

Feature	Detail
Product Weight	16.8 kg (37 lbs)
Installation Type	Countertop
Controller Type	Touch
Included Components	1 Microwave Oven, 1 User Manual

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance, please refer to the warranty card included with your product or contact White Westinghouse customer support. Keep your purchase receipt as proof of purchase for any warranty claims.

For service or inquiries, please visit the official White Westinghouse website or contact their authorized service centers.