

Quoizel LWS4345A

Quoizel Lockesburg Pendant Light Instruction Manual

MODEL: LWS4345A

Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Quoizel Lockesburg Pendant Light, model LWS4345A. Please read all instructions carefully before beginning installation and retain this manual for future reference.

Safety Information

WARNING: Risk of electric shock. Turn off power at the circuit breaker or fuse box before installation or servicing. Consult a qualified electrician if you are unsure about wiring procedures.

- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electrical Code (NEC).
- Use only the specified bulb type and wattage to avoid fire or electrical hazards.
- Do not install this fixture in wet locations unless specifically rated for such use. This fixture is rated as Water Resistant.
- Handle the fixture with care. Avoid dropping or striking the glass shade.
- Keep flammable materials away from the light fixture when in operation.

Package Contents

Verify that all components are present before beginning installation:

- Pendant Light Fixture (Shade, Socket, Cord, Canopy)
- Mounting Bracket
- Mounting Screws
- Wire Nuts / Electrical Connectors
- Instruction Manual

Note: Bulb is not included.

Setup and Installation

Professional installation by a qualified electrician is recommended.

1. **Turn Off Power:** Before starting, ensure the power to the circuit where you are installing the light is turned off at the main circuit breaker or fuse box.
2. **Prepare Mounting Area:** Remove any existing fixture and its mounting bracket from the junction box.
3. **Attach Mounting Bracket:** Secure the new mounting bracket to the junction box using the provided mounting screws. Ensure it is firmly attached.
4. **Adjust Cord Length:** Determine the desired hanging height for your pendant light. The maximum adjustable height is 84 inches. Carefully feed the cord through the canopy and adjust its length. Secure the cord within the canopy mechanism to maintain the chosen length.
5. **Wiring Connections:** Connect the electrical wires according to the following:
 - Connect the **green or bare copper ground wire** from the fixture to the **ground wire** from the junction box (usually green or bare copper).
 - Connect the **white (neutral) wire** from the fixture to the **white (neutral) wire** from the junction box.
 - Connect the **black (hot) wire** from the fixture to the **black (hot) wire** from the junction box.

Use the provided wire nuts to secure all connections. Ensure no bare wire is exposed.

6. **Secure Canopy:** Carefully push the wired canopy up to the ceiling, aligning it with the mounting bracket. Secure the canopy to the mounting bracket using the provided screws.
7. **Install Bulb:** Screw an E26 base bulb (maximum 100 Watts) into the fixture's socket. LED bulbs are recommended for energy efficiency.
8. **Restore Power:** Once installation is complete, restore power at the circuit breaker.





Figure 1: Front view of the Quoizel Lockesburg Pendant Light.



Figure 2: The pendant light installed above a kitchen counter, demonstrating typical placement.



Figure 3: Recommended hanging height for a single pendant light over a table, typically 30-36 inches above the surface.



Figure 4: Recommended spacing (30 inches minimum) and height (30-36 inches above surface) for multiple pendant lights over a kitchen island.

Operating Instructions

The Quoizel Lockesburg Pendant Light is designed for simple operation. Once properly installed and power is restored, the light can be controlled via a standard wall switch. The product specifications also mention a 'Touch' control method, which may refer to compatibility with certain smart home systems or touch-sensitive wall switches, if applicable to your setup.

- Ensure the correct bulb type (E26 base) and wattage (max 100W) are used.
- Turn the wall switch to the 'ON' position to illuminate the fixture.

- Turn the wall switch to the 'OFF' position to turn off the fixture.

Maintenance

Regular maintenance will help preserve the appearance and functionality of your pendant light.

- **Cleaning:** Always turn off the power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** Ensure the power is off and the bulb has cooled before attempting to replace it. Unscrew the old bulb and screw in a new E26 base bulb (max 100W).
- **Inspection:** Periodically check for any loose wiring or damaged components. If any issues are found, turn off power and consult a qualified electrician.

Troubleshooting

If your pendant light is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture.	Check the circuit breaker or fuse. Ensure the wall switch is in the 'ON' position.
Light bulb is faulty.	Replace the light bulb with a new one.	
Loose wire connection.	Turn off power at the circuit breaker. Check all wire connections within the canopy and junction box. Tighten if necessary.	
Light flickers.	Loose bulb or wiring.	Ensure the bulb is screwed in tightly. Turn off power and check wire connections.
Incorrect bulb type/wattage.	Verify the bulb is E26 base and does not exceed 100 Watts.	

Specifications

Brand	Quoizel
Model Number	LWS4345A
Product Dimensions	15 x 15 x 9 inches
Light Fixture Form	Pendant
Installation Type	Suspended
Control Method	Touch (compatible with standard wall switches)

Light Source Type	LED (compatible with E26 bulbs)
Finish Type	Matte Black & Gloss White
Number of Light Sources	1
Bulb Base	E26
Wattage	Max 100 Watts
Brightness	800 lumen (typical for compatible bulbs)
Water Resistance Level	Water Resistant
UPC	611728305232
Assembly Required	Yes

Warranty and Support

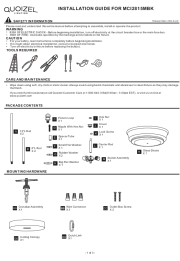 
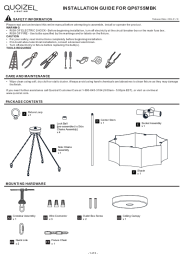 
For warranty information or technical support, please contact Quoizel customer service. Details can typically be found on the manufacturer's website or original product packaging.

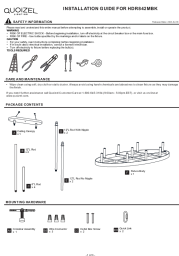 
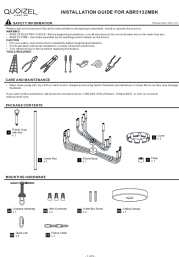 
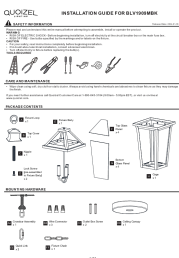 
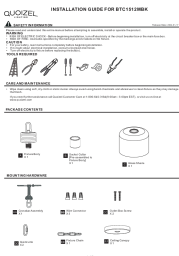 
Quoizel LLC

Website: www.quoizel.com (Please refer to the official website for the most current contact information.)

© 2024 Quoizel LLC. All rights reserved.

Related Documents - LWS4345A

	<p>Quoizel MCI2815MBK Installation Guide</p> <p>This guide provides step-by-step instructions for installing the Quoizel MCI2815MBK pendant ceiling light, including safety information, package contents, tools required, and maintenance tips.</p>
	<p>Quoizel QP6755MBK Zylar Matte Black 4-Light Pendant Installation Guide</p> <p>Comprehensive installation guide for the Quoizel QP6755MBK Zylar 4-light matte black pendant ceiling light. Includes safety warnings, package contents, mounting hardware, and step-by-step assembly instructions.</p>

	<p>Quoizel HDR842MBK Linear Pendant Light Installation Guide</p> <p>This installation guide provides step-by-step instructions for assembling and installing the Quoizel HDR842MBK linear pendant light fixture. It includes essential safety information, package contents, required tools, and care instructions.</p>
	<p>Quoizel ABR5132MBK Installation Guide for Abner Chandelier</p> <p>Step-by-step installation guide for the Quoizel ABR5132MBK Abner 18-light matte black chandelier. Includes safety information, package contents, mounting hardware, and wiring instructions.</p>
	<p>Quoizel BLV1909MBK Matte Black Boulevard Outdoor Pendant Installation Guide</p> <p>Step-by-step installation guide for the Quoizel BLV1909MBK Matte Black Boulevard outdoor pendant light. Includes safety warnings, package contents, tools required, and care instructions.</p>
	<p>Quoizel BTC1512MBK Installation Guide</p> <p>This document provides a detailed installation guide for the Quoizel BTC1512MBK pendant light, including safety information, package contents, mounting hardware, and step-by-step assembly instructions.</p>