

DOSS Extreme Boom Pro D100

DOSS Extreme Boom Pro D100 Bluetooth Speaker User Manual

Model: Extreme Boom Pro D100 | Brand: DOSS

INTRODUCTION

Thank you for purchasing the DOSS Extreme Boom Pro D100 Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The DOSS Extreme Boom Pro D100 delivers powerful 70W sound with enhanced bass, features beat-sync lights, and is IPX6 waterproof, making it ideal for both indoor and outdoor use.



Image: The DOSS Extreme Boom Pro D100 Bluetooth Speaker, showcasing its robust design and integrated shoulder strap for portability.

PACKAGE CONTENTS

Please check the package for the following items:

- DOSS Extreme Boom Pro D100 Bluetooth Speaker
- USB-C Charging Cable
- Adjustable Shoulder Strap
- User Manual (this document)

PRODUCT OVERVIEW & CONTROLS

Familiarize yourself with the speaker's layout and controls:

70W Bold Sound

Feel the power of a 70-watt sound that delivers booming bass and crisp highs.



Image: An exploded view illustrating the internal components of the DOSS Extreme Boom Pro D100, highlighting its 70W sound system with full-range drivers and tweeters.

Control Panel (Top View)

Power Button: Press and hold to power on/off. Short press to check battery status.

Bluetooth Button: Short press to enter Bluetooth pairing mode. Press and hold to disconnect current device.

Volume Down (-): Short press to decrease volume. Press and hold for previous track.

Play/Pause Button: Short press to play/pause music.

Volume Up (+): Short press to increase volume. Press and hold for next track.

Bass Boost Button: Short press to activate/deactivate Extra Bass mode.

Light Mode Button: Short press to cycle through light modes. Press and hold to turn lights on/off.

TWS Button: Press to initiate True Wireless Stereo pairing.

Ports (Rear/Side View)

USB-C Charging Port: For charging the speaker.

USB-A Output Port: For using the speaker as a power bank to charge other devices.

AUX-in Port: For wired audio connection.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's USB-C port and the other end to a compatible USB power adapter (not included). The LED indicator will show charging status and turn off when fully charged.

2. Powering On/Off

Press and hold the **Power Button** for 2 seconds to turn the speaker on or off. A sound prompt will indicate the power status.

3. Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Select "DOSS Extreme Boom Pro D100" from the list of available devices.
4. Once connected, the LED indicator will turn solid blue, and you will hear a confirmation sound.

If the speaker does not appear, ensure it is not connected to another device or press the Bluetooth button to force pairing mode.

OPERATING INSTRUCTIONS

Music Playback

Play/Pause: Short press the **Play/Pause Button**.

Volume Up/Down: Short press the **Volume +** or **Volume -** buttons.

Next Track: Press and hold the **Volume +** button.

Previous Track: Press and hold the **Volume -** button.

Extra Bass Mode

Press the **Bass Boost Button** to toggle the Extra Bass mode on or off. This enhances low frequencies for a deeper, richer sound experience.

Dynamic Light Show

The speaker features dynamic LED lights that sync with the music. Short press the **Light Mode Button** to cycle through different light patterns. Press and hold the **Light Mode Button** to turn the lights on or off.

Synched Light Show

Elevate your party experience with a dynamic light display that syncs to the beat.



Image: The DOSS Extreme Boom Pro D100 speaker displaying its dynamic light show, enhancing the atmosphere at a social gathering by a pool.

True Wireless Stereo (TWS) Pairing

You can pair two DOSS Extreme Boom Pro D100 speakers together for an immersive stereo sound experience.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), short press the **TWS Button**. The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for the secondary speaker. Once connected, you will hear a confirmation sound, and the TWS indicator will illuminate on both speakers.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

True Wireless Stereo

Connect 2 speakers together wirelessly for a more immersive stereo sound.



Image: Two DOSS Extreme Boom Pro D100 speakers positioned outdoors, demonstrating their True Wireless Stereo (TWS) capability for enhanced audio.

Using as a Power Bank

The DOSS Extreme Boom Pro D100 can charge other devices using its built-in battery.

Connect your device's charging cable to the USB-A output port on the speaker.

The speaker will automatically begin charging your device.

Note: Using the speaker as a power bank will reduce its audio playback time.

Shoulder Strap Usage

Attach the adjustable shoulder strap to the designated loops on the speaker for convenient portability, especially during outdoor activities like hiking or camping.

Music on the Move

Bring your music with you anywhere with the convenient shoulder strap design.



Image: A person carrying the DOSS Extreme Boom Pro D100 speaker using its detachable shoulder strap, highlighting its portability for outdoor use.

MAINTENANCE

Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure all ports are dry before charging or connecting other devices.

IPX6 Waterproof Rating

The DOSS Extreme Boom Pro D100 is IPX6 waterproof, meaning it is protected against high-pressure water jets from any direction. It is suitable for use in rainy conditions or near water bodies like pools and beaches. However, it is **not designed to be submerged in water**. Ensure the charging port cover is securely closed before exposing the speaker to water.



Image: The DOSS Extreme Boom Pro D100 speaker being splashed with water, illustrating its IPX6 waterproof capability, suitable for outdoor environments.

Storage

Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight. If storing for an extended period, charge the battery to about 50% every few months to preserve battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not held long enough.	Charge the speaker fully. Press and hold the Power button for 2 seconds.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Speaker is already connected to another device; Bluetooth is off on your device; Speaker is too far from device.	Disconnect from previous device or press Bluetooth button to force pairing. Ensure Bluetooth is enabled on your device. Move speaker closer to device (within 10 meters).
No sound or low volume.	Volume too low on speaker or device; Speaker not connected properly.	Increase volume on both speaker and connected device. Re-pair Bluetooth connection.
TWS pairing fails.	Speakers are too far apart; One speaker is already connected to a Bluetooth device.	Ensure both speakers are within 5 meters of each other. Disconnect any Bluetooth devices from both speakers before initiating TWS pairing.
Light show not working.	Lights are turned off; Speaker is in a mode that doesn't support lights.	Press the Light Mode button to cycle through modes or press and hold to turn lights on.

SPECIFICATIONS

Feature	Detail
Model Name	Extreme Boom Pro D100
Speaker Type	Outdoor
Sound Output	70W RMS (140W Peak)
Special Feature	Bass Boost, Beat-Sync Lights, Power Bank Function
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo (with TWS)
Battery Life	Up to 24 Hours
Waterproof Rating	IPX6
Product Dimensions	34.7D x 16.4W x 17.4H Centimetres
Weight	2.39 kg
Compatible Devices	Gaming Console, Karaoke Machine, Laptop, Smartphone, Tablet, Television

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or open flames.
- Do not disassemble, repair, or modify the speaker. This will void the warranty.
- Keep the speaker away from children and pets.
- Use only the provided charging cable or a certified equivalent.

- Avoid dropping or subjecting the speaker to strong impacts.
- Ensure the charging port cover is securely closed when not charging, especially when near water.

WARRANTY AND SUPPORT

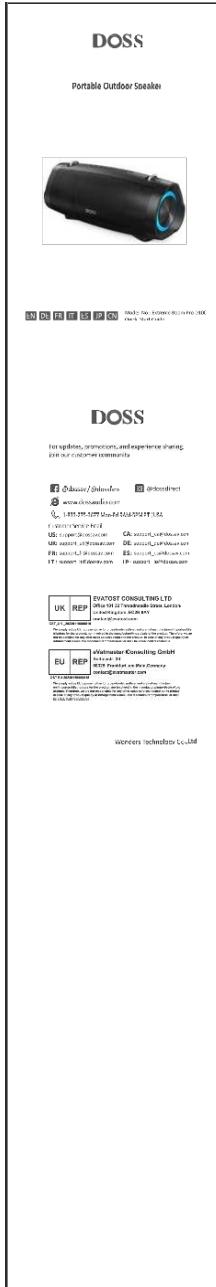
DOSS products come with a limited warranty. For detailed warranty information, product support, or technical assistance, please visit the official DOSS website or contact their customer service. Keep your purchase receipt as proof of purchase.

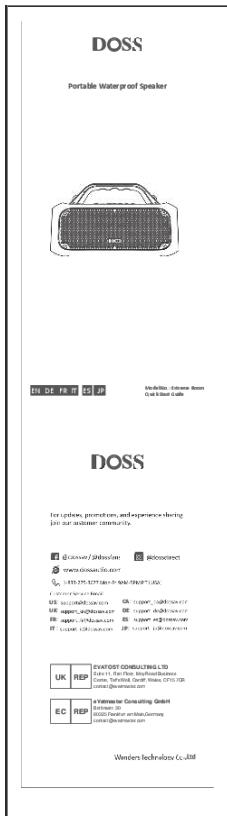
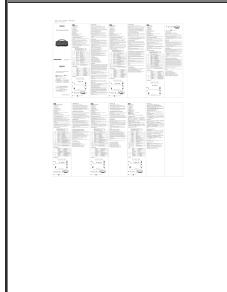
Official DOSS Store: [Visit the DOSS Store on Amazon](#)

© 2025 DOSS. All rights reserved.

Related Documents

	<p>DOSS SoundBox Pro Wireless Bluetooth Speaker Quick Start Guide A comprehensive guide to setting up and using the DOSS SoundBox Pro stereo wireless Bluetooth speaker, covering features, pairing, music playback, and troubleshooting.</p>
---	---



	<p>DOSS Extreme Boom Portable Waterproof Speaker User Manual</p> <p>User manual for the DOSS Extreme Boom Portable Waterproof Speaker, covering packing contents, specifications, operation, LED indicators, connections, Bluetooth mode, TWS mode, Echo Dot integration, and safety instructions.</p>
	<p>DOSS Extreme Boom Pro Wireless Portable Waterproof Speaker - Quick Start Guide</p> <p>This document provides a quick start guide for the DOSS Extreme Boom Pro wireless portable waterproof speaker. It covers specifications, important notes, button controls, LED indicators, connections, Bluetooth mode, TWS mode, PartySync mode, and usage with Echo Dot. Includes safety instructions and regulatory information.</p>

Documents - DOSS – Extreme Boom Pro D100

DOSS

Portable Outdoor Speaker



[EN](#) [DE](#) [FR](#) [IT](#) [ES](#) [JP](#) [CN](#) model no.: Extreme Boom Pro D100
Quick start guide

[DOSS Extreme Boom Pro D100 Portable Outdoor Speaker User Manual](#)

User manual for the DOSS Extreme Boom Pro D100 portable outdoor speaker, covering specifications, buttons, controls, LED indicators, connections, pairing, TWS mode, Echo Dot integration, and safety warnings.

lang: **score:28** filesize: 4.41 M page_count: 14 document date: 2025-03-03

DOSS

For updates, promotions, and experience sharing,
join our customer community.

[@dossav](#) / [@dossales](#) [@dossdirect](#)

[www.dossaludio.com](#)

1-833-339-8077 Mon-Fri 8AM-5PM PT/USA

Customer Service Email

US: [support@dossaludio.com](#) CA: [support_us@dooss.com](#)
UK: [support_uk@dooss.com](#) DE: [support_de@dooss.com](#)
FR: [support_fr@dooss.com](#) ES: [support_es@dooss.com](#)
IT: [support_it@dooss.com](#) JP: [support_jp@dooss.com](#)

UK **REP** EVATOST CONSULTING LTD
Office 101 127 Headland Drive, London
United Kingdom, EC2A 3BY
[www.evatost.com](#)

The company acts as a distributor for DOSS products and is not a manufacturer. The company is not
responsible for any damage or loss resulting from the use of its products. The company is not
responsible for any damage or loss resulting from the use of its products. The company is not
responsible for any damage or loss resulting from the use of its products.

EU **REP** eWalmaster Consulting GmbH
Aufbaustr. 31
46399 Paderborn, Germany
[contact@ewalmaster.com](#)

The company acts as a distributor for DOSS products and is not a manufacturer. The company is not
responsible for any damage or loss resulting from the use of its products. The company is not
responsible for any damage or loss resulting from the use of its products. The company is not
responsible for any damage or loss resulting from the use of its products.

Wonders Technology Co.,Ltd