

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bestsee](#) /
- › [Bestsee Golf Rangefinder with Slope - Instruction Manual](#)

## Bestsee KF1500

# Bestsee Golf Rangefinder with Slope - Instruction Manual

Model: KF1500

## 1. INTRODUCTION

The Bestsee Golf Rangefinder is a high-precision laser device designed for accurate distance measurement in various outdoor activities, including golf, hunting, and archery. It features advanced technologies such as slope compensation, flagpole locking with vibration, and multiple measurement modes to enhance your experience.

This manual provides detailed instructions on how to set up, operate, and maintain your rangefinder, ensuring optimal performance and longevity.

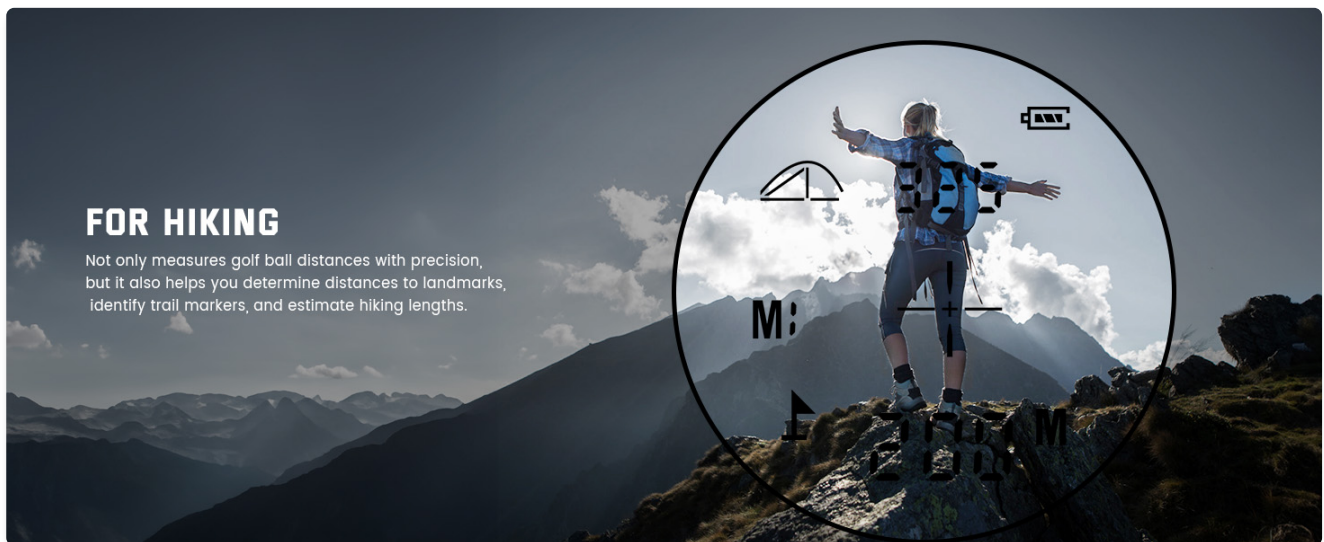 


Image: Bestsee Golf Rangefinder, showcasing its compact and ergonomic design.

## 2. PACKAGE CONTENTS

Upon opening your Bestsee Golf Rangefinder package, please ensure all items listed below are present:

- 1x Bestsee Golf Rangefinder
- 1x Hard Carry Case
- 1x Carabiner
- 1x Hand Rope
- 1x Lens Cloth
- 1x USB-C Charging Cable
- 1x User Manual



## FOR HIKING

Not only measures golf ball distances with precision, but it also helps you determine distances to landmarks, identify trail markers, and estimate hiking lengths.

Image: All items included in the Bestsee Golf Rangefinder package, neatly arranged.

## 3. SETUP

### 3.1 Charging the Device

The Bestsee Golf Rangefinder comes with a built-in 800mAh rechargeable lithium battery. Before first use, or when the battery indicator shows low power, fully charge the device.

- Locate the USB-C charging port on the side of the rangefinder, protected by a waterproof cover.
- Connect the provided USB-C charging cable to the port and the other end to a 5V/2A USB power adapter (not included, typically found with smartphones).
- The charging indicator light will illuminate red during charging and turn green when fully charged.

# | USB-C FAST CHARGING

Bulid-in 800mAh chargeable Li-ion polymer battery



Type-C Charging



800mAh



40000 Meas

● In Charging ● Fully Charging

Image: Close-up of the USB-C charging port and charging indicator light on the rangefinder.

## 3.2 Adjusting Eyepiece Focus

To ensure a clear view through the eyepiece, adjust the focus ring until the display and target appear sharp.

- Look through the eyepiece.
- Rotate the eyepiece knob (located near the eyepiece) clockwise or counter-clockwise until the view is clear and sharp.

## 3.3 Setting Units (Yards/Meters)

You can switch between yards (Yd) and meters (M) as your preferred unit of measurement.

- With the device powered on, press and hold the "M" (Mode) button for more than 2 seconds.
- The unit will switch between Yards and Meters on the LCD display.

## 4. OPERATING

### 4.1 Power On/Off

- To power on: Short press the power button (located on top of the device). The LCD display will activate.
- To power off: The device will automatically shut down after 8 seconds of inactivity to conserve battery.

### 4.2 Measurement Modes

The rangefinder offers three distinct measurement modes. Briefly press the "M" button to cycle through them:

- **M1 (Flag Pole Lock + Slope Correction Mode):** Ideal for golf, this mode measures distance to the flag and adjusts for elevation changes.
- **M2 (Ranging + Angle Mode):** Measures the direct distance and the angle to the target. Continuous measurement is possible by holding down the power button.
- **M3 (Ranging + Horizontal Distance Mode):** Measures the direct distance and calculates the horizontal distance to the target. Continuous measurement is possible by holding down the power button.

# 1500 Yards Measuring Distance

±0.5 yard accuracy

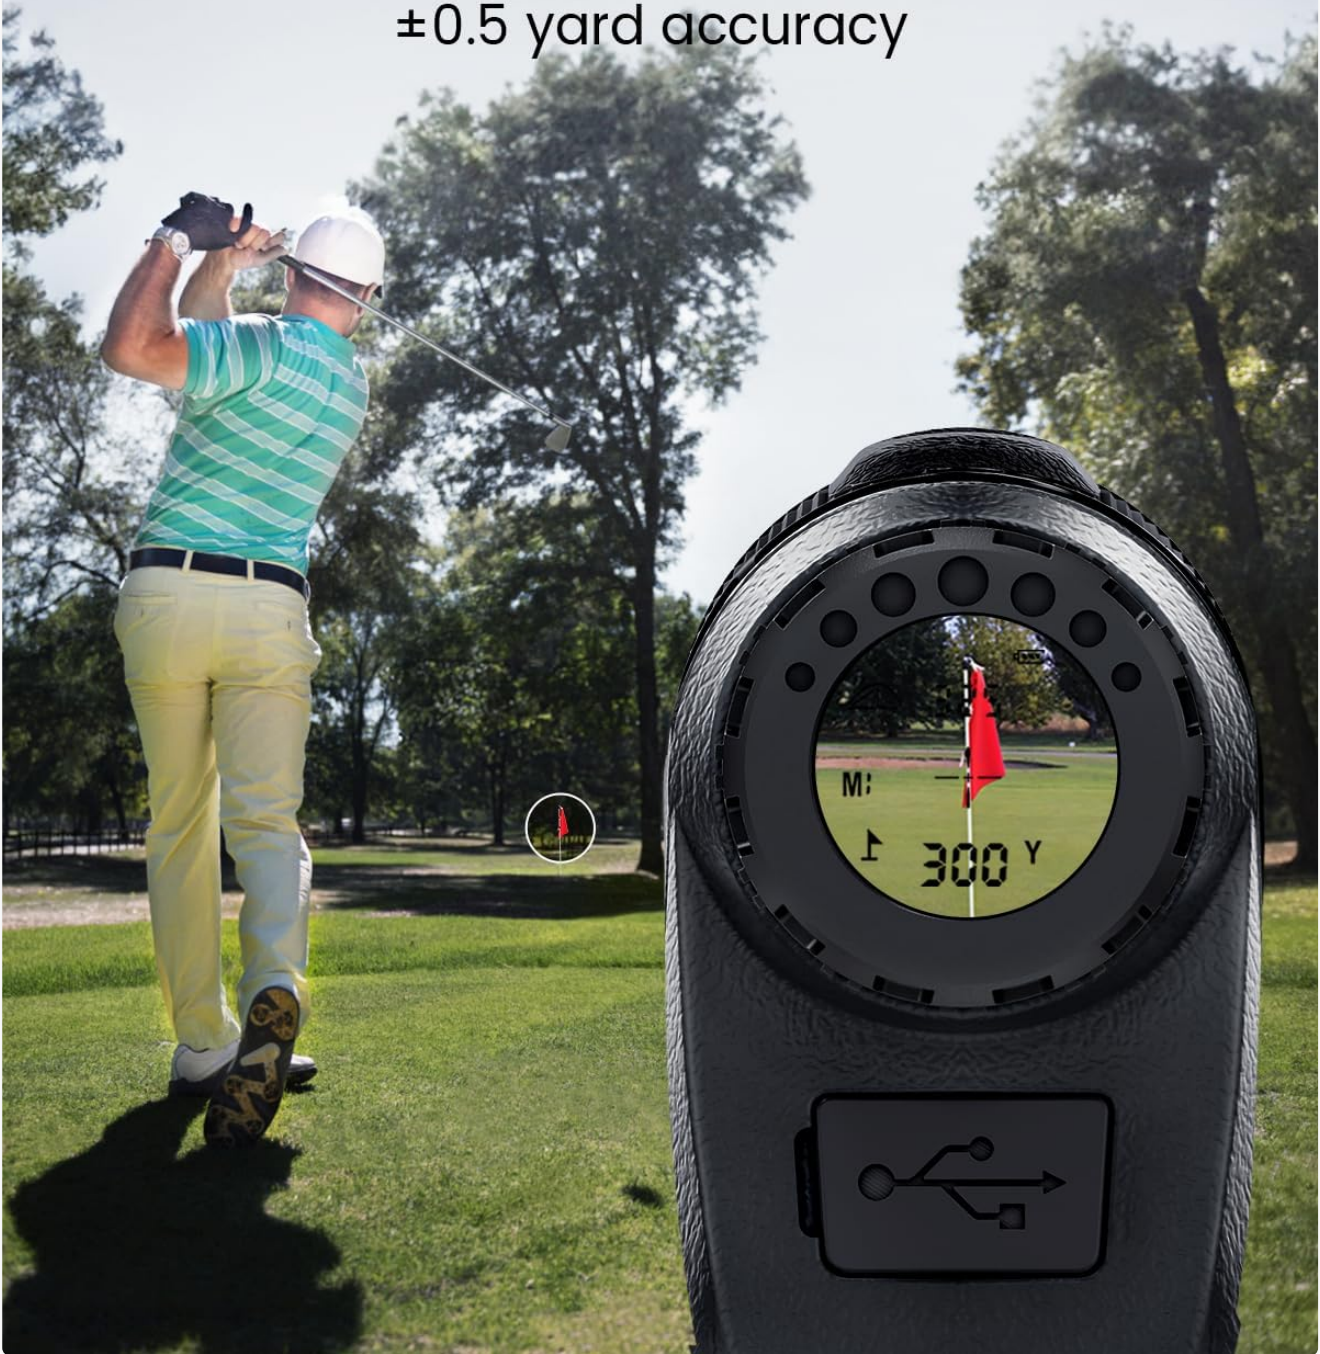 


Image: Rangefinder display showing a target at 300 yards, indicating its 1500-yard measuring capability.

## 4.3 Flagpole Lock with Vibration

This feature helps you accurately lock onto the flag, even with background objects.

- In M1 mode, aim at the flag.
- Short press the power button. When the laser locks onto the flag, the rangefinder will vibrate briefly to confirm the target has been acquired.

# | FLAGPOLE LOCK MODE

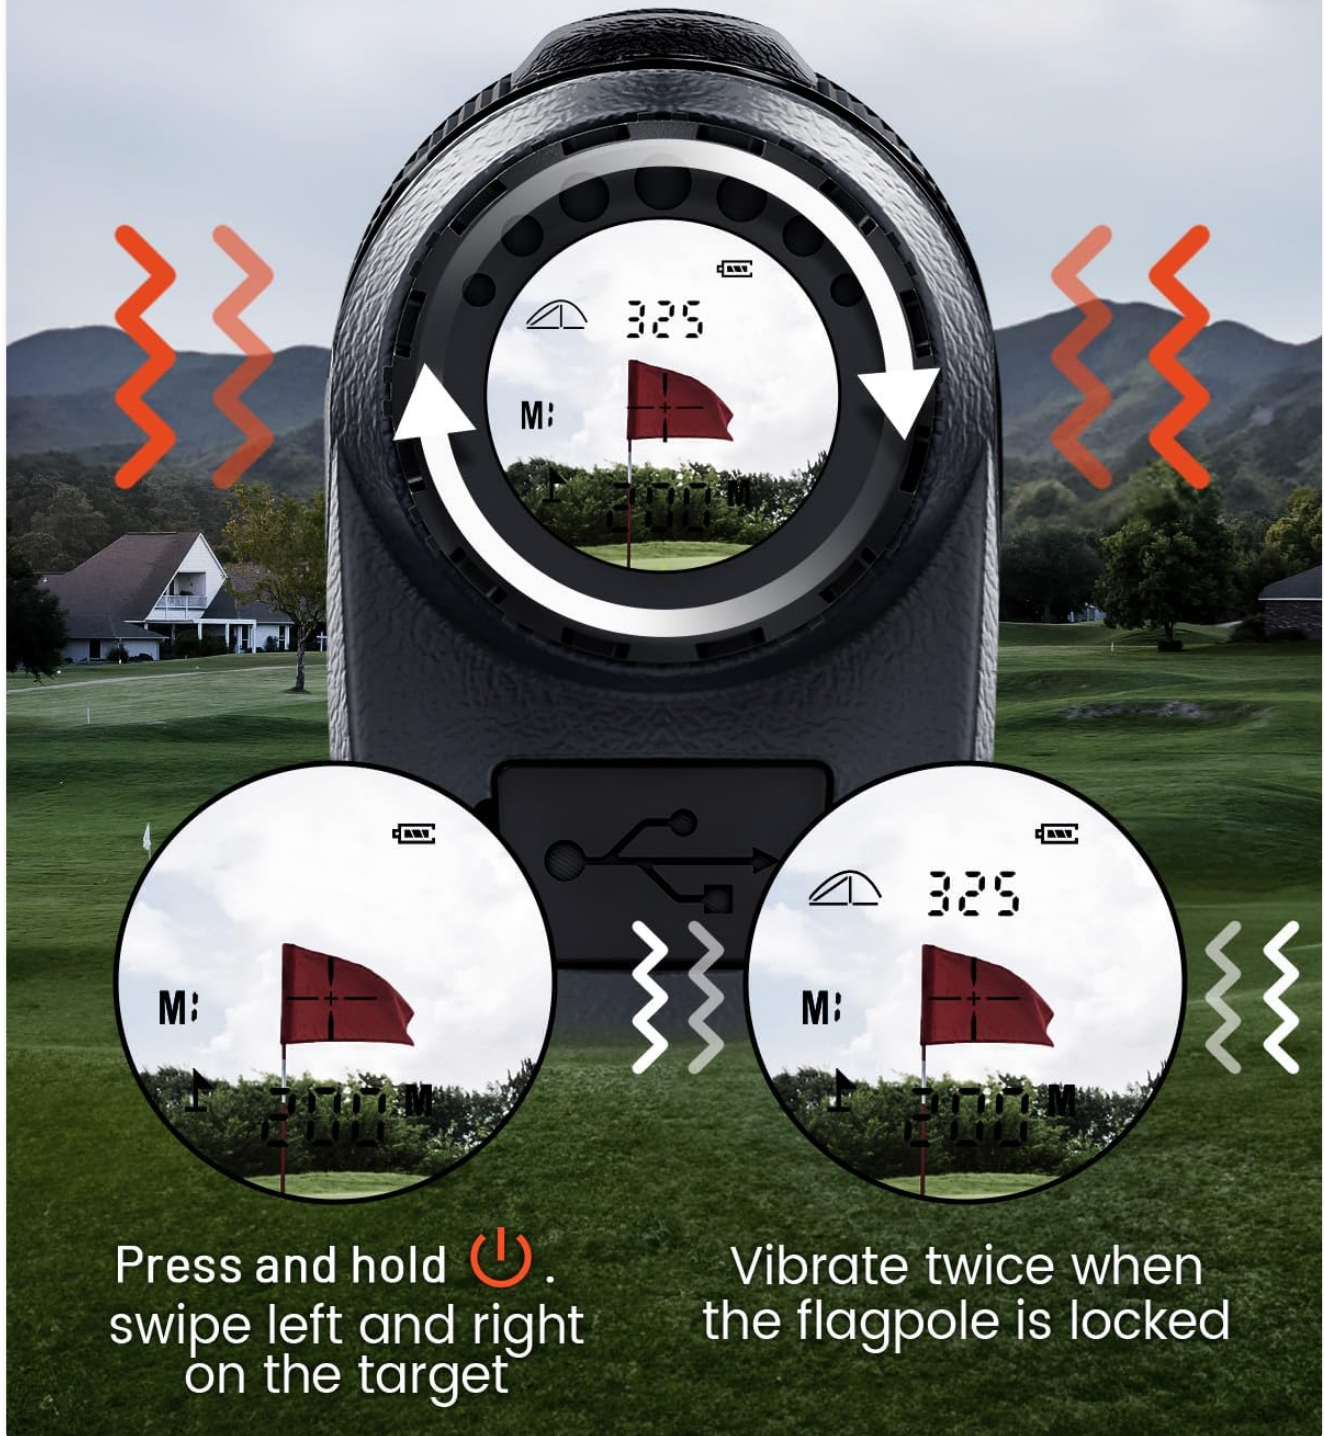 


Image: Visual representation of the flagpole lock mode, showing vibration confirmation when the flag is targeted.


## 4.4 Slope Measurement

 The slope compensation feature calculates the adjusted distance based on elevation changes, providing a more accurate "play as" distance.

- To enable/disable slope: Use the dedicated slope switch on the side of the device. A green indicator will be visible when slope is active.
- For tournament play where slope features are not allowed, ensure the slope switch is in the OFF position.

# |SLOPE MODE SWITCHABLE

More than ranging

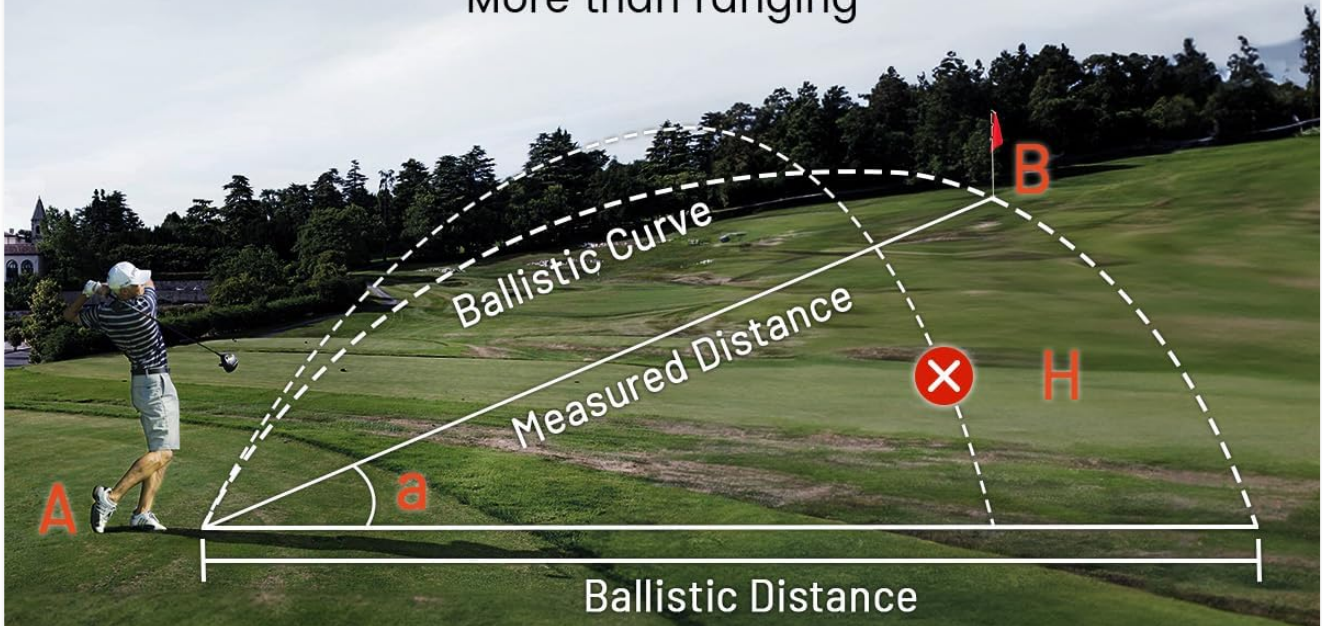

**Tips**

Ballistic Distance and Degree of Angle will only be displayed when Slope switch is turned on.



**Slope Switch**

Image: Diagram illustrating slope compensation and the physical slope switch on the rangefinder.

## 4.5 Magnetic Strip

The rangefinder features a strong magnetic strip on its side for convenient attachment to metal surfaces.

- Attach the rangefinder to golf cart frames, clubs, or any other metal object for easy access during your game.
- The powerful magnets ensure the device stays securely in place, preventing accidental drops.

# | EASY TO CARRY

Magnetic & Compact & Portable



Image: Various ways to carry the rangefinder, including attachment to a golf cart via its magnetic strip.

## 4.6 Official Product Video

Your browser does not support the video tag.

Video: A demonstration of the Bestsee golf rangefinder's features, including its slope function and ease of use.

## 5. MAINTENANCE

### 5.1 Cleaning

To maintain optimal performance and clarity, keep the lenses and body clean.

- Use the provided lens cloth to gently wipe the lenses. Avoid using abrasive materials.
- For the body, use a soft, dry cloth to remove dust or dirt.

### 5.2 Storage

When not in use, store the rangefinder in its hard carry case to protect it from dust, moisture, and physical damage.

- Store in a cool, dry place away from direct sunlight.
- Ensure the device is fully charged before long-term storage.

### 5.3 Water Resistance

The rangefinder is IP54 waterproof, meaning it is protected against dust ingress and splashing water from any direction. However, it is not designed for submersion.

- Avoid exposing the device to heavy rain or submerging it in water.
- Ensure the USB-C port cover is securely closed when not charging to maintain water resistance.

## 6. TROUBLESHOOTING

If you encounter any issues with your Bestsee Golf Rangefinder, please refer to the following general troubleshooting tips:

- **No Power:** Ensure the device is fully charged. If the issue persists, try a different USB power adapter and cable.
- **Unclear Display:** Adjust the eyepiece focus knob until the display is sharp. Ensure the lenses are clean using the provided cloth.
- **Inaccurate Readings:** Ensure you are in the correct measurement mode for your target. For flagpole locking, ensure the flag is isolated from background objects as much as possible.
- **No Reading (dashes):** If the target is too close (less than 10 yards) or too far (beyond 1500 yards), the device may display dashes. Ensure there are no obstructions between the rangefinder and the target.

For further assistance or persistent issues, please contact Bestsee customer support.

 
## 7. SPECIFICATIONS

Feature	Detail
Brand	Bestsee
Model Name	KF1500

Measuring Range	10-1500 yards
Accuracy	+/- 0.5 yards
Magnification	7X
Battery	800mAh Rechargeable Lithium
Charging Port	USB-C (5V/2A)
Water Resistance	IP54
Weight	200 Grams
Material	Magnet, Silicone

# | 7X MAGNIFICATION LENS

Bring you high-definition view.

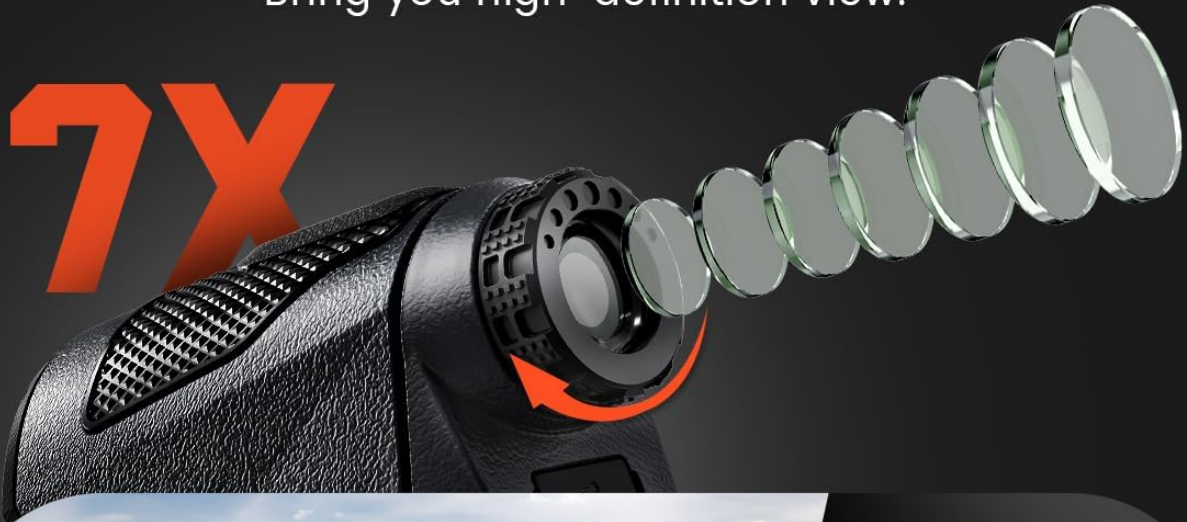

For Golf



For Hunting



For Archery



Image: Visual of the 7X magnification lens and its application in golf, hunting, and archery.

## 8. WARRANTY AND SUPPORT

Bestsee stands behind the quality of its products. Your Golf Rangefinder comes with comprehensive support and warranty coverage.

- **Warranty:** The product includes a 1-year warranty from the date of purchase.

- **Technical Support:** Enjoy lifetime technical support for your device.
- **Customer Service:** 24-hour after-sales service is available to assist with any questions or concerns.

For warranty claims or technical assistance, please email Bestsee customer support.