



Manuals.plus /

› HP /

› HP 14-inch Laptop User Manual - Model Newest HP 14 Inch Laptop

HP Newest HP 14 Inch Laptop

HP 14-inch Laptop User Manual

Model: Newest HP 14 Inch Laptop

INTRODUCTION

Thank you for choosing the HP 14-inch Laptop. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new device. Please read this guide thoroughly to ensure optimal performance and longevity of your laptop.

The HP 14-inch Laptop is designed for everyday computing tasks, offering a balance of portability and functionality. It features an Intel Celeron N4120 processor, 8GB of RAM, and 256GB of storage, running on Windows 11 Home in S Mode.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- HP 14-inch Laptop
- AC Power Adapter
- 128GB Storage Card
- Mouse Pad
- HDMI Cable
- USB Cable
- Wireless Earphones
- Wireless Mouse



Image: The HP 14-inch Laptop shown with its 5-in-1 value pack bundle, including wireless earbuds, mouse pad, HDMI cable, USB cable, and wireless mouse.

SETUP

1. Initial Power-Up

1. **Unpack the Laptop:** Carefully remove the laptop and all accessories from the packaging.
2. **Connect Power:** Plug the AC power adapter into the laptop's AC smart pin port and then into a wall outlet. It is recommended to fully charge the battery before first use.
3. **Power On:** Open the laptop lid and press the power button, usually located on the keyboard deck.

2. Windows 11 S Mode Setup

Follow the on-screen prompts to complete the initial Windows 11 Home S Mode setup. This includes selecting your region, keyboard layout, connecting to a Wi-Fi network, and setting up your Microsoft account.

3. Connecting Accessories

- **Wireless Mouse:** Insert the USB receiver for the wireless mouse into an available USB Type-A port on the laptop. The mouse should connect automatically.
- **Wireless Earphones:** Refer to the earphones' specific instructions for pairing via Bluetooth. On your laptop, go to **Settings > Bluetooth & devices** to pair.
- **128GB Storage Card:** Insert the storage card into the multi-format media card reader slot.
- **HDMI Cable:** Connect one end of the HDMI cable to the laptop's HDMI port and the other end to an external

display (monitor or TV).

4. Activating Microsoft Office 365

Your laptop includes a 1-year subscription to Microsoft Office 365. To activate:

1. Open any Office application (e.g., Word, Excel) from the Start Menu.
2. Follow the on-screen prompts to sign in with your Microsoft account and activate your subscription.



**Equipped with
1 Year Free Microsoft 365**

Powerful tools help you work

Open the Office installer or application (Word, Excel), and then follow the on-screen prompts to activate Office.

1 year
Subscription
Office 365

Image: Two HP laptops illustrating the activation process for the included 1-year Microsoft 365 subscription.

OPERATING YOUR LAPTOP

1. Windows 11 Home in S Mode

Windows 11 Home in S Mode is a streamlined version of Windows configured for security and performance. It exclusively uses apps from the Microsoft Store and requires Microsoft Edge for safe browsing. You can switch out of S Mode if you need to install apps from outside the Microsoft Store, but this action is irreversible.

2. Using Ports and Connectivity

Your HP 14-inch Laptop is equipped with various ports for connectivity:

- **USB Type-C (1):** For data transfer and connecting compatible devices.
- **USB Type-A (2):** For connecting standard USB devices like external drives, keyboards, or mice.
- **HDMI 1.4b (1):** For connecting to external displays.
- **Headphone/Microphone Combo Jack (1):** For audio output to headphones or input from a microphone.
- **Multi-format Media Card Reader (1):** For reading SD cards and other compatible memory cards.
- **AC Smart Pin (1):** For connecting the power adapter.



Image: A detailed diagram highlighting the multi-port configuration on the HP 14-inch laptop, including SD Card Reader, Headphone Jack, USB Type-A, USB Type-C, HDMI, and AC Smart Pin.

3. Wi-Fi and Bluetooth

To connect to Wi-Fi or Bluetooth devices:


1. Click the **Network** icon on the taskbar (bottom right).
2. Select the desired Wi-Fi network and enter the password, or turn on Bluetooth and pair with your device.


4. Using the Webcam


The HP True Vision 720p HD camera is integrated for video calls and conferencing. Access it through applications like Camera, Microsoft Teams, or Zoom.

REMOTE WORK READY

Enjoy unparalleled work-from-home efficiency with superb video chat clarity thanks to the HP True Vision 720p HD camera with integrated dual-array digital microphones.




HP Fast Charge
Go from 0 to 50% charge in approximately 45 minutes.


HP True Vision 720p HD camera



HD Audio with stereo speakers

Image: The HP 14-inch laptop demonstrating its remote work capabilities, featuring HP Fast Charge, HP True Vision 720p HD camera, and HD audio with stereo speakers.

5. Battery Management

The laptop offers up to 11.5 hours of battery life. To optimize battery performance:

- Adjust screen brightness.
- Close unused applications.
- Utilize Windows power saving modes.
- The laptop supports HP Fast Charge, allowing it to charge from 0% to 50% in approximately 45 minutes.

MAINTENANCE

1. Cleaning Your Laptop

- **Screen:** Use a soft, lint-free cloth lightly dampened with water or a screen cleaner. Do not spray liquid directly

onto the screen.

- **Keyboard and Chassis:** Use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters openings.
- **Ports:** Use compressed air to gently clear dust from ports.

2. Software Updates

Regularly check for and install Windows updates to ensure your system has the latest security patches and performance improvements. Go to **Settings > Windows Update**.

3. Storage Management

Periodically review and delete unnecessary files to free up storage space on your 256GB drive (128GB eMMC + 128GB Storage Card). Utilize the included 128GB storage card for additional file storage.

4. Battery Care

- Avoid extreme temperatures.
- Do not leave the laptop plugged in constantly after it is fully charged for extended periods.
- For long-term storage, charge the battery to about 50% and store the laptop in a cool, dry place.

TROUBLESHOOTING

This section addresses common issues you might encounter with your HP 14-inch Laptop.

Problem	Possible Solution
Laptop does not power on	Ensure the AC adapter is securely connected to both the laptop and a working power outlet. Try a different outlet. If the battery is completely drained, it may take a few minutes to respond after plugging in.
Screen is blank or black	Check if the laptop is powered on. Adjust screen brightness. If an external monitor is connected, ensure it is properly configured (press Windows key + P to cycle display modes).
Wi-Fi connection issues	Ensure Wi-Fi is enabled in Windows settings. Restart your router and modem. Forget the network and reconnect. Update Wi-Fi drivers if necessary.
Bluetooth device not pairing	Ensure Bluetooth is enabled on both the laptop and the device. Place devices close to each other. Remove and re-add the device in Bluetooth settings.
Laptop performance is slow/lagging	Close unnecessary applications. Check for background processes in Task Manager. Ensure Windows is up to date. Consider running a disk cleanup. If running in S Mode, ensure all apps are from the Microsoft Store.
Audio not working	Check volume levels. Ensure correct playback device is selected. Update audio drivers. Test with headphones.

SPECIFICATIONS

Detailed technical specifications for the HP 14-inch Laptop:

Feature	Detail
Brand	HP
Model Name	Newest HP 14 Inch Laptop
Processor	Intel Celeron N4120 (Quad-Core, 1.1 GHz base, up to 2.6 GHz burst)
Graphics	Intel UHD Graphics 600 (Integrated)
Operating System	Windows 11 Home in S Mode
Memory (RAM)	8 GB DDR4 SDRAM
Storage	256 GB (128GB eMMC + 128GB Storage Card)
Display	14.0-inch diagonal, HD (1366 x 768), micro-edge, BrightView, 220 nits, 45% NTSC
Connectivity	Realtek 802.11b/g/n/ac (2x2) Wi-Fi, Bluetooth
Ports	1x SuperSpeed USB Type-C (5Gbps), 2x SuperSpeed USB Type-A (5Gbps), 1x HDMI 1.4b, 1x Headphone/microphone combo, 1x AC smart pin, Multi-format media card reader
Webcam	HP True Vision 720p HD camera with integrated dual array digital microphones
Audio	Dual Speakers
Keyboard	US English, Non-Backlit
Battery	3-cell, 41 Wh Lithium-Ion Prismatic Battery
Battery Life	Up to 11.5 hours (video playback)
Dimensions (L x W x H)	12.76 x 8.86 x 0.71 inches
Weight	3.24 lbs
Color	Rose Gold

Sleek Design

Easily take this thin and light PC from room to room or on the road.



Image: The sleek design of the HP 14-inch laptop, highlighting its thin profile and overall dimensions.

Intel Celeron N4120

4 Cores
4 Threads

Respond Faster
4K Videos smoothly

2.6GHz

Max Turbo Frequency

GPU

Intel UHD Graphics 600

4MB

Smart Cache

Image: A visual representation of the Intel Celeron N4120 processor, detailing its 4 cores, 4 threads, 2.6GHz Max Turbo Frequency, Intel UHD Graphics 600, and 4MB Smart Cache.

HP LAPTOP 14

Do more from anywhere. All day long.



Intel® Celeron®
N4020



Intel® UHD
Graphics 600



Windows 11 Home
in S mode



Image: The HP 14-inch laptop displayed in a scenic outdoor setting, emphasizing its core components: Intel Celeron N4020 processor, Intel UHD Graphics 600, and Windows 11 Home in S mode.

WARRANTY INFORMATION

Your HP 14-inch Laptop comes with a limited manufacturer's warranty. For specific terms and conditions, please refer to the warranty documentation included with your product or visit the official HP support website. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or to download updated drivers and manuals, please visit the official HP support website:

<https://support.hp.com>

You can also find contact information for HP customer service on their website.

