

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Mxnsewr](#) /

> [Mxnsewr MX-C201 Steam Mop and Handheld Steam Cleaner Instruction Manual](#)

Mxnsewr c201

Mxnsewr MX-C201 Steam Mop and Handheld Steam Cleaner Instruction Manual

Model: MX-C201 | Brand: Mxnsewr

INTRODUCTION

The Mxnsewr MX-C201 Steam Mop is a versatile cleaning appliance designed for various surfaces throughout your home. It utilizes high-temperature steam to clean and sanitize without the need for harsh chemicals. This manual provides essential information for safe and effective operation, setup, maintenance, and troubleshooting.

PRODUCT FEATURES

- **Multi-Surface Cleaning:** Suitable for hardwood, tile, laminate, sealed stone, marble, and carpet.
- **Detachable Handheld Steamer:** Converts into a powerful handheld unit for cleaning clothes, glass, furniture, stoves, sinks, and more.
- **Rapid Heating:** Heats up in approximately 20 seconds for quick use.
- **Adjustable Steam Control:** Features a knob to select steam intensity (Min/Max) based on cleaning needs.
- **Large Water Tank:** 450ml removable tank provides up to 45 minutes of continuous steaming.
- **High Temperature Sanitization:** Delivers steam up to 260°F (126°C) for deep cleaning and stain removal without chemicals.
- **Ergonomic Design:** Adjustable height telescopic rod, flexible mop head (120° left/right, 90° front/back), and self-standing feature for ease of use and storage.
- **Extended Reach:** 23-ft long power cord minimizes the need to switch outlets frequently.

PACKAGE CONTENTS

The Mxnsewr MX-C201 Steam Mop includes the following components:

- Steam Mop Main Unit
- Telescopic Rod and Grip
- Removable Water Tank
- Mop Head
- Microfiber Pads (x2)

- Carpet Glider (x1)
- Accessory Adaptor (x1)
- Angle Nozzle (x1)
- Round Brush (x1)
- Flat Brush (x1)
- Ironing Brush (x1)
- Large Round Brush (x1)
- Small Cloth (x1)
- Window Cleaning Tool (x1)
- Scraping Tool (x1)
- 23 ft Power Cord (integrated)



The Mxnsewr Steam Mop with its full set of 11 accessories, including various brushes, nozzles, and pads.



Detailed diagram illustrating the main body, handle, water tank, mop head, and all included accessories.

SETUP INSTRUCTIONS

- 1. Assemble the Main Unit:** Connect the telescopic rod to the main body of the steam mop. Ensure it clicks securely into place.
- 2. Attach Mop Head:** Secure the mop head to the bottom of the main unit.
- 3. Attach Microfiber Pad:** Place a microfiber pad onto the mop head. The mop head has small pricks (similar to Velcro) to secure the pad.
- 4. Fill Water Tank:** Detach the water tank from the main unit. Open the cap and fill with clean water (preferably distilled) up to the 450ml capacity. Reattach the water tank and ensure it locks into place.
- 5. Connect Power:** Plug the 23-ft power cord into a standard 110V AC outlet.

More Cleaning Time and Area



The removable 450ml water tank, adjustable height feature, and 23ft power cord for extended reach.

OPERATING INSTRUCTIONS

Steam Mop Mode (Floor Cleaning)

1. **Power On:** Press the power button on the main unit. A red indicator light will illuminate, signifying the unit is heating up.
2. **Wait for Ready:** The red light will turn off and a blue light will illuminate when the steam mop is ready for use (approx. 20 seconds).
3. **Adjust Steam Level:** Use the steam adjustment knob to select the desired steam level (Min/Max) suitable for your floor type.
4. **Begin Cleaning:** Gently push the mop across the floor surface. The flexible mop head allows for easy maneuverability around furniture and into corners.
5. **Carpet Glider:** For cleaning carpets, attach the carpet glider over the mop head before placing the microfiber pad.

Suitable for a Variety of Floors

Adjustable steam



Adjustable steam settings allow for safe and effective cleaning on various floor types, including hardwood, tile, and laminate.



The mop head offers 120° side-to-side and 90° front-to-back rotation for reaching under furniture, and the unit can stand upright for storage.

Quick Drying
Without Water Stains

Severe Water Stains
Easy to Soak the Floor



High-temperature steam ensures quick drying, preventing water stains often left by traditional mops.

Handheld Steam Cleaner Mode

1. **Detach Handle:** Press the release button on the telescopic rod to detach it from the main body.
2. **Attach Accessory Adaptor:** Insert the accessory adaptor into the opening on the main body and turn clockwise to lock.
3. **Select and Attach Accessory:** Choose the appropriate accessory (e.g., round brush for ovens, angle nozzle for grout) and attach it to the adaptor.
4. **Power On & Use:** Press the power button and wait for the blue light. Direct the steam towards the area to be cleaned.

Multi-Purpose Steam Cleaning



Large Round Brush



Round & Flat Brush



Ironing Brush



Window Cleaning



Small Cloth



Scraping Tool & Angle



Various accessories like brushes, scraping tools, and window cleaning tools enable multi-purpose steam cleaning for different surfaces.

Official Product Video

This video demonstrates the Mxnsewr Steam Mop in action, showcasing its all-in-one powerful handheld steam cleaner capabilities for various cleaning tasks.

MAINTENANCE

- **Empty Water Tank:** After each use, unplug the appliance and allow it to cool. Empty any remaining water from the tank.
- **Clean Microfiber Pads:** Microfiber pads are machine-washable. Wash them regularly to maintain cleaning effectiveness.
- **Clean Accessories:** Wipe down all accessories with a damp cloth. Do not use abrasive cleaners or metal brushes on delicate surfaces.
- **Storage:** Ensure the appliance is completely cool and dry before storing. Wrap the power cord around the designated winding device. Store in a cool, dry place.

TROUBLESHOOTING

- **No Steam:** Check if the power cord is securely plugged in. Ensure the water tank is filled and properly attached. Wait for the indicator light to turn blue.
- **Water Leaking:** Ensure the water tank cap is tightly closed and the tank is correctly seated.
- **Reduced Steam Output:** The steam nozzle or accessories might be clogged. Refer to the maintenance section for cleaning instructions.
- **Appliance Not Turning On:** Verify the power outlet is functional. Check the power switch on the unit.

SPECIFICATIONS

Specification	Detail
Brand	Mxnsewr
Model Name	MX-C201
Wattage	1200 watts
Voltage	110 Volts
Tank Volume	450 Milliliters
Heat Time	20 Seconds
Maximum Temperature	260 Degrees Fahrenheit
Power Cord Length	23 feet
Item Weight	6.31 pounds

WARRANTY AND SUPPORT

For any product problems or warranty inquiries, please contact Mxnsewr customer support at SteamMop-02@outlook.com. Please retain your proof of purchase for warranty claims.



Mxnsewr is committed to providing high-quality products and customer support.