

[Manuals.plus](#) /

› [Oaks Aura](#) /

› Oaks Aura 52" Farmhouse Caged Ceiling Fan with Light User Manual (MD-FS8930)

Oaks Aura MD-FS8930

Oaks Aura 52" Farmhouse Caged Ceiling Fan with Light User Manual

Model: MD-FS8930 | Brand: Oaks Aura

INTRODUCTION

Thank you for choosing the Oaks Aura 52" Farmhouse Caged Ceiling Fan with Light. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new ceiling fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

This 52-inch ceiling fan features a classic farmhouse style with a matte black body, 5 double-finished distressed pine/dark maple reversible blades, and a caged light fixture designed for two E26 bulbs (not included). It is ideal for medium to large rooms up to 400 sq. ft., such as living rooms, bedrooms, and dining rooms.

WHAT'S IN THE BOX

Carefully unpack all components and ensure all parts are present before discarding packaging materials. The package should include:

- Fan Motor Assembly
- 5 Reversible Fan Blades
- Blade Brackets
- Caged Light Kit
- Downrod (various lengths may be included)
- Canopy and Mounting Bracket
- Remote Control and Receiver
- Hardware Pack (screws, washers, wire nuts, etc.)
- User Manual

CEILING FAN WITH LIGHT DETAIL DISPLAY



Image: Detailed display of all ceiling fan components included in the package.

SETUP AND INSTALLATION

Safety First: Before beginning installation, ensure the power supply is turned off at the circuit breaker. If you are unsure about electrical wiring, consult a qualified electrician.

Installation Video Guide

Video: A step-by-step guide demonstrating the installation process for the 52-inch Farmhouse Ceiling Fan with Light.

Step-by-Step Installation

1. **Mounting the Bracket:** Secure the mounting bracket to the ceiling junction box using the provided screws. Ensure the bracket is firmly attached and can support the fan's weight.
2. **Assembling the Fan Blades:** Attach the blade brackets to the fan motor assembly. Then, secure each fan blade to its respective blade bracket using the provided screws and washers. Ensure all screws are tightened securely.

3. **Attaching the Downrod:** Insert the downrod through the canopy and coupling cover. Feed the electrical wires from the motor through the downrod. Secure the downrod to the fan motor assembly with the provided pin and screw.
4. **Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the manual. Ensure all connections are secure using wire nuts. Install the remote receiver within the canopy.
5. **Final Assembly:** Carefully lift the fan assembly and hang it on the mounting bracket. Secure the canopy to the mounting bracket. Attach the caged light kit to the bottom of the fan motor assembly and install the E26 bulbs (not included).



Image: The ceiling fan installed, illustrating its adjustable height feature with different downrod lengths.

OPERATING INSTRUCTIONS

Your Oaks Aura ceiling fan can be controlled using the included remote control or a dedicated smartphone application. The remote control offers comprehensive functionality for ease of use.

Remote Control Functions

- **Power On/Off:** Separate buttons to turn the fan and light on or off.
- **Fan Speed:** 6-speed settings to adjust airflow from a gentle breeze to a strong current.
- **Timer:** Set the fan to automatically turn off after 1, 2, or 4 hours.
- **Reversible Motor:** Switch between forward (downward airflow for cooling) and reverse (upward airflow for heat circulation) modes.
- **Natural Wind Mode:** Simulates a natural breeze by varying fan speeds.
- **Light Control:** Turn lights on/off. If dimmable bulbs are used, the remote may also control dimming (bulbs not included).


Reversible Motor Function

The fan features a reversible DC motor, allowing for year-round comfort. In **summer mode**, the blades rotate counter-clockwise, pushing air downwards to create a cooling effect. In **winter mode**, the blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling, helping to warm the room.

REVERSIBLE MOTOR



☀️ Summer Forward Air Flow

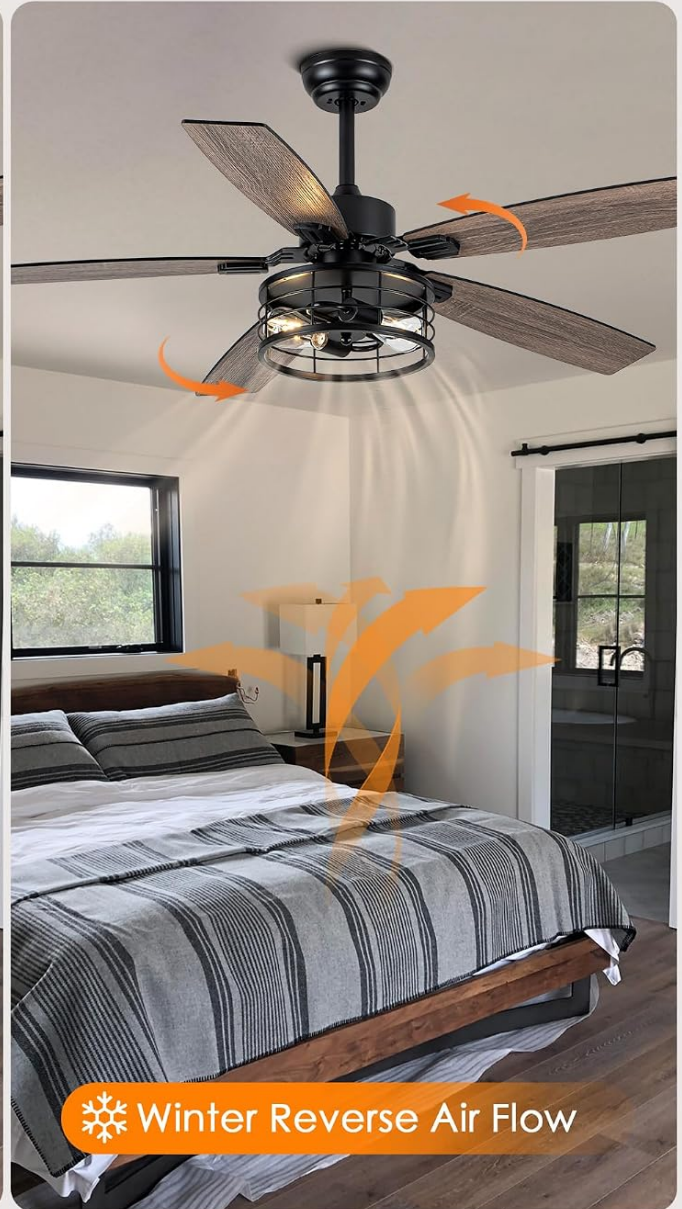

❄️ Winter Reverse Air Flow

Image: Illustration of the reversible motor function, demonstrating downward airflow for summer and upward airflow for winter.

Wind Speed Settings

Choose from 6 different wind speeds to suit your preference:

- **Speed 1-2:** Smooth Sleep Wind – Gentle airflow for quiet comfort.
- **Speed 3-4:** Steady and Soft Wind – Moderate airflow for everyday use.
- **Speed 5-6:** Bionic Breeze and Fresh – Stronger airflow for maximum cooling.

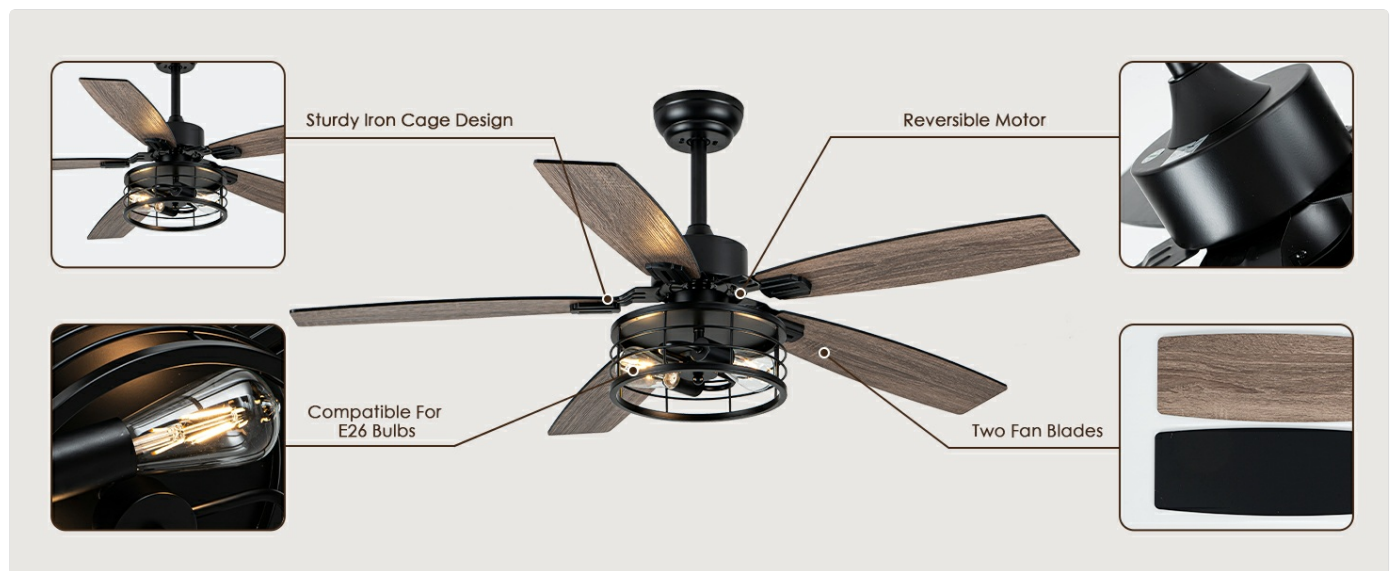


Image: Visual representation of the 6-speed settings, from gentle sleep wind to strong bionic breeze.

Scene Display Video

Video: A demonstration of the 52-inch Farmhouse Ceiling Fan with Light in various room settings, showcasing its aesthetic and functional features.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing periodically with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Blade Inspection:** Check fan blade screws for tightness at least once a year. Loose screws can cause wobbling and noise.
- **Light Fixture:** Ensure light bulbs are securely tightened. Replace bulbs as needed, ensuring they match the specified E26 base.
- **General Check:** Periodically inspect all connections and mounting hardware to ensure they remain secure.

TROUBLESHOOTING

If you experience issues with your ceiling fan, refer to the following common problems and solutions:

- **Fan Does Not Start:**
 - Check that the power is turned on at the circuit breaker and wall switch.
 - Ensure all wire connections are secure.
 - Verify the remote control batteries are working and correctly inserted.
- **Fan Wobbles:**
 - Ensure all blade screws are tightened.
 - Check that the mounting bracket and downrod are securely installed.
 - Verify blades are balanced. A balancing kit (not included) can be used if necessary.
- **Light Does Not Work:**
 - Check that the light switch on the remote is pressed.

- Ensure bulbs are correctly installed and not burnt out.
- Verify light kit wiring connections.

- **Noisy Operation:**

- Ensure all screws are tight.
- Check for any loose parts or obstructions.
- Allow a 24-hour break-in period for the motor to settle.

If problems persist, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Oaks Aura
Model Name	52" Farmhouse Caged Ceiling Fan with Light
Model Number	MD-Series
Size	52 inch
Product Dimensions	52"D x 52"W x 1"H
Color	Black
Material	Copper, Engineered Wood, Metal, Plastic
Power Source	DC
Voltage	110 Volts
Wattage	30 watts
Number of Speeds	6
Control Method	Remote Control, App
Special Features	Adjustable Height, Anti-Rust, Energy Efficient, Timer, Reversible Motor
Indoor/Outdoor Usage	Indoor
Item Weight	11 Pounds

WARRANTY AND SUPPORT

This Oaks Aura ceiling fan comes with a **1-year manufacturer's warranty**. For warranty claims, technical support, or any questions regarding your product, please contact Oaks Aura customer service.

You can also visit the official Oaks Aura store for more information and support: [Oaks Aura Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question