

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HAUSHOF](#) /

› [HAUSHOF HH24096 Electric Milk Frother User Manual](#)

## HAUSHOF HH24096

# HAUSHOF HH24096 Electric Milk Frother User Manual

Model: HH24096 | Brand: HAUSHOF

## INTRODUCTION

---

Thank you for choosing the HAUSHOF HH24096 Electric Milk Frother. This portable, USB-rechargeable device is designed to create creamy foam for your favorite beverages such as coffee, lattes, cappuccinos, and matcha. Please read this manual carefully before use to ensure proper operation and maintenance.

## SAFETY INSTRUCTIONS

---

- Keep the frother away from children.
- Do not immerse the main body (handle) of the frother in water or other liquids. Only the whisk attachment is washable.
- Ensure the frother is turned off before inserting or removing the whisk from liquids to prevent splashing.
- Use only the original charging cable and a 5V 1A adapter for charging.
- Do not operate the frother if it is damaged or malfunctioning.
- Avoid touching the rotating whisk during operation.

## PRODUCT OVERVIEW

---

The HAUSHOF HH24096 Electric Milk Frother consists of a main handle unit and a detachable whisk attachment. It features a simple one-button operation and a USB-C charging port.

# FACILE À RANGER

## CONCEPTION À RAINURE ARRIÈRE

Assure un placement stable sur les surfaces planes sans rouler



Image: The HAUSHOF Electric Milk Frother in green, shown with its stainless steel stand for convenient storage.

- **Main Unit (Handle):** Contains the motor, battery, control button, and charging port.
- **Whisk Attachment:** Made of 304 stainless steel, designed for frothing and mixing.
- **Stainless Steel Stand:** Provides stable and hygienic storage for the frother.

## SETUP

Before first use, ensure the frother is fully charged. Attach the whisk to the main unit by gently pushing it into the designated slot until it clicks securely.

## CHARGING

The HAUSHOF Electric Milk Frother is equipped with a USB Type-C charging port. No external batteries are required as it has a built-in rechargeable Lithium-ion battery.



Image: Charging the frother via its USB Type-C port. A full charge takes approximately 2.5 hours and provides about 2.5 weeks of use (5 minutes/day).

- Locate the USB Type-C port at the bottom of the frother handle.
- Connect the provided USB Type-C cable to the frother and plug the other end into a 5V 1A USB power adapter (not included) or a compatible USB port.
- The charging indicator light will illuminate during charging. A solid light typically indicates a full charge.
- A full charge takes approximately 2.5 hours and can provide power for about 2.5 weeks of daily use (assuming 5 minutes of use per day).

## OPERATING INSTRUCTIONS

---

The frother features a powerful motor with up to 11,000 rotations per minute, ensuring quick and efficient frothing.



Image: Demonstrating the one-button operation and proper frothing technique at a 45-degree angle with vertical movement.

1. Pour your desired liquid (milk, coffee, etc.) into a suitable container. Ensure the container is large enough to prevent spills during frothing.
2. Insert the whisk head of the frother into the liquid.
3. Press the power button once to start the frother.
4. To create rich foam, hold the frother at a 45-degree angle and move it gently up and down within the liquid, ensuring the whisk head remains submerged.
5. Continue frothing until the desired consistency is achieved. This typically takes a few seconds for milk foam.
6. Press the power button again to turn off the frother.
7. **Important:** Always turn off the frother before removing the whisk from the liquid to avoid splashing.

## Versatile Applications

This frother is not only ideal for creating creamy milk foam but also for mixing various other liquids:



Image: The frother's versatility for various beverages and food preparations, including coffee, lattes, matcha, protein shakes, vinaigrette, and egg whites.

- **Coffee & Milk:** Perfect for lattes, cappuccinos, and hot chocolate.
- **Matcha:** Achieve a smooth, lump-free matcha tea.
- **Protein Shakes:** Mix protein powder evenly.
- **Vinaigrettes & Dressings:** Emulsify ingredients for smooth sauces.
- **Egg Whites:** Beat egg whites for baking or cooking.

## CLEANING AND MAINTENANCE

---

Proper cleaning ensures the longevity and hygiene of your frother.



Image: Cleaning the whisk attachment under running water. Remember not to rinse or soak the handle.

1. After each use, immediately rinse the whisk attachment under warm running water.

2. You can briefly activate the frother while the whisk is submerged in water to help dislodge any residue.
3. **Do NOT rinse or immerse the main handle unit in water.** Wipe the handle with a damp cloth if necessary.
4. Dry the whisk thoroughly before storing.
5. Store the frother on its stainless steel stand in a dry place. The concave design on the back of the handle prevents it from rolling on flat surfaces.



Image: The frother stored neatly on its stand, highlighting its compact design and stable storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Low battery or no charge.	Charge the frother using the provided USB-C cable and a 5V 1A adapter.
Whisk is not rotating or rotating slowly.	Low battery. Whisk attachment not properly secured. Obstruction in the whisk.	Recharge the frother. Ensure the whisk is firmly attached to the main unit. Check for and remove any obstructions.
Milk is not frothing well.	Milk temperature is too cold or too hot. Type of milk used. Incorrect frothing technique.	Optimal frothing temperature for milk is typically between 60-70°C (140-158°F). Whole milk or oat milk often froth best. Ensure the whisk is submerged and moved vertically at a 45-degree angle.
Splashing occurs during operation.	Frother turned on/off while whisk is out of liquid. Container is too full.	Always ensure the whisk is submerged before turning on and off. Use a larger container or fill less liquid.

## SPECIFICATIONS

Brand	HAUSHOF
Model Number	HH24096
Color	Green
Product Dimensions (L x W x H)	7 x 6.8 x 17.5 cm
Item Weight	82 grams
Power	10 Watts
Voltage	5 Volts
Material	Stainless steel, Plastic
Features	Compact design, Lightweight, Rechargeable, Cordless
Battery Type	1 Lithium-ion (included)
Country of Origin	China

## PRODUCT VIDEO

---

Your browser does not support the video tag.

Video: A short overview demonstrating the HAUSHOF Electric Milk Frother's features, including its compact design, USB-C charging, powerful frothing capability, and easy cleaning. The video showcases the frother in various colors and highlights its convenience for daily use.

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact HAUSHOF customer service directly. Contact details can typically be found on the official HAUSHOF website or through your retailer.

**Note:** Availability of spare parts is currently unavailable according to product specifications.