

TECKNET TK-MS017

TECKNET TK-MS017 Ergonomic Wireless Vertical Mouse User Manual

Model: TK-MS017

INTRODUCTION

Thank you for choosing the TECKNET TK-MS017 Ergonomic Wireless Vertical Mouse. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new mouse. Designed for comfort and efficiency, this vertical mouse helps reduce wrist strain during prolonged use.



The TECKNET Ergonomic Vertical Mouse, designed for comfortable use.

PRODUCT FEATURES

- **Ergonomic Vertical Design:** Mimics a natural handshake posture to reduce wrist and arm pressure, preventing discomfort from prolonged use.
- **Adjustable DPI:** 5 levels of DPI (800/1600/2400/3200/4800) for precise tracking and adaptable sensitivity.
- **Silent Clicks:** 99% noise reduction for a quiet working environment. (Forward/Backward buttons are not

silent).

- **6 Buttons:** Includes standard left/right click, scroll wheel, DPI switch, and convenient forward/backward buttons for web navigation.
- **Stable 2.4G Wireless Connection:** Provides a reliable connection up to 10 meters with a plug-and-play USB receiver.
- **Long Battery Life:** Features an independent power switch and automatic sleep function to conserve battery, offering up to 24 months of use.
- **Wide Compatibility:** Supports Windows 11/10/8/7/XP, Mac OS X10.4, Chrome OS, and Linux.

Conception Verticale Ergonomique

La conception unique assure le confort de votre bras toute la journée




Comparison of vertical ergonomic grip and traditional mouse grip, highlighting reduced wrist tension with the vertical design.

SETUP INSTRUCTIONS

1. Install Batteries:

Locate the battery compartment on the underside of the mouse. Open the cover and insert two AA batteries (not included), ensuring correct polarity. Close the battery cover securely.

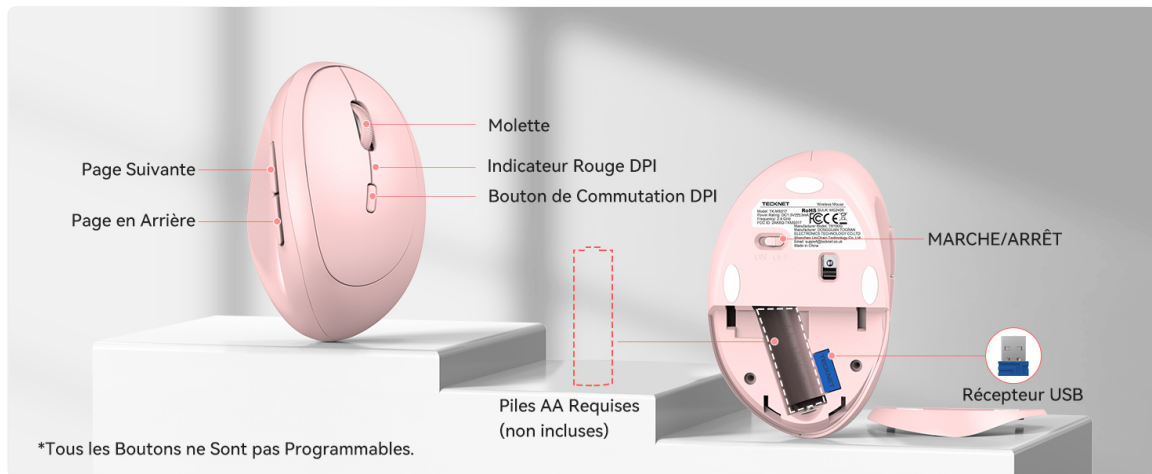

The underside of the mouse, illustrating the battery compartment and the storage slot for the USB receiver.

2. Connect USB Receiver:

Remove the USB receiver from its storage slot next to the battery compartment. Plug the receiver into an available USB port on your computer (PC, laptop, Mac, Chromebook, or tablet).

3. Power On:

Flip the ON/OFF switch on the bottom of the mouse to the "ON" position. The mouse should automatically connect to your device. No additional drivers are typically required for most operating systems.

OPERATING INSTRUCTIONS


Button Functions

- **Left Click:** Standard selection and activation.
- **Right Click:** Opens context menus.
- **Scroll Wheel:** Scrolls documents and web pages vertically. Can also be pressed for middle-click functionality.
- **DPI Switch Button:** Located near the scroll wheel. Press to cycle through DPI settings (800/1600/2400/3200/4800). The red indicator light will flash to confirm the change.
- **Forward Button:** Navigates forward in web browsers or file explorers. (Not supported on Mac OS).
- **Backward Button:** Navigates backward in web browsers or file explorers. (Not supported on Mac OS).

Changer Rapidement de Page Web

Page suivante

Page en arrière

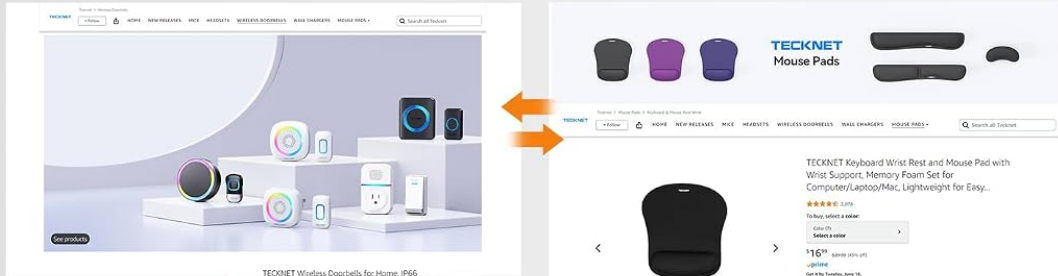

Test de durabilité des clés : 6 millions de clics

Diagram illustrating the location and function of each button on the TECKNET vertical mouse.

DPI Adjustment

The mouse offers 5 adjustable DPI levels to suit various tasks and preferences. Press the DPI switch button to change the cursor speed. The red indicator light will flash a corresponding number of times to indicate the current DPI setting:

- Flash X1: 800 DPI (Web Navigation)
- Flash X2: 1600 DPI (Excel Editing)
- Flash X3: 2400 DPI (Video Editing)
- Flash X4: 3200 DPI (Photoshop)
- Flash X5: 4800 DPI (Gaming Track)

5 Niveaux DPI Réglables

Changez facilement de niveau DPI en un seul clic



Visual representation of the 5 adjustable DPI levels for different usage scenarios.

Power Saving Mode

To conserve battery life, the mouse will automatically enter sleep mode after 8 minutes of inactivity. To wake it up, simply move the mouse or click any button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** When the mouse performance degrades or the cursor becomes erratic, it's time to replace the batteries. Ensure you use fresh AA batteries and dispose of old batteries responsibly.

- **Storage:** When not in use for extended periods, turn off the mouse using the ON/OFF switch to further conserve battery life. Store the USB receiver inside the mouse's battery compartment to prevent loss.

TROUBLESHOOTING

- **Mouse not responding:**
 - Ensure the mouse is turned ON.
 - Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port.
 - Move the mouse closer to the USB receiver to rule out range issues.
 - Restart your computer.
- **Erratic cursor movement:**
 - Clean the optical sensor on the bottom of the mouse.
 - Ensure you are using the mouse on a suitable surface. The mouse is designed to track on various surfaces like resin, wood, fabric, paper, and metal. Avoid highly reflective or transparent surfaces.
 - Adjust the DPI setting to a lower level if the cursor is too sensitive.
- **Forward/Backward buttons not working on Mac:**

These side buttons are not supported by Mac OS. This is a system limitation, not a mouse malfunction.

SPECIFICATIONS

Brand	TECKNET
Model Number	TK-MS017
Connectivity Technology	2.4G Wireless (Radio-frequency)
Motion Detection Technology	Optical
DPI Levels	800, 1600, 2400, 3200, 4800
Number of Buttons	6
Hand Orientation	Right
Product Dimensions	10.5L x 6.5W centimeters
Wireless Range	Up to 10 meters
Power Source	2 x AA Batteries (not included)
Average Battery Life	Up to 24 months
Compatible Operating Systems	Windows 11/10/8/7/XP, macOS X10.4+, Chrome OS, Linux

WARRANTY AND SUPPORT

TECKNET provides a 36-month support period for registered products. If you encounter any issues during the use of this product, please contact the professional TECKNET customer service team for assistance.

For more information and support, please visit the official TECKNET website or contact their customer service directly.

Website: [TECKNET Store on Amazon](#)

