

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Jocca](#) /

› [Jocca 8L Digital Air Fryer with Window Instruction Manual](#)

Jocca 2307N

Jocca 8L Digital Air Fryer with Window - Instruction Manual

Model: 2307N

INTRODUCTION

Thank you for purchasing the Jocca 8L Digital Air Fryer with Window. This appliance is designed to cook a variety of foods using rapid hot air circulation, offering a healthier alternative to traditional frying methods. Please read this instruction manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFEGUARDS

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts.
- Do not use accessories or attachments not recommended by the manufacturer.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- The appliance is for household use only.
- Hot steam is released through the air outlet opening during operation. Keep your hands and face at a safe

distance from the steam and the air outlet openings.

- Always ensure the basket is properly inserted before operating.

PRODUCT OVERVIEW

The Jocca 8L Digital Air Fryer is designed for efficient and healthy cooking. It features a large capacity basket, a digital touch control panel, and a viewing window with an internal light.



Image: Front view of the Jocca 8L Digital Air Fryer, showcasing its sleek black design and the transparent viewing window.

Components:

1. Main Unit
2. Removable Cooking Basket with Handle
3. Crisper Plate (inside the basket)
4. Digital Touch Control Panel
5. Viewing Window with Internal Light
6. Air Inlet (top)
7. Air Outlet (rear)

Control Panel Overview:



Image: Close-up of the digital touch control panel, showing temperature and time displays, pre-set program icons, and function buttons.

The digital touch screen allows for easy selection of cooking programs, temperature, and time adjustments. It includes icons for 10 pre-set programs, a power button, start/stop, preheat, dehydrate, and turn reminder functions.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Wipe the exterior of the appliance with a damp cloth. Remove the cooking basket and crisper plate, wash them with warm soapy water, rinse thoroughly, and dry completely. Do not use abrasive cleaners.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for adequate air circulation. Do not place it directly under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **First Use (Burn-in):** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) before cooking food for the first time. This helps to burn off any manufacturing residues and odors. A slight odor or smoke may be present during this process; this is normal. Ensure good ventilation.

OPERATING INSTRUCTIONS

Basic Operation:

1. Place the crisper plate inside the cooking basket.
2. Place your food into the cooking basket. Do not overfill the basket to allow for proper air circulation.
3. Slide the cooking basket back into the main unit until it clicks into place.
4. Press the **Power** button to turn on the display.
5. **Manual Setting:** Use the **TEMP** and **TIME** buttons, along with the **+** and **-** buttons, to set your desired temperature (34°C to 200°C) and cooking time (1 to 24 hours).
6. **Pre-set Programs:** Alternatively, select one of the 10 automatic programs by tapping the corresponding icon. The appliance will automatically set the optimal temperature and time for that food type. You can adjust these settings manually after selecting a program if needed.
7. Press the **START** button to begin cooking.

8. You can monitor the cooking progress through the viewing window. The internal light can be turned on/off by pressing the light icon.
9. During cooking, you may hear an acoustic alert (Turn Reminder) prompting you to shake or flip the food for even cooking.
10. Once the cooking cycle is complete, the air fryer will beep, and the display will show "OFF".
11. Carefully pull out the basket using the handle. Place it on a heat-resistant surface.
12. Remove the cooked food using tongs. Do not tip the basket to remove food, as excess oil may collect at the bottom.
13. Unplug the appliance after use.



Image: The air fryer basket pulled out, showing crispy fries ready to be served.

Special Functions:

- **Preheat Function:** Press the **PREHEAT** button to preheat the air fryer to the desired temperature before adding food. This ensures more consistent cooking results.
- **Dehydrate Function:** This function allows you to dehydrate fruits, vegetables, and more. The timer can be set from 30 minutes to 24 hours. The temperature range for dehydration is typically lower.
- **Keep Warm Function:** After cooking, the appliance can keep food warm for 1 minute to 8 hours.
- **Automatic Shut-off:** The air fryer will automatically turn off at the end of the cooking cycle or if the basket is removed during operation.

CLEANING AND MAINTENANCE

Clean the air fryer after every use to prevent food residue buildup and maintain performance.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** The cooking basket and crisper plate are non-stick coated and can be washed with warm soapy water. Use a soft sponge or cloth. For stubborn food residue, soak the basket in warm water for about 10 minutes before cleaning. Do not use metal utensils or abrasive cleaning materials, as they can damage the non-stick coating.
3. **Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild detergent. Do not immerse the main unit in water.
4. **Exterior:** Clean the exterior with a damp cloth.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element inside the air fryer.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overfilled. Food pieces are too large. Food was not shaken/flipped.	Do not overfill the basket. Cut food into smaller, uniform pieces. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Fat residue from previous use. Excess oil on food.	Clean the basket and crisper plate thoroughly. Remove excess oil from food before air frying.
Appliance smells during first use.	Manufacturing residues burning off.	This is normal. Ensure good ventilation. The smell will dissipate after a few uses.
Basket does not slide in properly.	Basket is not aligned correctly. Obstruction.	Ensure the basket is empty and aligned with the guides. Check for any obstructions.

SPECIFICATIONS

Feature	Specification
Brand	Jocca
Model Number	2307N
Capacity	8 Liters
Power	1800 Watts
Temperature Range	34°C - 200°C
Cooking Timer	1 - 24 Hours
Dehydrate Timer	30 Minutes - 24 Hours
Keep Warm Timer	1 Minute - 8 Hours
Dimensions (L x W x H)	30 x 26 x 35 cm
Weight	7.25 kg

Feature	Specification
Material	Acrylonitrile Butadiene Styrene (ABS)
Special Features	Digital LED Touch Screen, 10 Automatic Programs, Viewing Window with Light, Preheat, Dehydrate, Keep Warm, Acoustic Alert, Automatic Shut-off

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Jocca website. Keep your purchase receipt as proof of purchase.