

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DREAMHAX](#) /

› [DREAMHAX X7 Plus Handheld Game Console User Manual](#)

## DREAMHAX X7PLUSRB

# DREAMHAX X7 Plus Handheld Game Console User Manual

Model: X7PLUSRB

Brand: DREAMHAX

## 1. IMPORTANT SAFETY INFORMATION

Please read this section carefully before using your DREAMHAX X7 Plus Handheld Game Console to ensure safe and proper operation.

- **WARNING: DO NOT CHARGE OVER 5V 1A.** Using a charger with higher voltage or amperage may damage the device and void the warranty.
- Keep the device away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Take regular breaks during extended gameplay to prevent eye strain and fatigue.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x DREAMHAX X7 Plus Handheld Game Console
- 1 x USB Data/Charging Cable
- 1 x HDMI TV Output Cable
- 1 x Earphone
- 1 x User Manual (this document)

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components and interfaces of your X7 Plus console.



**Figure 3.1:** Front view of the DREAMHAX X7 Plus Handheld Game Console. This image displays the 4.3-inch screen, the directional pad and analog stick on the left, and the action buttons (A, B, X, Y) and another analog stick on the right. The 'SELECT' and 'START' buttons are located below the right analog stick.



**Figure 3.2:** Side view of the console, highlighting various ports and buttons. Visible interfaces include the TF card slot, 3.5mm earphone jack, HDMI TV output port, Mini USB port for data/charging, and Micro USB port for wireless gamepads.

# Add product feature attributes

New product launch, four major product advantages



**Built-in camera**  
**Support photo shooting**



**Support 2.4G wireless, wired**  
**Dual handle connection, support two-player battle**



**Support HDMI high-definition output**

**Figure 3.3:** An overview of key features and ports. This image points out the built-in camera, HDMI output capability for connecting to a TV, and support for dual handle connections for two-player gaming.



**Figure 3.4:** Close-up of the console's control layout, emphasizing the dual analog sticks (referred to as 'rockers') and the ergonomic placement of the A/B/X/Y buttons and directional pad for comfortable gameplay.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge the console. Connect the provided USB Data/Charging Cable to the Mini USB port on the console and to a compatible USB power adapter (not included) or computer USB port. Ensure the power adapter output is **5V 1A or less**. The charging indicator will illuminate during charging and turn off when fully charged.

### 4.2 Power On/Off

- **To Power On:** Press and hold the Power button until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the power-off prompt appears, then confirm. Alternatively, a short press may bring up a menu to power off.

### 4.3 Inserting a TF Card

The console has 8GB of built-in memory and supports expandable storage up to 32GB via a TF (MicroSD) card. To insert a TF card:

1. Locate the TF card slot on the side of the console (refer to Figure 3.2).
2. Gently insert the TF card into the slot until it clicks into place.
3. To remove, push the card inward until it clicks, then release, and it will eject.

## 5. OPERATING INSTRUCTIONS

---

The X7 Plus features a customized operating system with English as the default language. It includes convenient save and load features for game progress.

### 5.1 General Navigation

Use the directional pad and analog sticks to navigate through menus and select options. The 'SELECT' and 'START' buttons perform various functions depending on the context.

### 5.2 Playing Games

The console comes preloaded with approximately 10,000 classic games and supports various game formats including PS1, MAME, FBA, NEOGEO, GBA, GBC, GB, NES, SNES, and MD.

- **Accessing Games:** Not all games are displayed on the main screen. To view the full library, navigate to the "Games" folder within the system menu.
- **Saving/Loading Game Progress:** During gameplay, press the 'ESC' button to access the system menu. From this menu, you can save your game state, load a previously saved state, or adjust controls. After making selections, choose "return to game" to continue playing.
- **Button Mapping:** In the operating system menus, the 'B' button may function as 'A' and 'A' as 'B'. This behavior typically does not apply within games. If a game requires L2/R2 buttons, and the console only has L1/R1, remapping may be necessary within the game's settings or the console's system menu if supported.
- **Downloading Games:** You can connect the console to a PC via the USB cable to transfer compatible game files to the device's memory or an inserted TF card.

### 5.3 Multimedia Functions

Beyond gaming, the X7 Plus offers several multimedia capabilities:

- **Music Player:** Supports MP3, WMA, APE, FLAC, WAV formats.
- **Video Player:** Supports RMVB, MP4, AVI, FLV formats.
- **Photo Viewer:** Supports JPEG, BMP, GIF, TIF, PNG formats.
- **Camera:** The console includes a built-in camera for taking photos.
- **E-book Reader:** View text files directly on the console.

### 5.4 Connecting to a TV (HDMI Output)

To enjoy games and media on a larger screen, use the provided HDMI TV Output Cable:

1. Connect one end of the HDMI cable to the HDMI TV Output port on the console.
2. Connect the other end to an HDMI input port on your television.
3. Select the corresponding HDMI input on your TV. The console's display should mirror on the television.

### 5.5 Connecting to a PC (USB)

Connect the console to your computer using the USB Data/Charging Cable to transfer files:

1. Connect the Mini USB end of the cable to the console.

2. Connect the standard USB end to an available USB port on your computer.
3. The console should appear as a removable storage device on your computer, allowing you to drag and drop files.

## 5.6 Multiplayer Gaming

The X7 Plus supports two-player gaming through 2.4G wireless or wired external gamepads. Connect compatible controllers to the Micro USB port for multiplayer sessions.



**Figure 5.1:** The DREAMHAX X7 Plus console connected to two external gamepads, illustrating its two-player capability for a shared gaming experience.

## 6. MAINTENANCE

Proper care will extend the life of your console.

- **Cleaning:** Use a soft, dry cloth to clean the console's exterior. For the screen, use a microfiber cloth specifically designed for electronics. Avoid abrasive cleaners or solvents.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge the console when the battery level is low. Always use a 5V 1A charger or lower.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

## 7. TROUBLESHOOTING

If you encounter issues with your console, refer to the following common solutions:

Problem	Possible Solution
Console does not power on.	Ensure the battery is charged. Connect the console to a charger and try again.
Short battery life.	Ensure the console is fully charged before use. Reduce screen brightness. Close unused applications. Battery performance may degrade over time.
Games are not appearing in the list.	Navigate to the "Games" folder in the main menu to view the complete game library. Ensure games are in supported formats and correctly placed on the device or TF card.
Console freezes or is unresponsive.	Press and hold the Power button for approximately 10-15 seconds to force a restart. If the issue persists, ensure the TF card is properly inserted or try removing it temporarily.
No display on TV via HDMI.	Ensure the HDMI cable is securely connected to both the console and the TV. Verify that the correct HDMI input source is selected on your television.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	X7PLUSRB
Screen Size	4.3 Inches
Display Type	TFT LCD
Internal Memory	8 GB
Expandable Memory	Supports TF Card up to 32GB
Battery Type	Lithium Ion (included)
Estimated Battery Life	5 Hours
Supported Game Formats	PS1, MAME, FBA, NEOGEO, GBA, GBC, GB, NES, SNES, MD
Supported Music Formats	MP3, WMA, APE, FLAC, WAV
Supported Video Formats	RMVB, MP4, AVI, FLV

Feature	Detail
Supported Image Formats	JPEG, BMP, GIF, TIF, PNG
Interfaces	TF Card Slot, 3.5mm Earphone, HDMI TV Output, Mini USB (data/charging), Micro USB (wireless gamepads)
Built-in Features	Speaker, Microphone, Camera
Product Dimensions	7.09 x 3.07 x 0.79 inches
Item Weight	8.8 ounces (0.55 Pounds)
Material	Plastic
Controller Type	Button Control

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.