

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Clipso+ Chef Pressure Cooker - 4.5 Litre Instruction Manual

Tefal Clipso+ Chef

Tefal Clipso+ Chef Pressure Cooker - 4.5 Litre Instruction Manual

Model: Clipso+ Chef | Capacity: 4.5 Litre

INTRODUCTION

Thank you for choosing the Tefal Clipso+ Chef Pressure Cooker. This manual provides essential information for the safe and efficient use of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using pressure cookers, basic safety precautions should always be followed:

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when the pressure cooker is used near children.
- Do not place the pressure cooker in a heated oven.
- Exercise extreme caution when moving a pressure cooker containing hot liquids.
- Never fill the pressure cooker more than two-thirds full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill more than half full.
- Ensure the lid is properly closed and locked before applying heat.
- Do not force open the pressure cooker. Ensure the internal pressure is completely released before opening.
- Always check the pressure release valve and safety valve for blockages before each use.
- Use only genuine Tefal replacement parts.

PRODUCT OVERVIEW

The Tefal Clipso+ Chef Pressure Cooker is designed for efficient and safe cooking. It features a robust stainless steel construction and a user-friendly design.

Key Features:

- **One-Hand Opening/Closing:** Designed for easy and secure operation.
- **Durable Construction:** Made from high-quality stainless steel for long-lasting performance.
- **Faster Cooking:** Cooks up to 2 times faster than conventional methods, saving time and energy.
- **4 Cooking Programs:** Offers versatile cooking options for various ingredients.
- **Digital Display:** Provides clear information and control during cooking.
- **Included Accessories:** Comes with a timer and a steam basket for enhanced functionality.



Image: Top view of the Tefal Clipso+ Chef Pressure Cooker, showing the lid mechanism and control panel.



Image: A hand demonstrating the easy one-hand opening mechanism of the pressure cooker lid.

SETUP

1. Initial Cleaning

Before first use, wash the pot, lid, and all accessories (gasket, steam basket, timer) with warm soapy water. Rinse thoroughly and dry completely. Do not immerse the timer in water.

2. Assembling the Lid

Ensure the gasket is correctly positioned inside the lid. Align the lid with the pot and press down firmly while engaging the locking mechanism. The one-hand system allows for simple and secure closure.



Image: A person demonstrating the opening of the pressure cooker lid, showing the secure locking mechanism.

OPERATING INSTRUCTIONS

1. Filling the Cooker

Add ingredients and liquid to the pot. Do not exceed the maximum fill line (2/3 full) indicated inside the pot. For foods that expand, do not fill more than 1/2 full.

2. Closing the Lid

Place the lid on the pot, ensuring it is correctly aligned. Press the handle down until you hear a click, indicating the lid is securely locked. The one-hand system makes this process straightforward.

3. Setting Cooking Programs and Timer

Place the pressure cooker on a heat source. The Clipso+ Chef features 4 cooking programs. Select the appropriate program using the control buttons on the lid. The integrated timer will help you monitor cooking time. Once pressure is reached, the timer will start

counting down.



Image: A hand interacting with the control panel on the pressure cooker lid, likely selecting a cooking program or setting the timer.

4. Pressure Release

Once cooking is complete, turn off the heat. Allow the pressure to release naturally or use the controlled release mechanism on the lid. Never attempt to open the lid while pressure is still inside the cooker.



Image: Steam being released from the pressure cooker's valve, indicating pressure is being safely vented.

5. Opening the Cooker

After all pressure has been released, unlock the lid using the one-hand mechanism and carefully lift it. Always open the lid away from your face to avoid residual steam.

MAINTENANCE AND CLEANING

1. Cleaning the Pot and Lid

After each use, wash the pot and lid with warm soapy water. For stubborn food residues, soak the pot before cleaning. The stainless steel pot is dishwasher safe. The lid, including the gasket and valves, should be hand-washed.

2. Gasket and Valves

Regularly inspect the gasket for any signs of wear or damage. Replace it if necessary. Ensure the pressure release valve and safety valve are clean and free from food particles. Refer to the detailed diagrams in the full user manual for disassembly and reassembly of these components for cleaning.

3. Timer Care

The timer unit should be wiped clean with a damp cloth. Do not immerse it in water or place it in a dishwasher.



Image: A hand cleaning the detachable timer unit of the pressure cooker with a sponge, emphasizing its separate cleaning.

TROUBLESHOOTING

If you encounter issues with your pressure cooker, refer to the following common problems and solutions:

- **Pressure not building:** Check if the lid is properly closed and locked. Ensure the gasket is correctly seated and not damaged. Verify that the pressure release valve is not open or blocked.
- **Steam leaking from the lid:** This often indicates an improperly seated or worn gasket. Re-seat the gasket or replace it if necessary. Ensure the lid is closed correctly.
- **Lid stuck after cooking:** Do not force the lid. Ensure all internal pressure has been released. If necessary, run cold water over the lid (avoiding the valve area) to help cool and release pressure.
- **Food not cooking properly:** Verify that the correct amount of liquid was used and that the cooking time and program were set appropriately for the ingredients.

For more detailed troubleshooting, please consult the comprehensive user manual or contact Tefal customer support.

SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	CLIPSO CHEF
Capacity	4.5 Litre
Material	Stainless Steel
Coating Type	Titanium
Features	4 Cooking Programs, Safety Lock, Digital Display
Control Method	Push Button
Operating Mode	Manual
Locking Type	Inner Lid
Control Type	Mechanical button
Product Dimensions (D x W x H)	28D x 22W x 45H cm
Product Weight	4.33 Kilogram



Image: The Tefal Clipso+ Chef Pressure Cooker with its key dimensions (height, width, depth) clearly indicated.

WARRANTY AND SUPPORT

Warranty Information

Your Tefal Clipso+ Chef Pressure Cooker is covered by a manufacturer's warranty. For specific details regarding warranty terms, duration, and conditions, please refer to the warranty card included with your product or visit the official Tefal website.

Customer Support

For any questions, technical assistance, or service requests, please contact Tefal customer support. You can find contact information, including phone numbers and online support options, on the official Tefal website: www.tefal.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question