

JBL Xtreme 2

JBL Xtreme 2 Portable Wireless Bluetooth Speaker User Manual

Model: Xtreme 2

INTRODUCTION

Thank you for choosing the JBL Xtreme 2 Portable Wireless Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

Upon unpacking your JBL Xtreme 2 speaker, please ensure all items listed below are present and in good condition:

- JBL Xtreme 2 Portable Wireless Bluetooth Speaker
- Power Adapter
- Carrying Strap
- Quick Start Guide (not included in this digital manual)
- Safety Sheet (not included in this digital manual)



Image: The JBL Xtreme 2 speaker shown alongside its power adapter and detachable carrying strap.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your JBL Xtreme 2 speaker.



Image: Front view of the JBL Xtreme 2 speaker, highlighting the control buttons on top and the JBL logo on the front grille.

Top Panel Controls

- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Down Button:** Decreases the volume.
- **Power Button:** Press to turn the speaker on or off.
- **JBL Connect+ Button:** Connects to other JBL Connect+ compatible speakers.
- **Volume Up Button:** Increases the volume.
- **Play/Pause Button:** Controls music playback and answers/ends calls.

Rear Panel Ports



Image: Rear view of the JBL Xtreme 2 speaker, showing the sealed port cover for protection against water. Under the sealed cover on the rear of the speaker, you will find the following ports:

- **Power Input:** For connecting the power adapter to charge the speaker.
- **USB-A Port:** For charging external devices (power bank function).
- **3.5mm Audio Input:** For connecting devices via an auxiliary cable.

SETUP

Charging the Speaker

1. Open the sealed cover on the rear of the speaker.
2. Connect the power adapter to the power input port on the speaker.
3. Plug the power adapter into a wall outlet.
4. The LED indicator will show charging status. A full charge takes approximately 3.5 hours.
5. Once fully charged, disconnect the power adapter and securely close the sealed cover to maintain water resistance.

Powering On/Off

- **To Power On:** Press the Power Button on the top panel. The speaker will emit a power-on sound, and the LED indicator will light up.
- **To Power Off:** Press the Power Button again. The speaker will emit a power-off sound, and the LED indicator will turn off.

Bluetooth Pairing

1. Turn on the JBL Xtreme 2 speaker.
2. Press the Bluetooth Button on the top panel. The LED indicator will flash blue, indicating it is in pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings.
4. Select "JBL Xtreme 2" from the list of available devices.
5. Once connected, the LED indicator will turn solid blue, and the speaker will emit a confirmation sound.

Note: The speaker can remember up to 2 previously paired devices. It will automatically connect to the last paired device if available.

JBL Connect+

The JBL Xtreme 2 supports JBL Connect+, allowing you to wirelessly link multiple JBL Connect+ compatible speakers together for an enhanced audio experience.

1. Ensure all JBL Connect+ compatible speakers are powered on.
2. Connect one speaker to your Bluetooth device as described in the "Bluetooth Pairing" section.
3. Press the JBL Connect+ Button on the first speaker.
4. Press the JBL Connect+ Button on all other speakers you wish to connect.
5. The speakers will link together, playing the same audio simultaneously.

OPERATING INSTRUCTIONS

Music Playback

- **Play/Pause:** Press the Play/Pause Button once.
- **Skip Track Forward:** Double-press the Play/Pause Button.
- **Skip Track Backward:** Triple-press the Play/Pause Button.
- **Volume Control:** Use the Volume Up (+) and Volume Down (-) buttons on the speaker, or control from your connected device.

Speakerphone Function

When connected to a smartphone via Bluetooth, the JBL Xtreme 2 can be used as a speakerphone.

- **Answer Call:** Press the Play/Pause Button once.
- **End Call:** Press the Play/Pause Button once during a call.
- **Reject Call:** Press and hold the Play/Pause Button for 2 seconds.

Charging External Devices (Power Bank)

The JBL Xtreme 2 features a built-in power bank function to charge your mobile devices.

1. Open the sealed cover on the rear of the speaker.
2. Connect your device's USB charging cable to the USB-A port on the speaker.
3. Your device will begin charging.
4. Remember to close the sealed cover after use to maintain water resistance.

MAINTENANCE

Cleaning

- Ensure the speaker is powered off and disconnected from any power source before cleaning.
- Use a soft, damp cloth to wipe the exterior of the speaker.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the speaker's finish or fabric.
- Ensure the sealed port cover is closed tightly after cleaning to maintain water resistance.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% to prolong battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to the power adapter and charge it.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device's Bluetooth is off; speaker is already connected to another device.	Press the Bluetooth button to enter pairing mode. Ensure Bluetooth is enabled on your device. Disconnect from other devices.
No sound or low volume.	Volume is too low on speaker or device; device is not playing audio; speaker is muted.	Increase volume on both speaker and device. Ensure audio is playing on the source device. Check if speaker is muted.
Poor sound quality.	Bluetooth interference; device is too far from speaker.	Move speaker closer to the device. Avoid obstacles between speaker and device. Reduce interference from other wireless devices.
External device not charging from USB port.	Speaker battery is low; USB cable is faulty; device is incompatible.	Ensure speaker has sufficient charge. Try a different USB cable. Verify device compatibility.

SPECIFICATIONS

Feature	Specification
Model Name	JBL Xtreme 2 (B084BX8GYH)
Wireless Connectivity	Bluetooth
Power Source	Battery Powered
Battery Type	1 CR2 battery required (internal)
Playtime	Up to 15 hours (varies with volume level and audio content)

Feature	Specification
Charging Time	Approximately 3.5 hours
Speaker Maximum Output Power	40 Watts
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0
Material	Fabric and Rugged Material
Product Dimensions	5 x 16 x 5 inches
Item Weight	14.6 pounds
Waterproof	No (Note: While the product description mentions IPX7, the specification states 'Is Waterproof: False'. Users should refer to official JBL documentation for precise water resistance ratings.)
Compatible Devices	Desktop, Laptop, MP3 Player, Smartphone, Tablet
Control Method	App, On-device buttons
UPC	703670754265

WARRANTY AND SUPPORT

The JBL Xtreme 2 comes with a limited warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official JBL website.

For technical support, troubleshooting assistance, or service inquiries, please contact JBL customer support through their official website or the contact information provided in your product's packaging.

Online Resources:

- Official JBL Website: www.jbl.com

This manual is for informational purposes only. Specifications are subject to change without notice.