

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Dyson](#) /
- > [Dyson Car+Boat Handheld Vacuum Instruction Manual](#)

Dyson 586119-01

Dyson Car+Boat Handheld Vacuum Instruction Manual

Model: 586119-01

PRODUCT OVERVIEW

The Dyson Car+Boat cordless handheld vacuum is engineered for powerful and versatile cleaning of hard surfaces, upholstery, and tight spaces in your home, car, or boat. It features 115AW suction power, two power modes, and up to 50 minutes of fade-free run time. The advanced filtration system captures 99.99% of particles as small as 0.3 microns, expelling cleaner air.

Key Features

- The most powerful handheld vacuum.
- Up to 50 minutes of fade-free suction power and two power modes.
- Deep clean fabric with the Mini Motorized tool, designed to remove allergens and pet hair.
- Quickly switch between tasks with the Combination tool, using the wide nozzle for general cleaning and the brush for gentle dusting.
- Easily tackle dust and dirt in hard-to-reach places with the Crevice tool, reaching up to seven inches into tight, narrow spaces.
- Expels cleaner air through advanced whole-machine filtration, trapping 99.99% of particles as small as 0.3 microns.
- Constructed from strong, durable, and lightweight materials.

PACKAGE CONTENTS

Your Dyson Car+Boat Handheld Vacuum package includes the following components:

- Dyson Car+Boat Handheld Vacuum unit
- Charger
- Mini Motorized tool
- Combination tool
- Crevice tool

Attachments and Accessories



Mini motorized tool



Crevice tool



Combination tool



Charger

This image displays the main Dyson Car+Boat handheld vacuum unit along with its charger, mini motorized tool, combination tool, and crevice tool.

SETUP

Charging the Vacuum

Before first use, fully charge your Dyson Car+Boat handheld vacuum.

1. Connect the charger to a power outlet.
2. Plug the charging cable into the charging port located on the vacuum's base.
3. The blue indicator light on the base will illuminate to show charging status.
4. A full charge typically takes several hours.



Versatile. Powerful. Long-lasting.

With tools for every surface and up to 50 minutes of fade-free suction power.¹



Whole machine filtration

Captures microscopic particles as small as 0.3 microns.³



Cleans everywhere

Compact and lightweight. For cleaning your car, boat and awkward spaces.


The image shows the Dyson Car+Boat handheld vacuum resting on its charging base, plugged into a wall outlet. A blue light indicates that the unit is currently charging.

This video demonstrates how to properly connect the Dyson handheld vacuum to its charging station and manage the charging cable.

Attaching Tools

The included tools can be easily attached and detached to suit your cleaning needs.

1. To attach a tool, align it with the main vacuum unit's nozzle and push until it clicks securely into place.
2. To detach a tool, press the red release button on the tool and pull it away from the main unit.

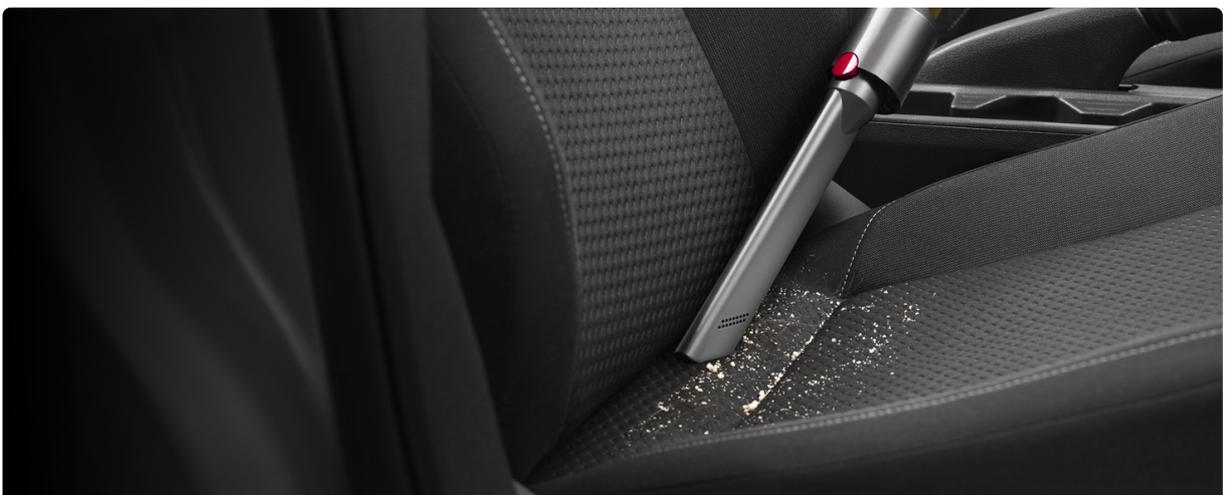

This image illustrates the process of attaching a cleaning tool, specifically the crevice tool, to the main body of the Dyson Car+Boat handheld vacuum.

OPERATING THE VACUUM

Power Modes

The vacuum features two power modes for different cleaning tasks:

- **Standard Mode:** Provides up to 50 minutes of fade-free suction for everyday cleaning.
- **Max Mode:** Offers increased suction power for tougher dirt and debris, with a shorter run time.

To switch between modes, use the slider switch located on the top of the main unit.

Using the Tools

- **Mini Motorized Tool:** Ideal for deep cleaning upholstery, pet beds, and car seats to remove pet hair and allergens.
- **Combination Tool:** Features a wide nozzle for general cleaning and a brush for delicate surfaces or dusting.
- **Crevice Tool:** Designed for reaching into narrow gaps, corners, and tight spaces in vehicles or furniture.



A Dyson Car+Boat handheld vacuum, equipped with the crevice tool, is shown effectively cleaning debris from between car seats.



The Dyson Car+Boat handheld vacuum, fitted with the combination tool, is used to clean crumbs and debris from a table surface.



This image shows the Dyson Car+Boat handheld vacuum with its crevice tool reaching into the tight corner of a staircase to remove dust and dirt.

MAINTENANCE

Emptying the Clear Bin

Empty the clear bin when debris reaches the MAX mark.

1. Hold the vacuum over a trash bin.
2. Push the red lever on the main unit upwards until the bin base opens and debris is released.
3. Push the bin base back up until it clicks securely into place.



Easily clean hard-to-reach places



Powerfully pick up pet hair



Deep clean fabric and mattresses



Clean outside your home

The image demonstrates how to empty the clear bin of the Dyson Car+Boat handheld vacuum by pushing a red lever, allowing collected debris to fall into a trash receptacle.

Washing the Filter

The filter should be washed regularly (at least once a month) to maintain optimal suction.

1. Twist the filter counter-clockwise from the top of the main unit and pull it out.
2. Wash the filter under cold running water until the water runs clear.
3. Squeeze and twist the filter to remove excess water.
4. Leave the filter to dry completely for at least 24 hours in a warm, dry place before reattaching. Do not use a tumble dryer or microwave.



Ergonomic and lightweight for cleaning high, low and in between



Two cleaning modes for the right balance of power and run time



No-touch bin emptying

This image shows a hand detaching the purple filter from the top section of the Dyson Car+Boat handheld vacuum, preparing it for cleaning.

Cleaning the Mini Motorized Tool Brush Bar

Periodically check the brush bar for tangled hair or debris and remove it to ensure effective cleaning.

TROUBLESHOOTING

No Power / Not Charging

- Ensure the charger is securely plugged into both the wall outlet and the vacuum's charging port.
- Check the power outlet by plugging in another appliance.
- Allow the vacuum to cool down if it has been used extensively, as it may have a thermal cut-out.

Reduced Suction

- Check if the clear bin is full and empty it if necessary.
- Ensure the filter is clean and dry. Wash and dry it if it's dirty or damp.
- Check for blockages in the tools or the main unit's intake.
- Ensure all attachments are securely fitted.

Tools Not Attaching/Detaching Smoothly

- Ensure the red release button is fully pressed when detaching.

- Align the tool correctly with the main unit until a click is heard when attaching.

SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model Name	Car+Boat Handheld Vacuum Cleaner
Model Number	586119-01
Special Feature	Cordless, Handheld, Lightweight, Portable, Up to 50 minutes of fade-free suction
Filter Type	Advanced
Included Components	Dyson Car+Boat Handheld Vacuum, charger, mini motorized tool, combination tool, crevice tool
Is Cordless?	Yes
Capacity	0.14 Gallons
Color	Silver
Product Dimensions	13"L x 5.2"W x 8.1"H
Battery Life	50 minutes
Number of Speeds	2
Item Weight	4.2 pounds
Power Source	Battery Powered
Surface Recommendation	Upholstery

WARRANTY AND SUPPORT

The Dyson Car+Boat Handheld Vacuum comes with a 2-year limited warranty. Register your machine on the MyDyson™ app for personalized machine guides, maintenance, and support. For further assistance, please contact Dyson customer support.